




Asus ROG Strix GL702VS LCD Screen (Display) Replacement

How to disassemble and remove the ASUS ROG STRIX GL 702VS screen.

Written By: Conor H Allen

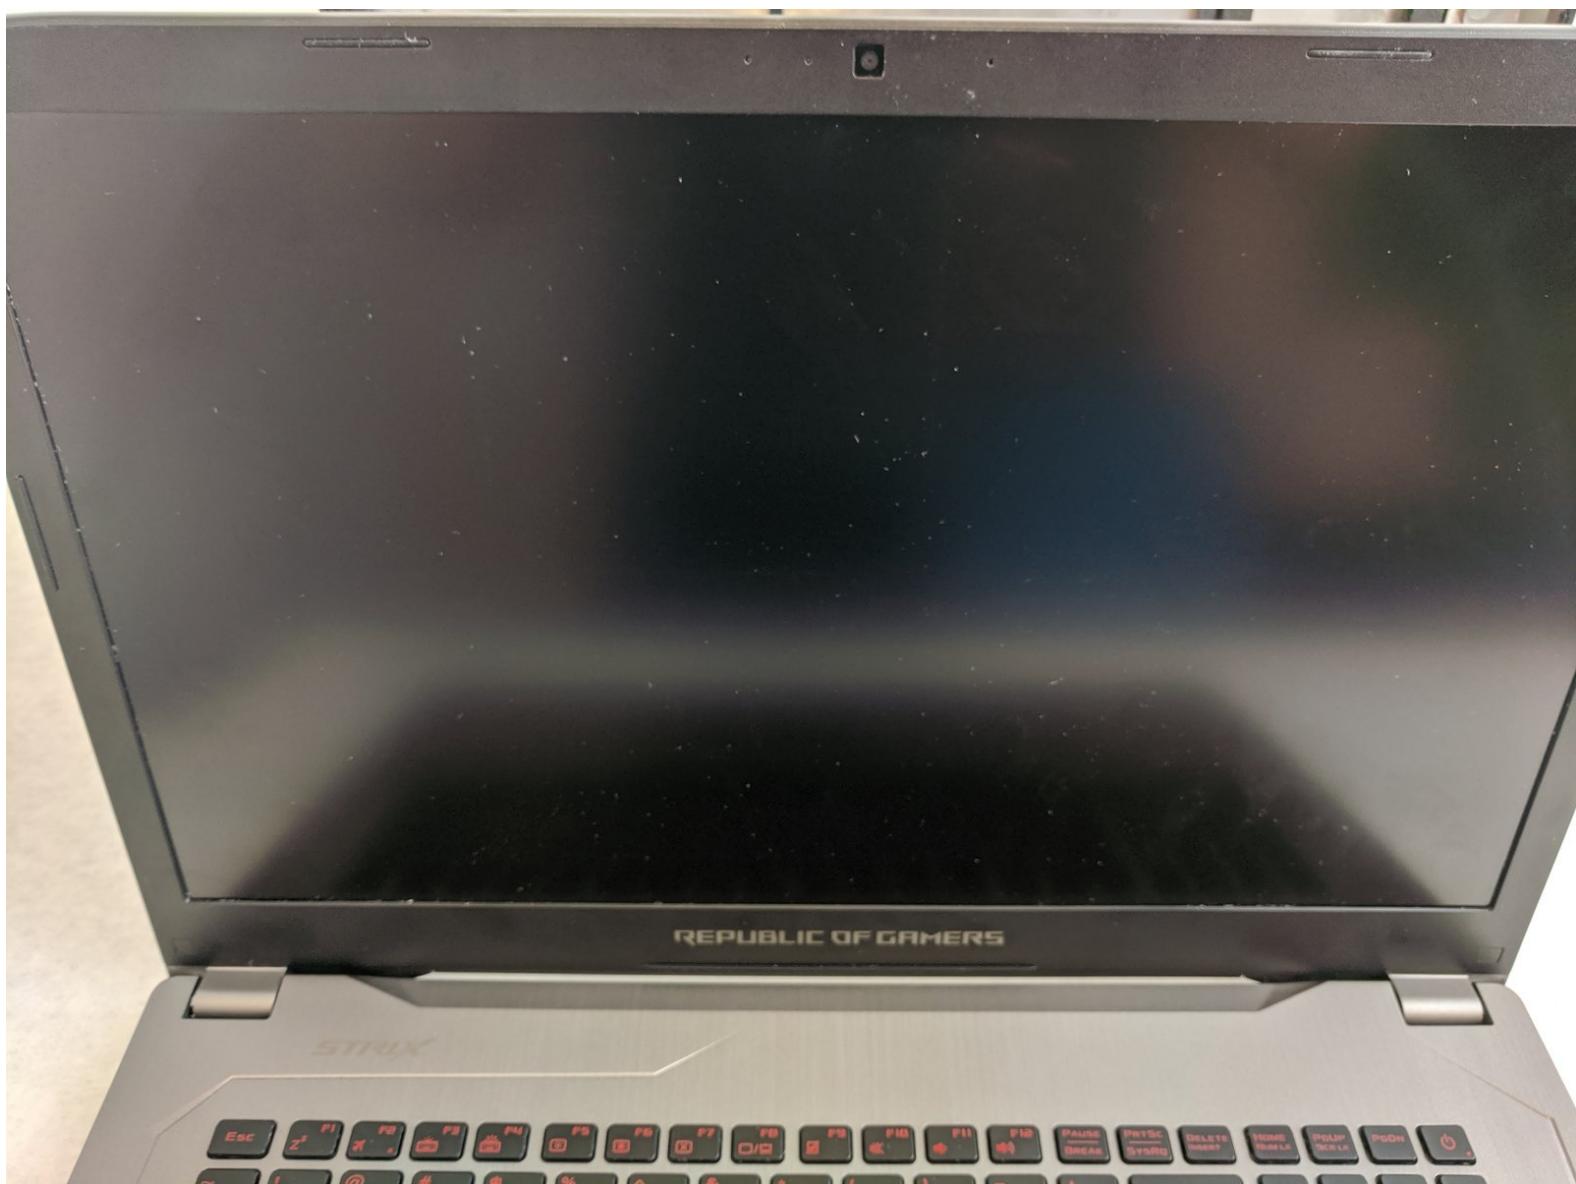

INTRODUCTION


This is a step by step process for the replacement or repair of the LCD screen on your Asus ROG Strix GL702VS laptop. If you are experiencing dead pixels or a cracked screen, follow these steps to remove the screen and replace it.

Before fully reassembling, try powering on the computer to ensure all cable connections are working.

TOOLS:


- [JIS #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — LCD Screen (Display)

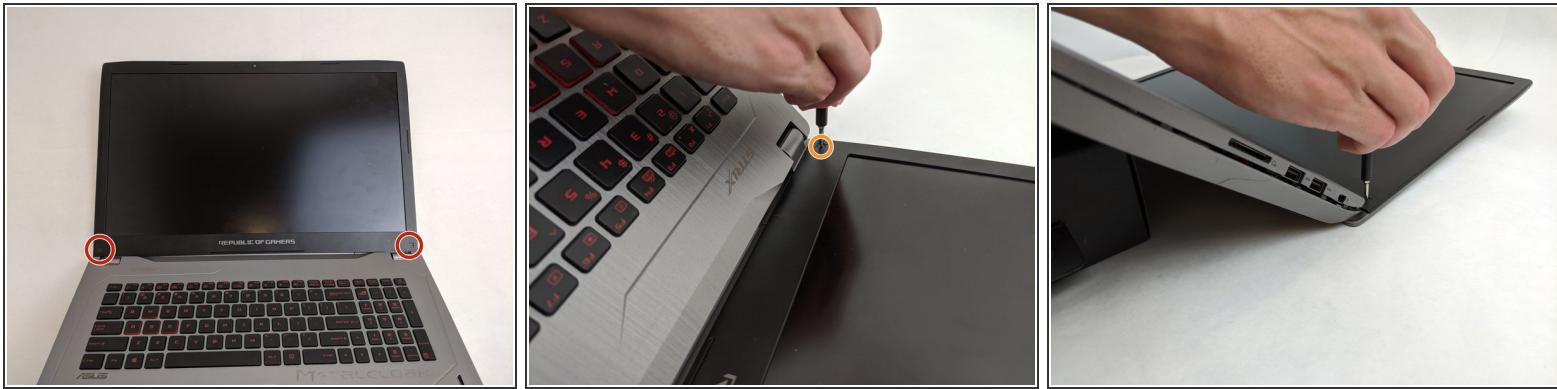

- Remove the two screw stickers at the bottom corners of the screen.
- Remove the two 4mm JIS #0 screws beneath the stickers.

Step 2

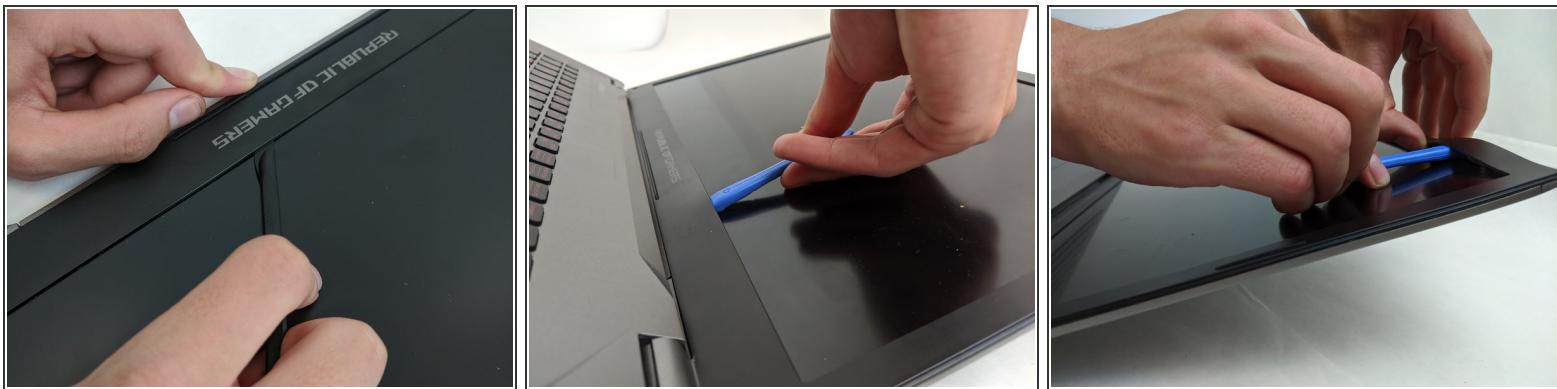

- Break the glue between the bezel and screen with a nylon spudger, working around the inside of the bezel.
- Using an opening tool, lift up the bezel once the glue has been removed.


(i) The plastic clips remain so it will have some resistance/snapping noises.

Step 3




- Lift the plastic bezel off of the front display panel.
- ☒ The plastic bezel will click when put back on the screen.

Step 4

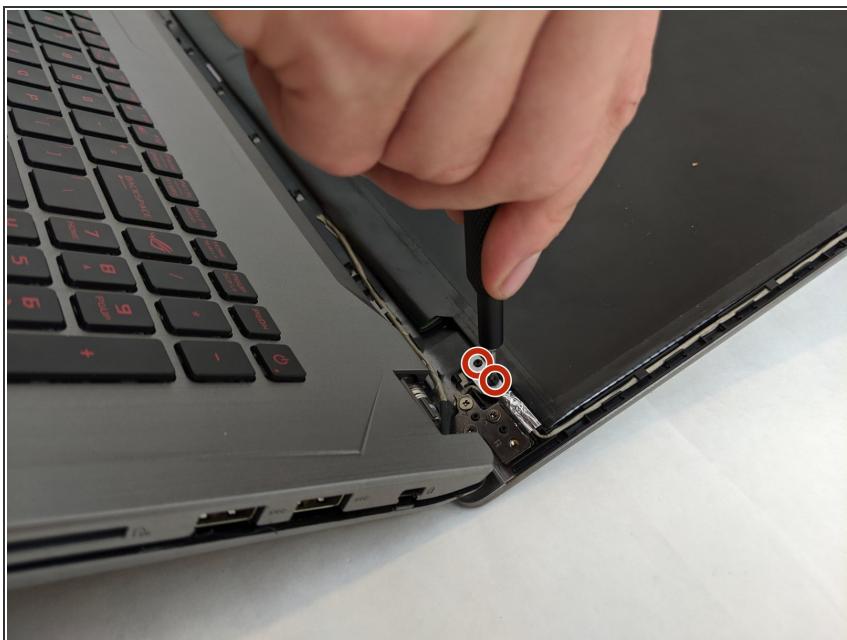

- Remove the four interior 4mm JIS #0 screws from each of the four metal LCD tabs.


Step 5

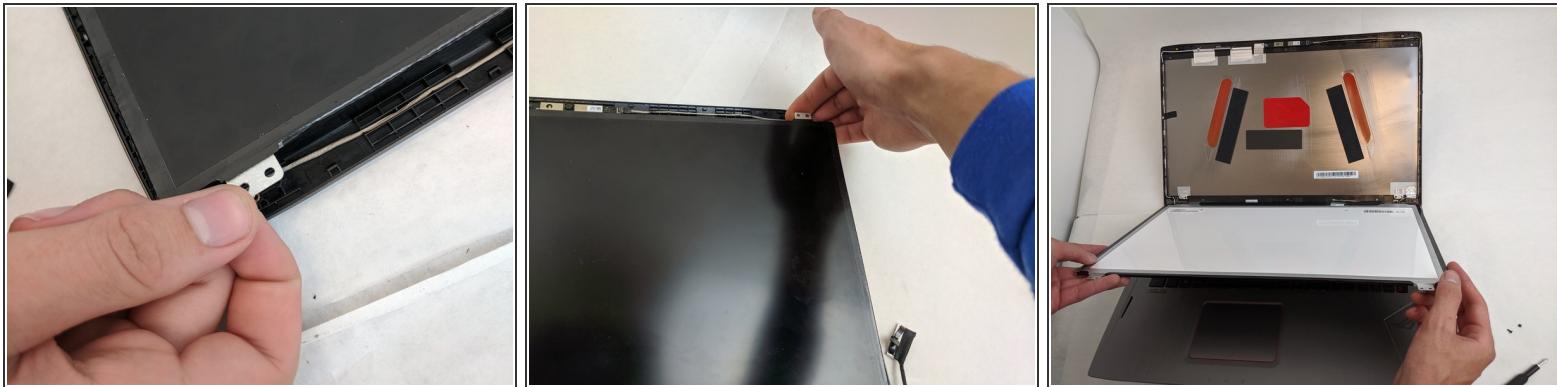

- Once the LCD display is freed you can lift it up out of the casing.

 Be careful as the cable remains attached.

Step 6

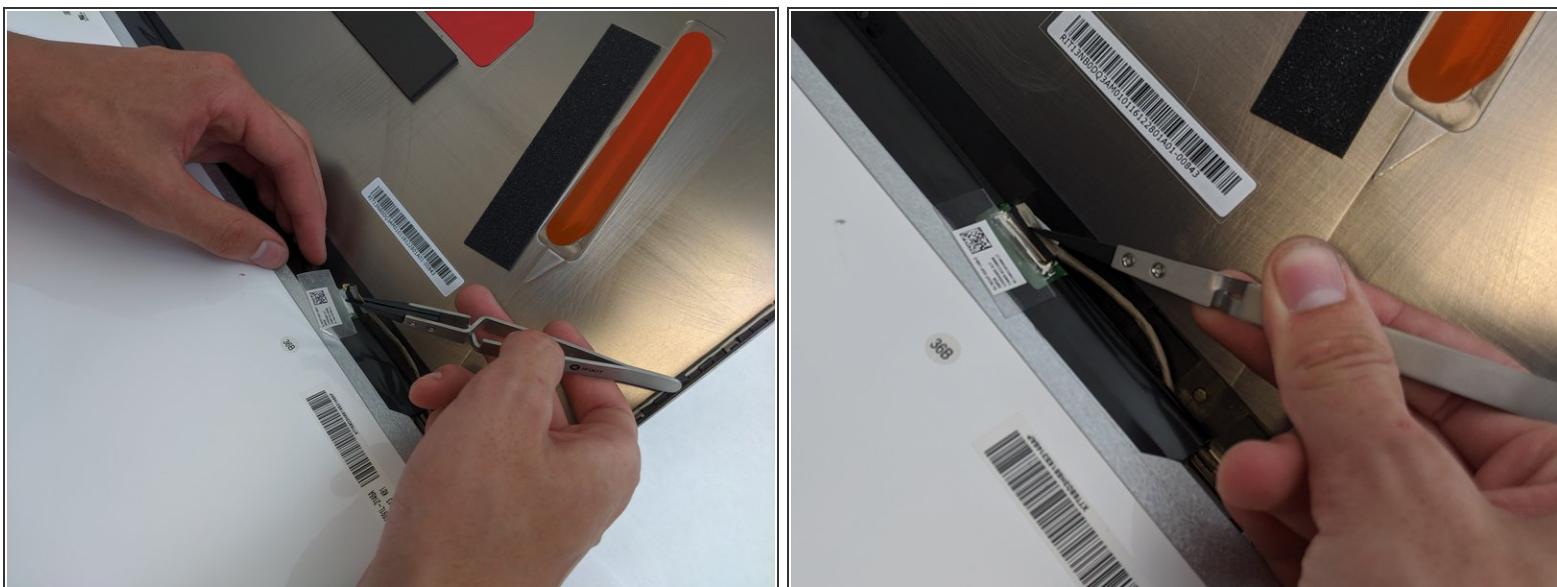

- On the backside of the LCD, disconnect the LCD cable using a pair of tweezers.
- Once fully disconnected, remove the LCD and replace it.

To reassemble your device, follow these instructions in reverse order.