




Asus ROG Strix GL702VS Speaker Replacement

How to remove the speakers in the ASUS ROG STRIX GL702VS.

Written By: Conor H Allen

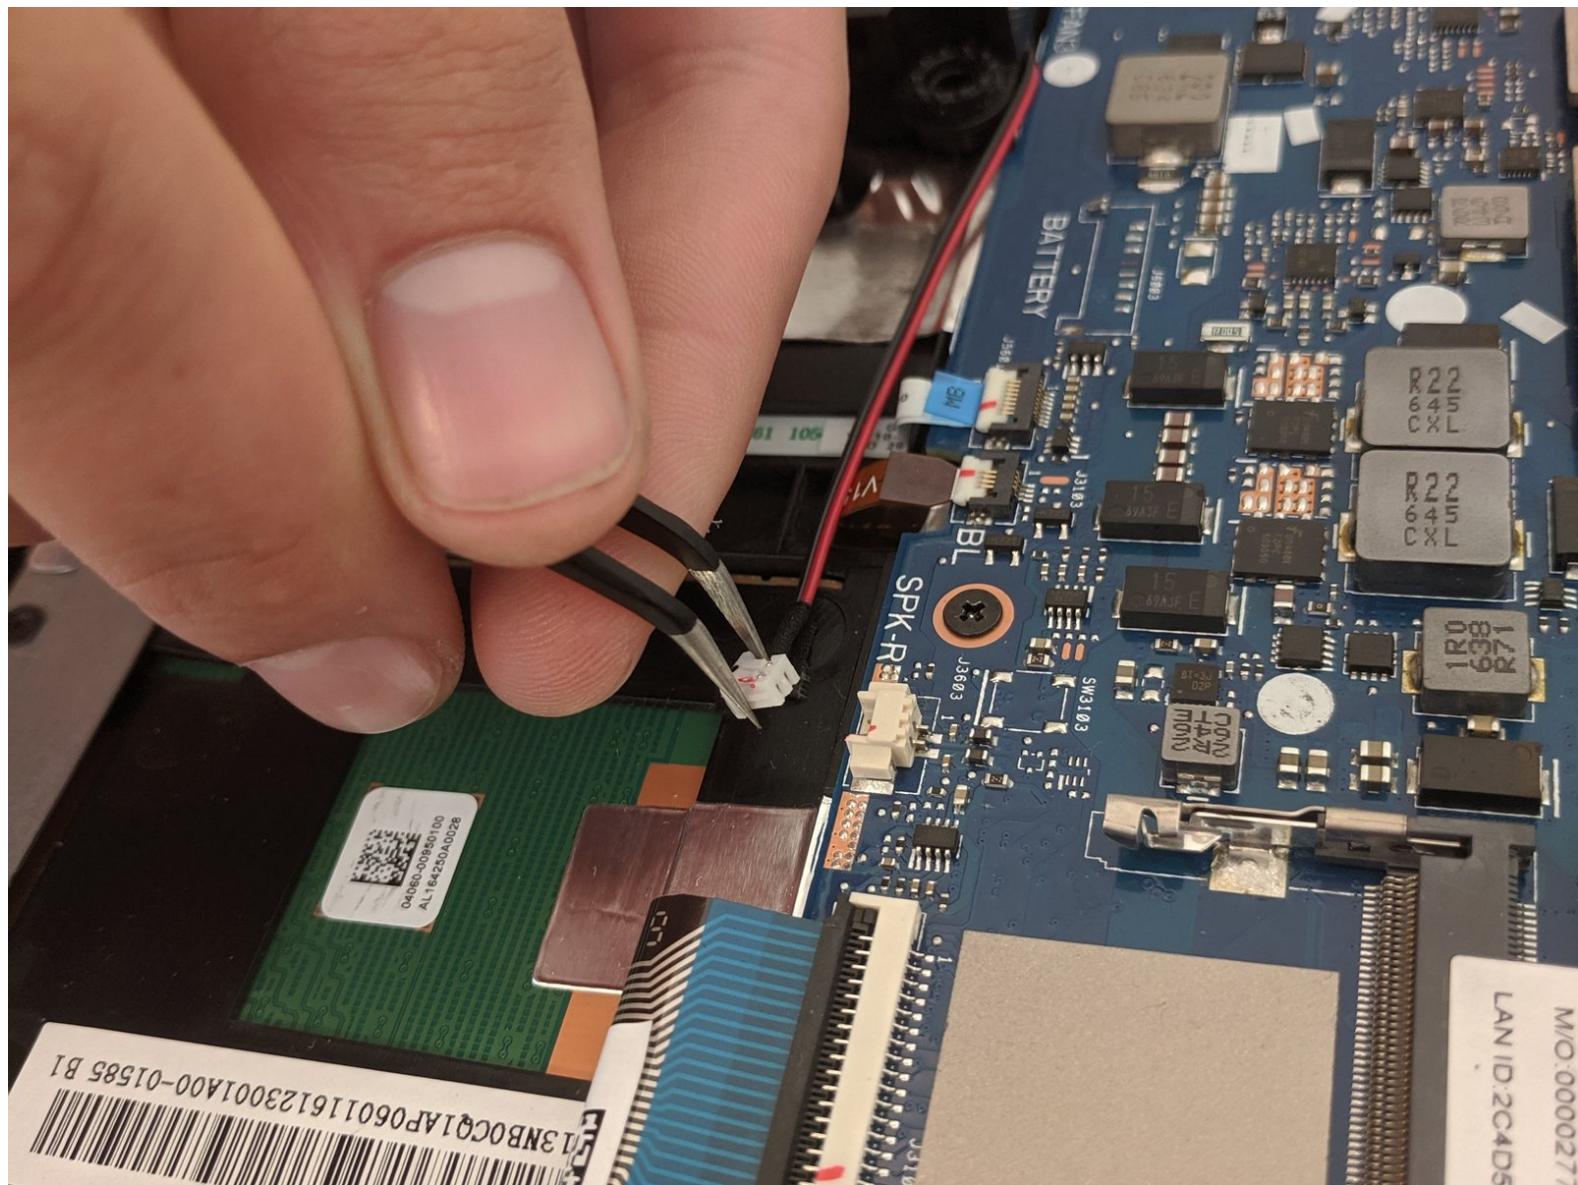

INTRODUCTION

This step by step guide will walk you through removing your Asus ROG Strix GL702VS gaming laptop speakers for replacement or maintenance. If you are experiencing speaker outages or buzzing speakers, follow this guide for speaker replacement or repair.

TOOLS:


- [Jimmy](#) (1)
- [JIS #0 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Back Cover



- Flip the computer so the bottom of the laptop is facing up.

Step 2

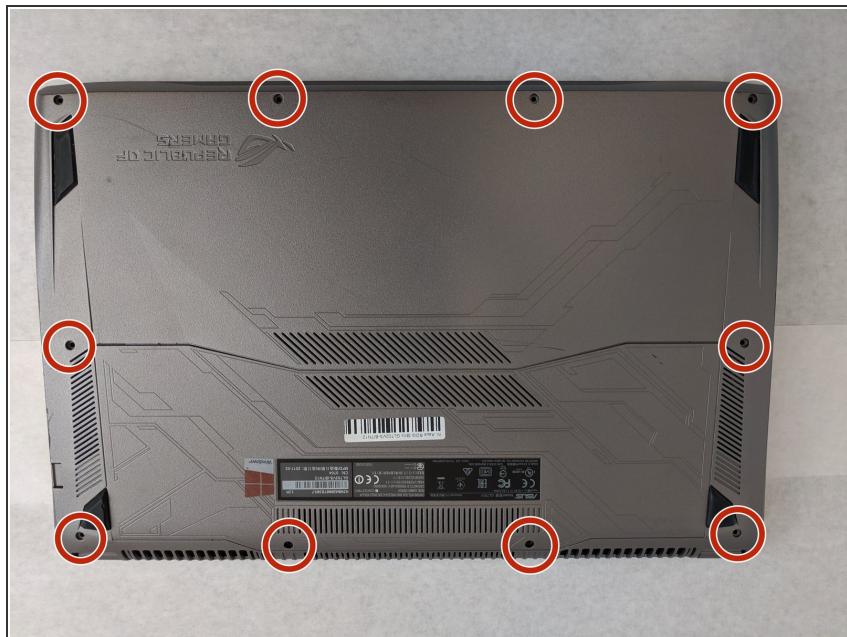

- Remove the ten JIS #0 screws around the edge of the laptop.

Step 3



- Use a Jimmy to carefully free each side of the bottom casing.


Step 4



- Lift up the back casing from the computer.

(i) You may hear clicking or snapping sounds. This is just the plastic clips coming loose.

Step 5 — Speaker

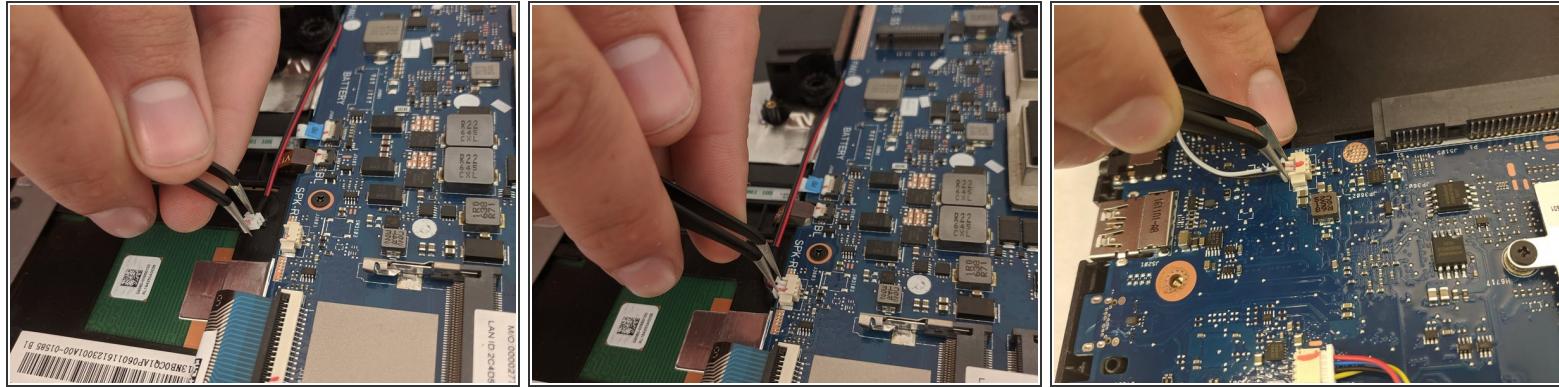

- Disconnect the two sets of speaker connectors using a pair of tweezers.

Step 6



- Gently remove the speakers by lifting up.

To reassemble your device, follow these instructions in reverse order.