



# Asus TUF Gaming FX705G Battery Replacement

This guide will show you how to remove and replace the battery on an ASUS TUF Gaming FX705G.

Written By: Tyler Lange



## INTRODUCTION



There are various reasons one would need to replace the battery in their Asus TUF Gaming FX705G.

Before starting the process of replacing your battery, see the laptop's owners manual for health hazards, to ensure safety during replacement. You may also want to check the battery for any cracks.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover

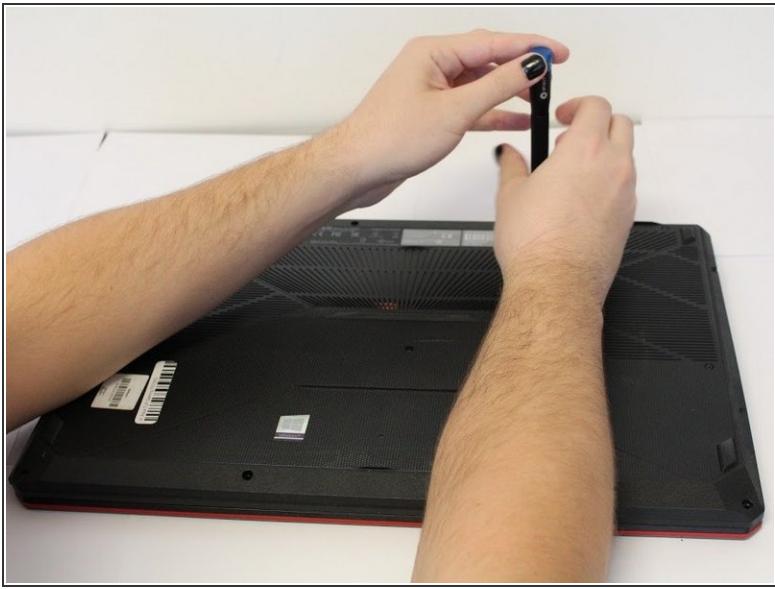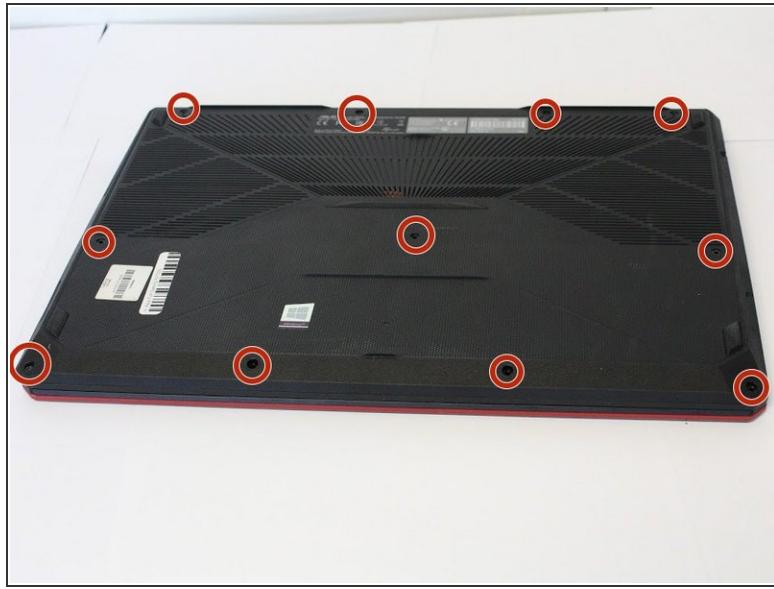



- Remove the eleven Phillips #0 screws that secure the back cover.

## Step 2




- Use the iFixit opening tool to lift the back cover's seam, then insert the spudger parallel to the back cover and lift gently upward.
- You will hear pops as the back cover releases.

## Step 3 — Battery

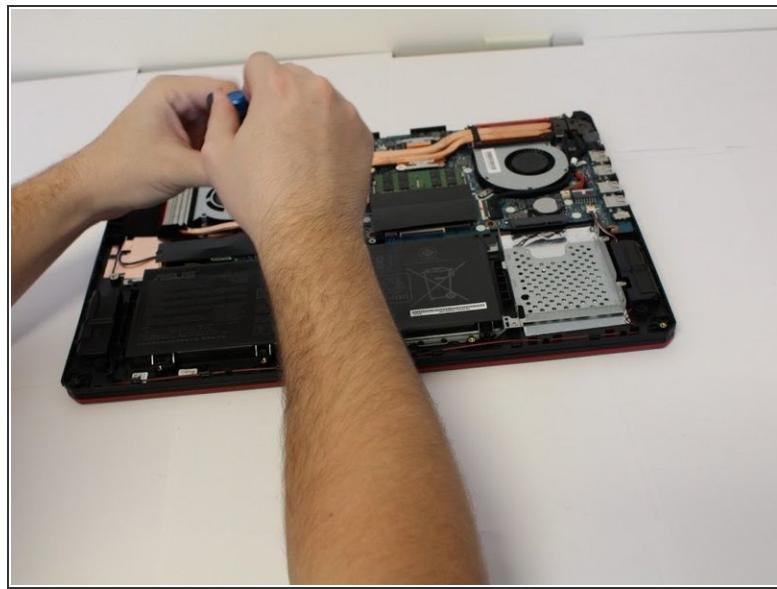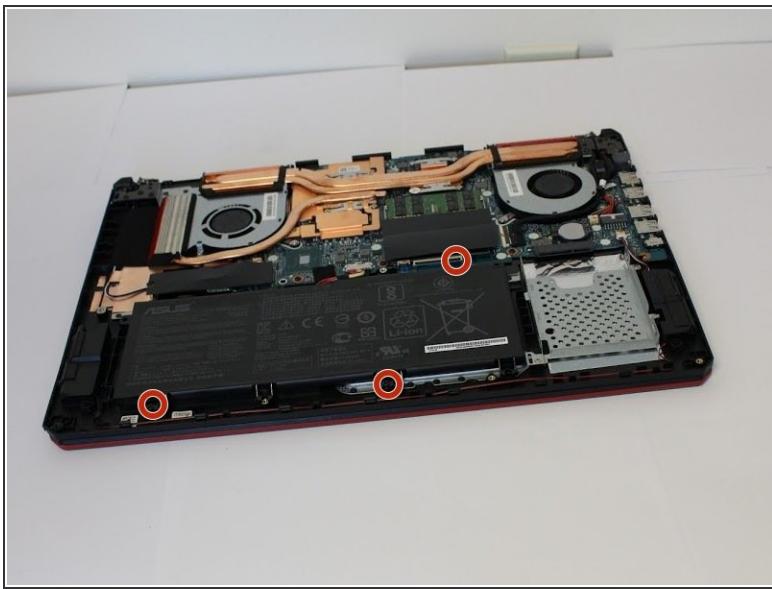

- Remove the three Phillips #00 screws from the battery housing.

## Step 4

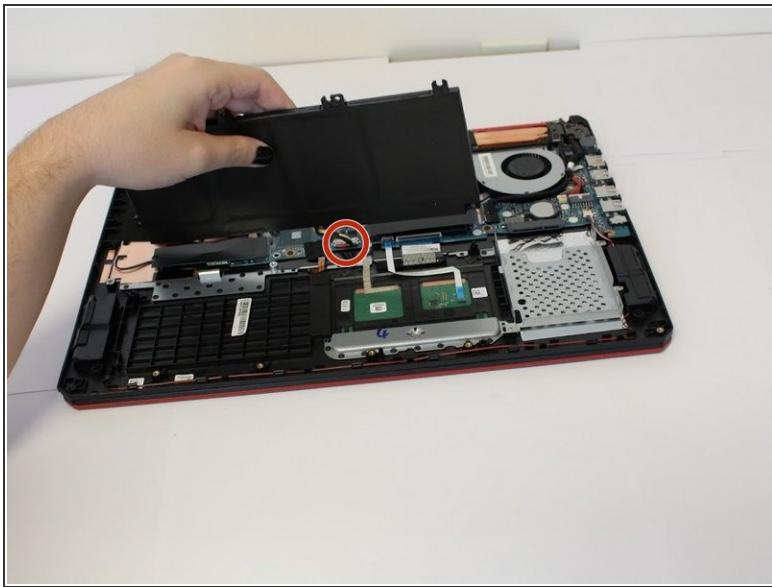

- Disconnect the wire from the motherboard, and lift the battery from its housing.

To reassemble your device, follow these instructions in reverse order.