




# Asus Transformer Pad Infinity Battery Replacement

This guide will demonstrate how to replace the battery of the device.

Written By: Allison Poh

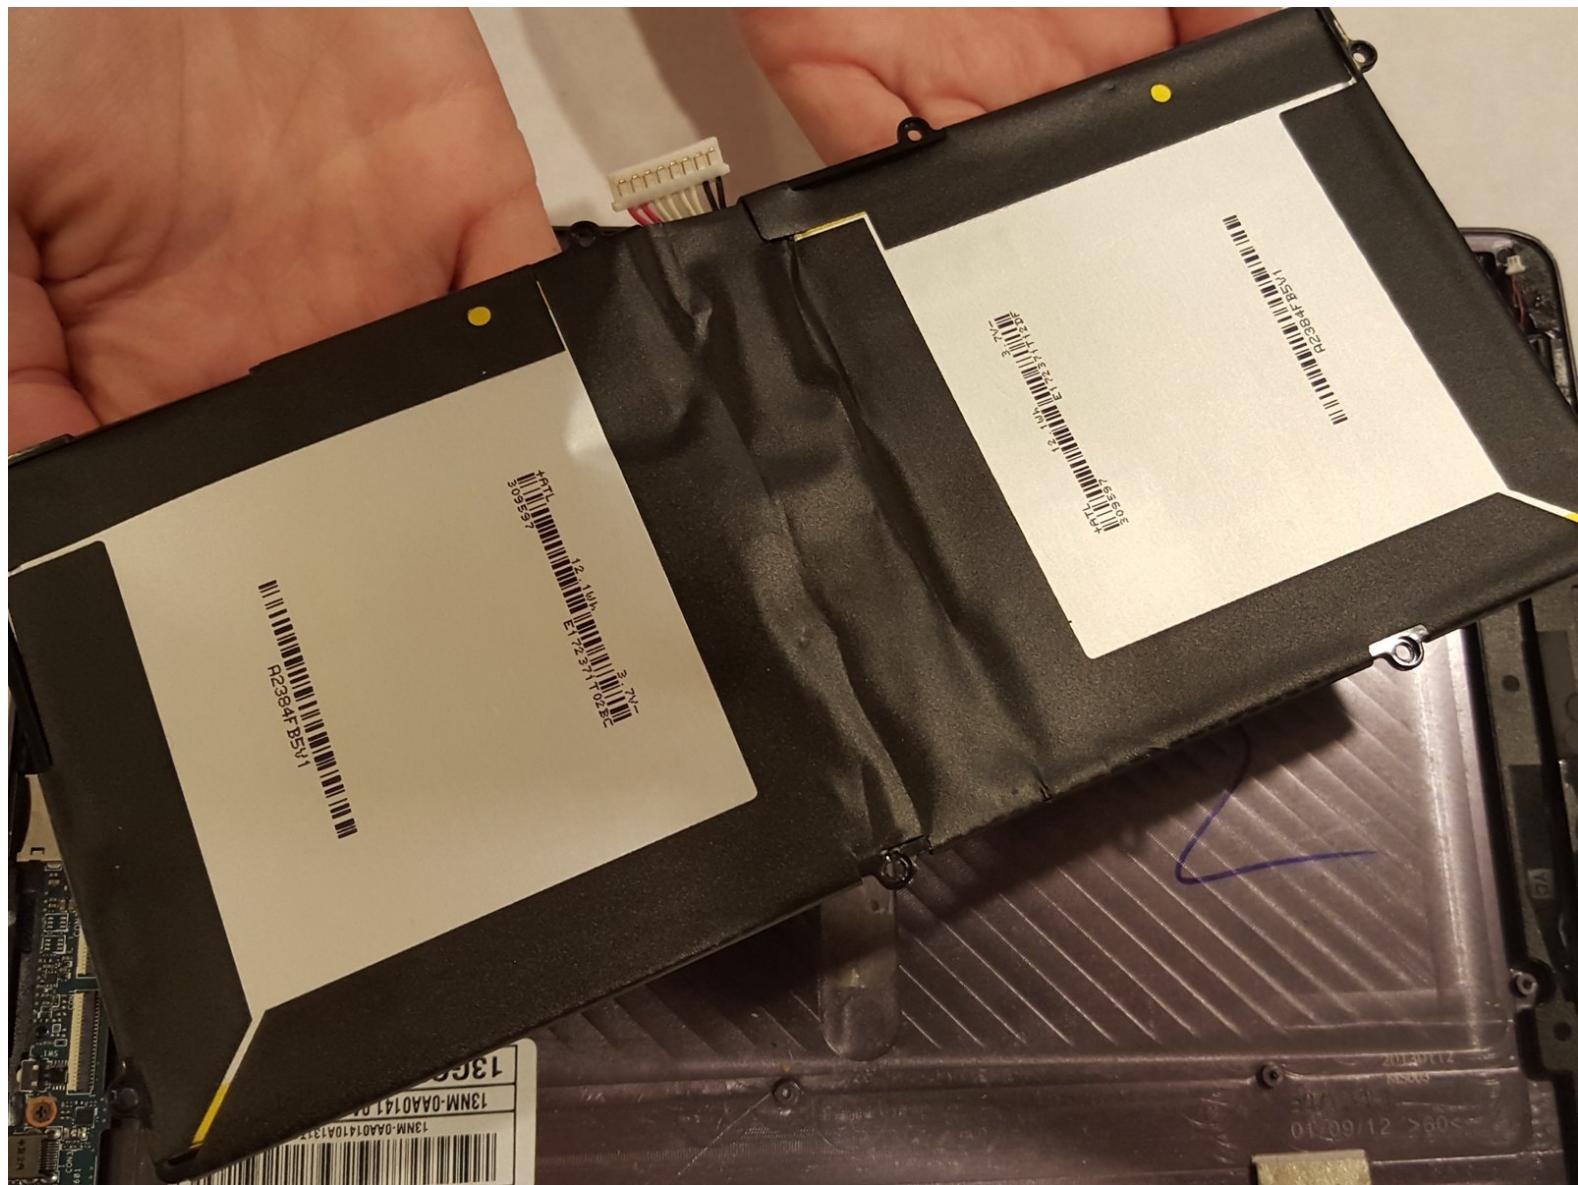

## INTRODUCTION

Replacing the battery involves opening up the device. Prerequisites; follow the [Asus Transformer Pad Infinity Teardown](#) link up to step 6 to remove the screen.


### TOOLS:

- Phillips #000 Screwdriver (1)
- Tweezers - Pro/ESD/Angled (1)
- Spudger Plastic opening tool screwdriver (1)
- Anti-Static Wrist Strap (1)  
*optional*

### PARTS:


- ASUS Transformer Pad Infinity (TF700T) Battery (1)

## Step 1 — Battery

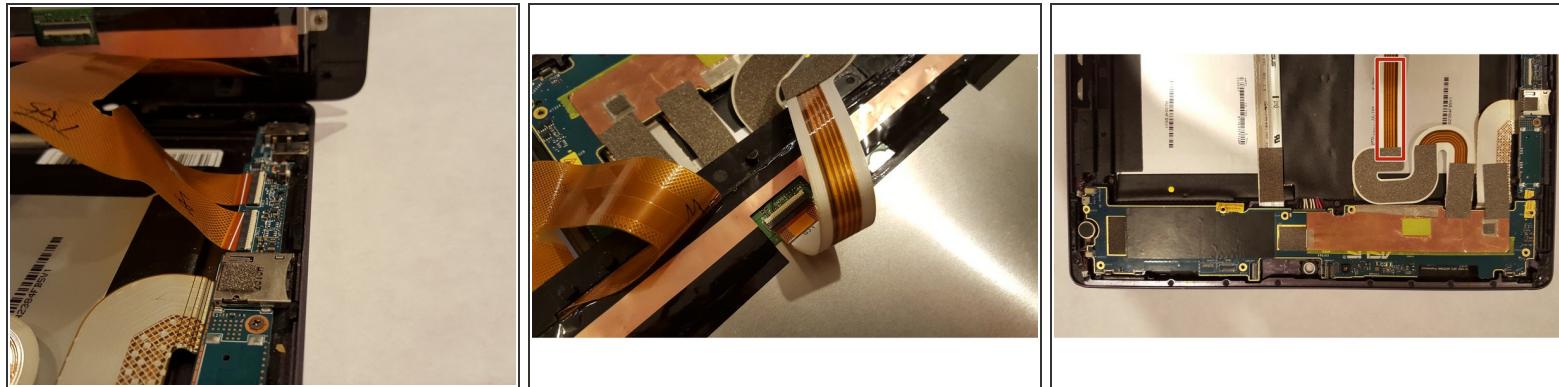


- Disconnect the long silver ribbon connector from the screen.
- Remove the orange ribbon connector with the two connections.

## Step 2

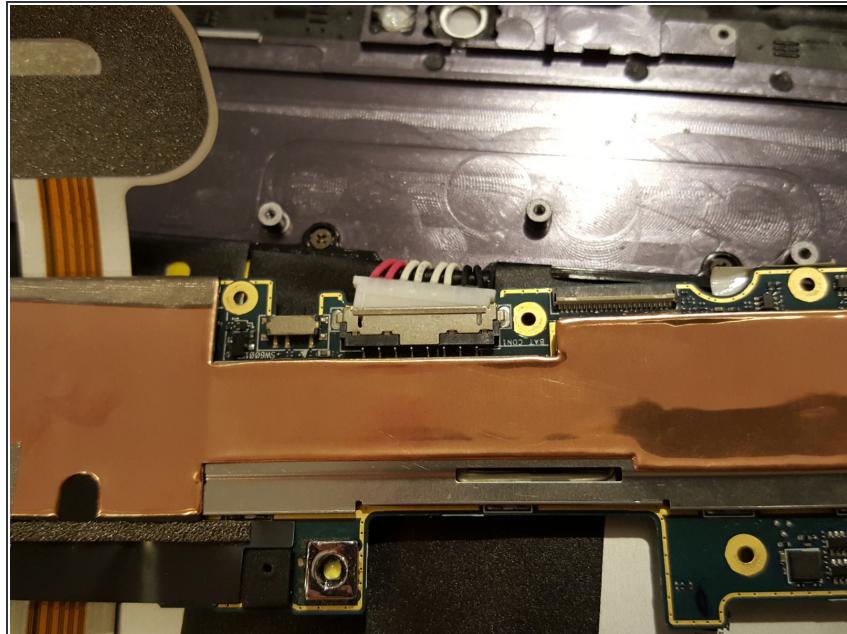


- Disconnect the battery from the big motherboard.

## Step 3

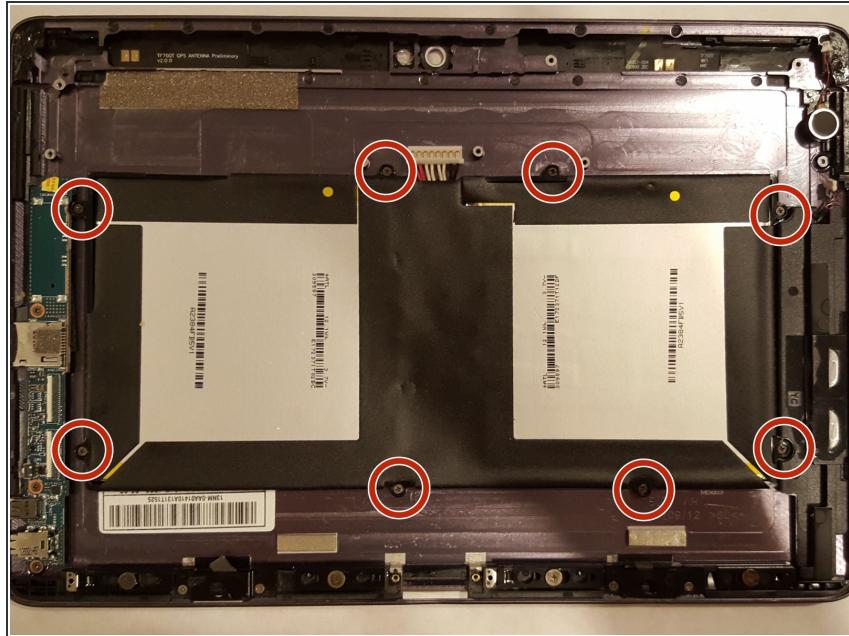

- Unscrew all eight screws connecting the battery to the case.
- Remove the battery.

## Step 4

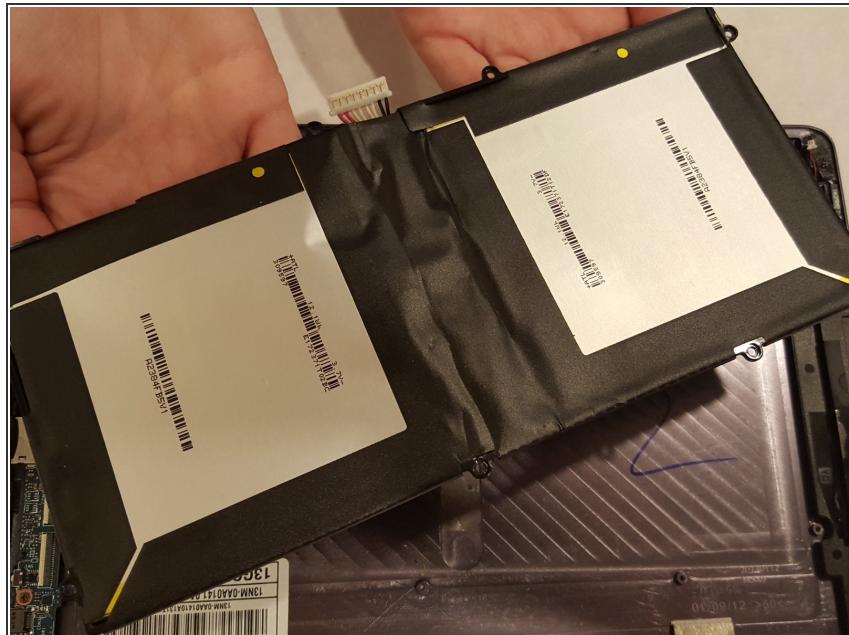

- Place the new battery in the same spot as the old battery.
- Screw the eight screws back in place to connect the new battery to the case.

To reassemble your device, follow these instructions in reverse order.