



Asus U47VC-DS51 Hard Drive Replacement

Replace the hard drive in your Asus U47VC in order to get more memory space for your laptop.

Written By: Murphy Villegas




INTRODUCTION

Replace the hard drive in your Asus U47VC in order to get more memory space for your laptop.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)

Step 1 — Hard Drive

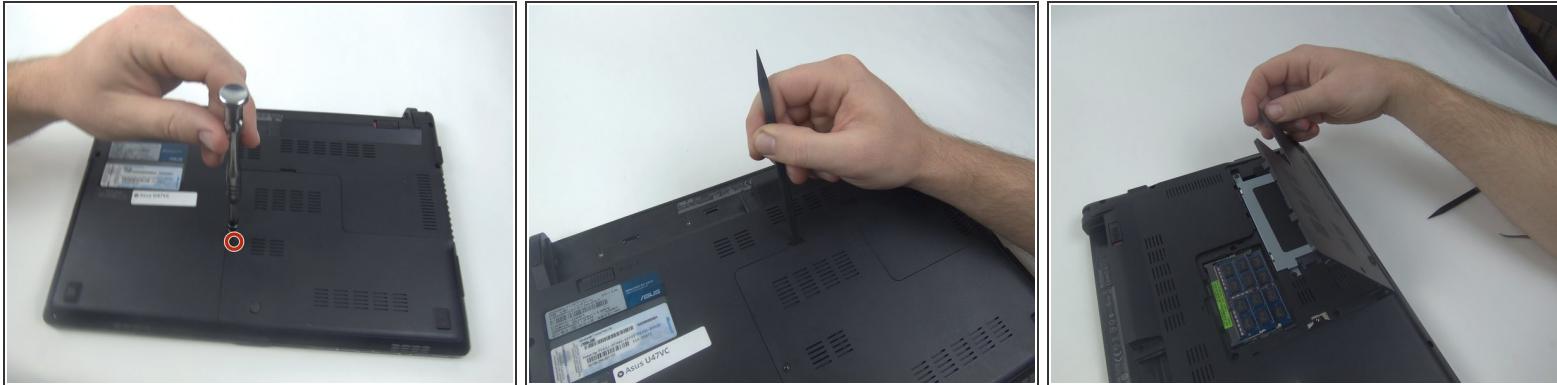

- Remove the hard drive cover.
 - Unscrew one 8mm Phillips #00 screw.
 - Using the black spudger, insert its flat end under the hard drive's covering, working around to pry it off.

Step 2



- Remove the hard drive.
 - Unscrew the four 3mm Phillips #00 screws.
 - Pull the hard drive's black tab away from the laptop to free it.

To reassemble your device, follow these instructions in reverse order.