


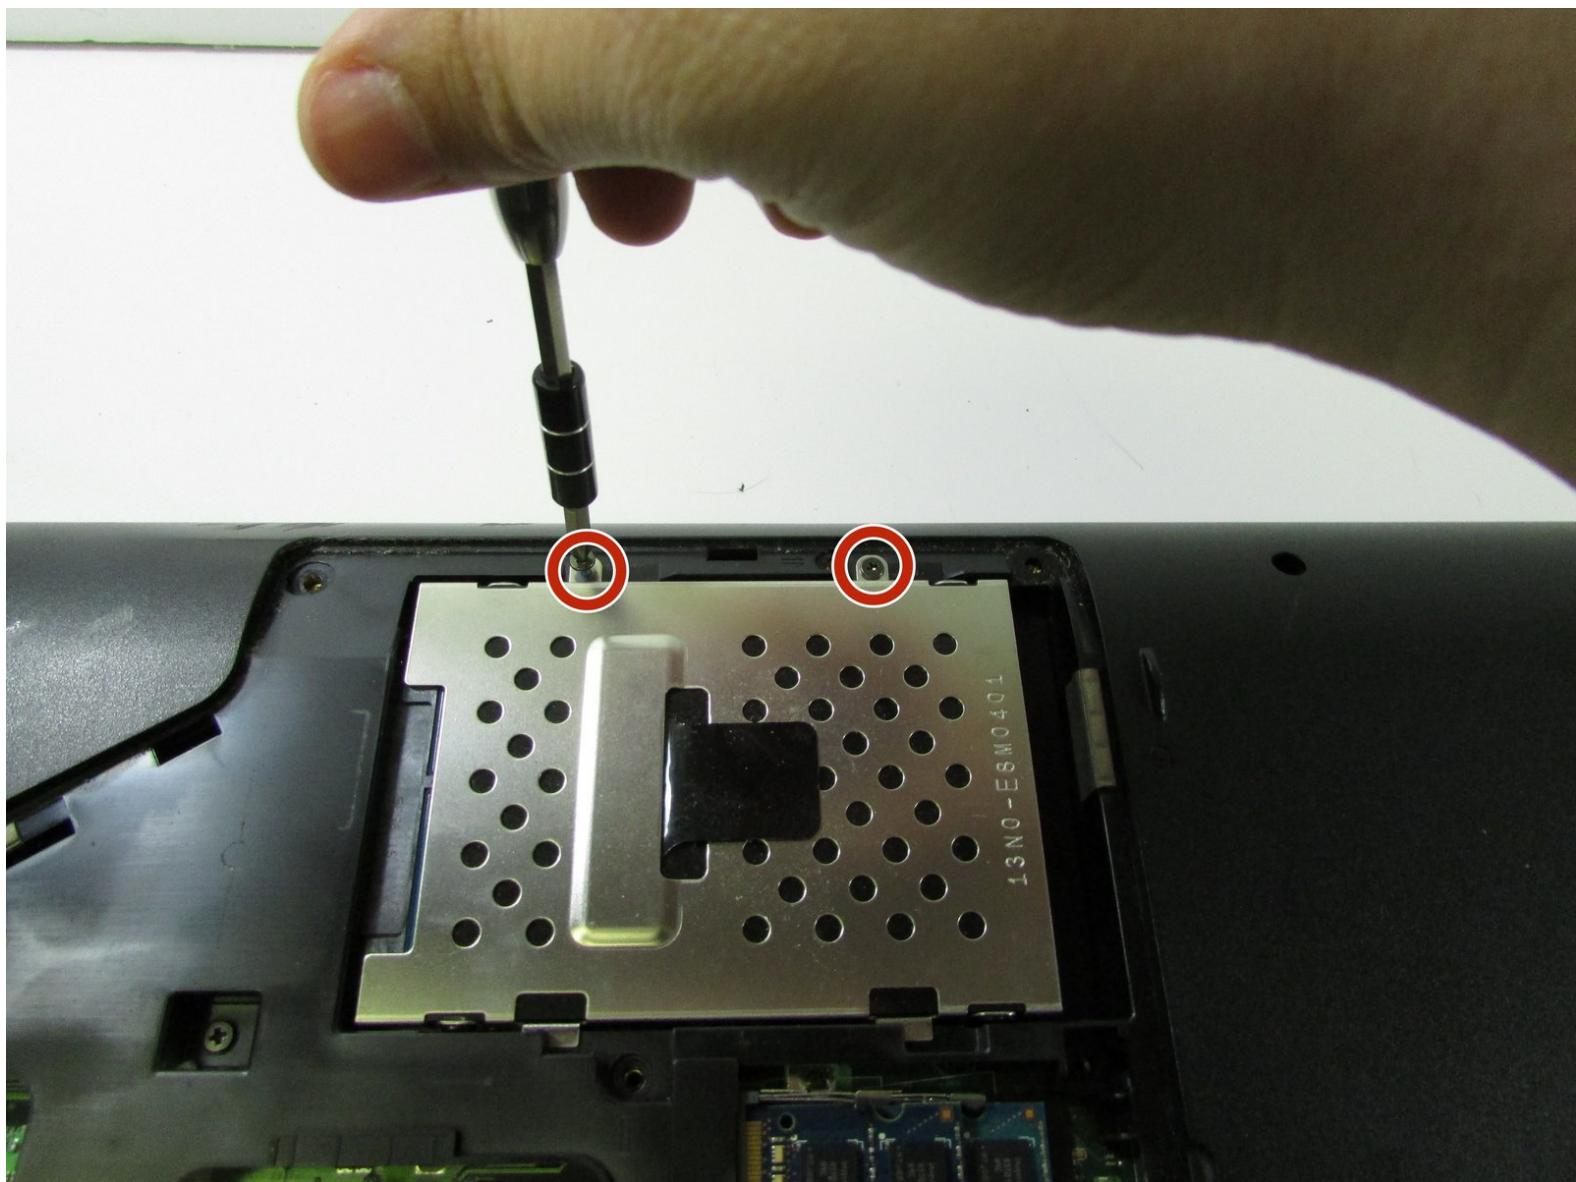

Asus U50F-RBBAG05 Hard Drive Replacement

This guide is for the removal/replacement of the Asus U50F-RBBAG05 Hard Drive.

Written By: Kelly Greeling




INTRODUCTION

We are going to teach you how to remove/replace the Hard Drive of your Asus U50F-RBBAG05.

TOOLS:

- [Phillips Head Screwdriver: Size PH1 \(1\)](#)
- [Spudger \(1\)](#)
- [dry erase marker \(1\)](#)
- [Magnetic Project Mat \(1\)](#)

Step 1 — Battery

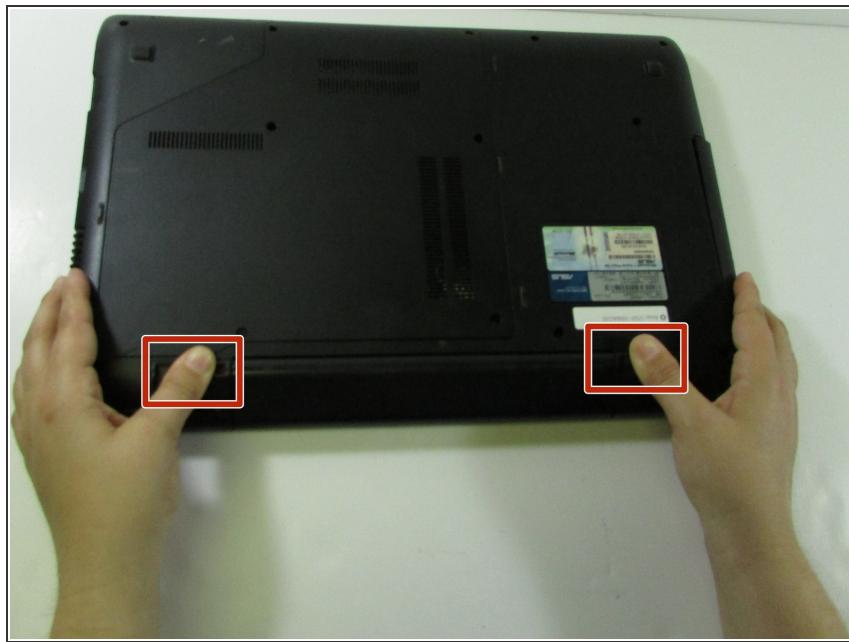


- Turn the laptop over so the bottom is facing up.
 - Slide the tabs on either side of the battery away from the battery, toward the edges of the laptop.
 - Slide the left tab to the left to lock it into the unlocked position. Red showing next to the tab signifies that it's unlocked.
- (i)* You will have to hold the right tab to the right to keep it unlocked while removing the battery.

Step 2



- Hold down the tab on the right while sliding the battery out.
- Remove the battery.

Step 3 — Underpanel

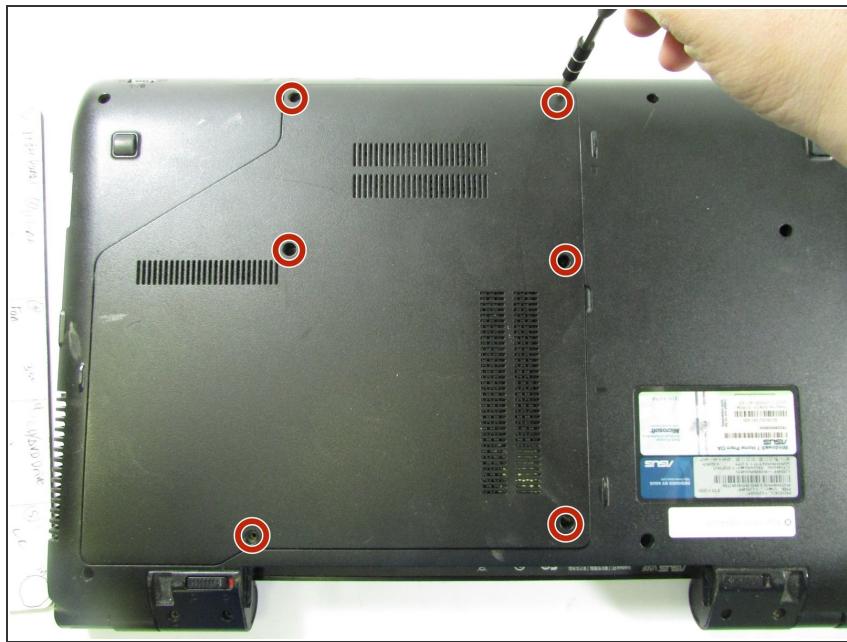


- Remove 6 screws

Step 4




- Pry the lower panel up with your fingernail/spudger.

Step 5

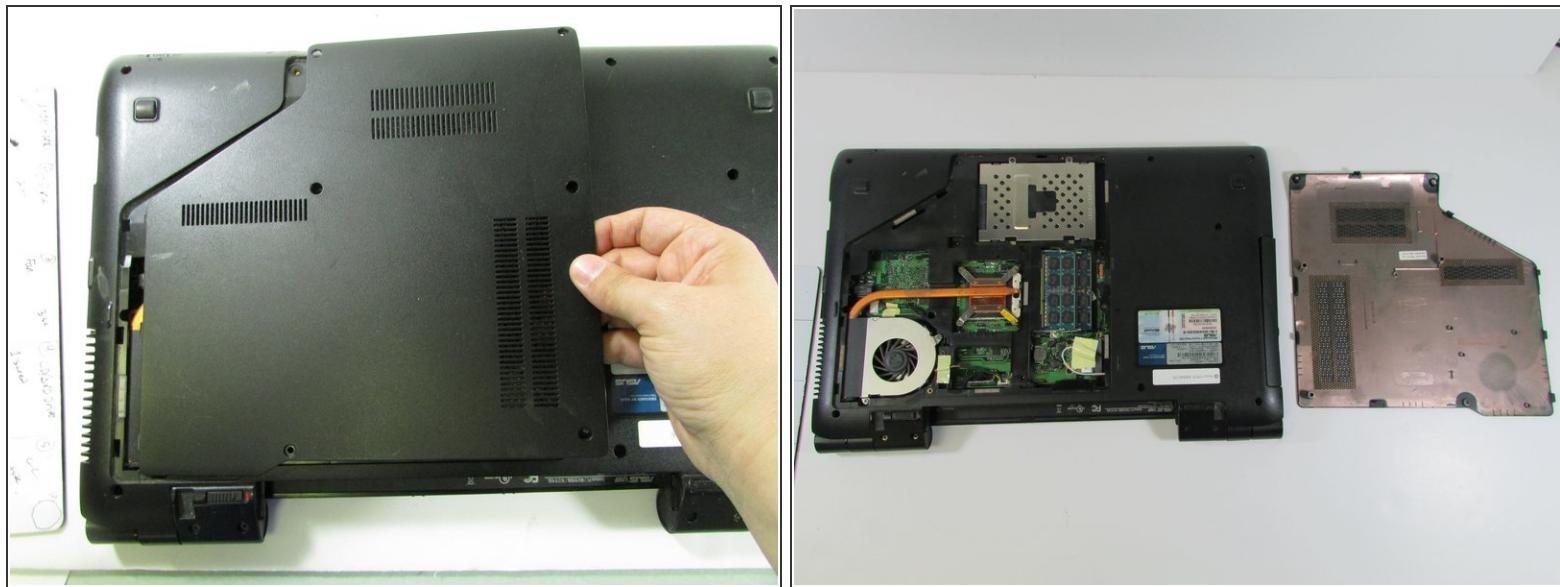



- Lift up and remove

Step 6 — Hard Drive

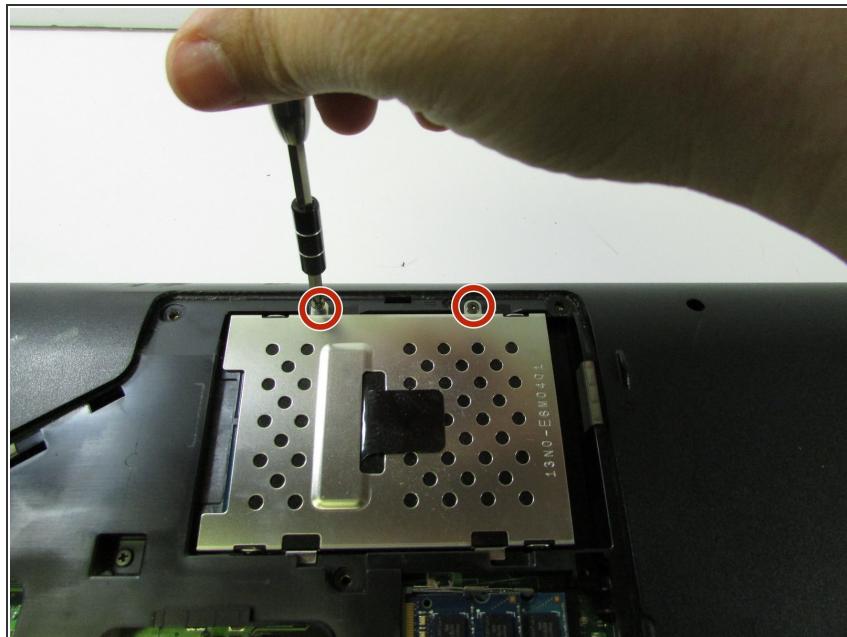


- Remove 2 screws

Step 7

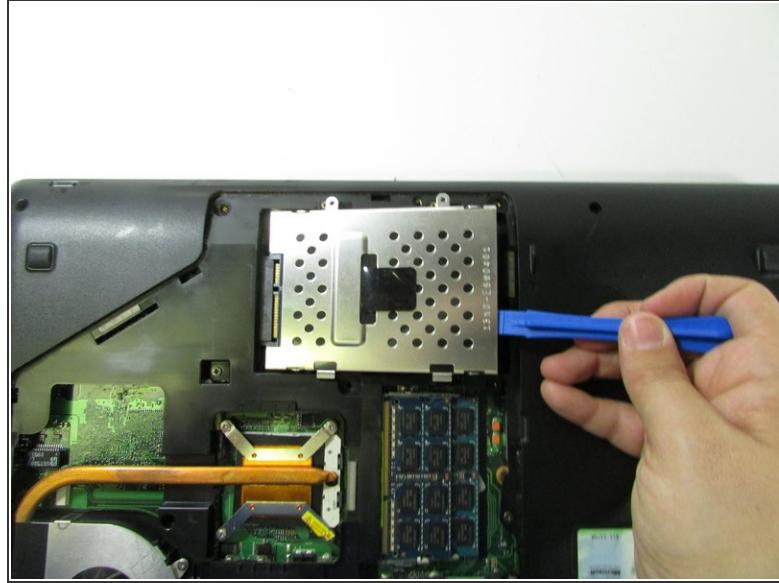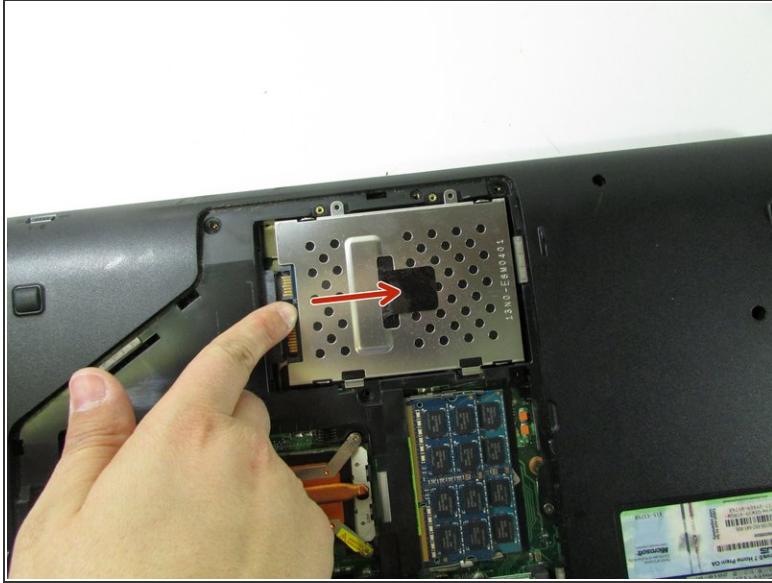

- Push back the hard drive
- Pry up with spudger (or fingernail)

Step 8

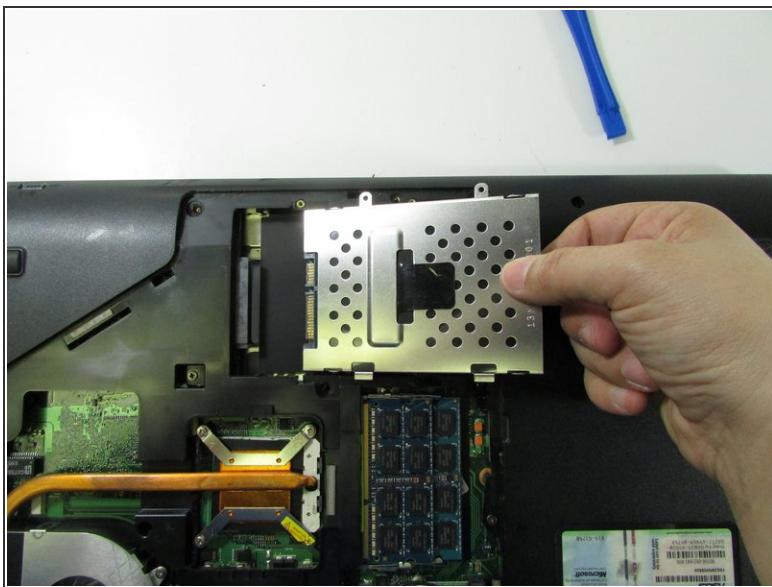

- Pull back and up
- Remove completely

This document was generated on 2019-10-20 01:25:50 PM (MST).

To reassemble your device, follow these instructions in reverse order.