



# Asus U50F-RBBAG05 Keyboard Replacement

This guide will show you how to remove/replace the keyboard of your Asus U50F-RBBAG05

Written By: Kelly Greeling




## INTRODUCTION

We are going to teach you how to remove/replace the Keyboard of your Asus U50F-RBBAG05.

### TOOLS:

- [Jimmy](#) (1)
- [iSesamo Opening Tool](#) (1)

## Step 1 — Battery

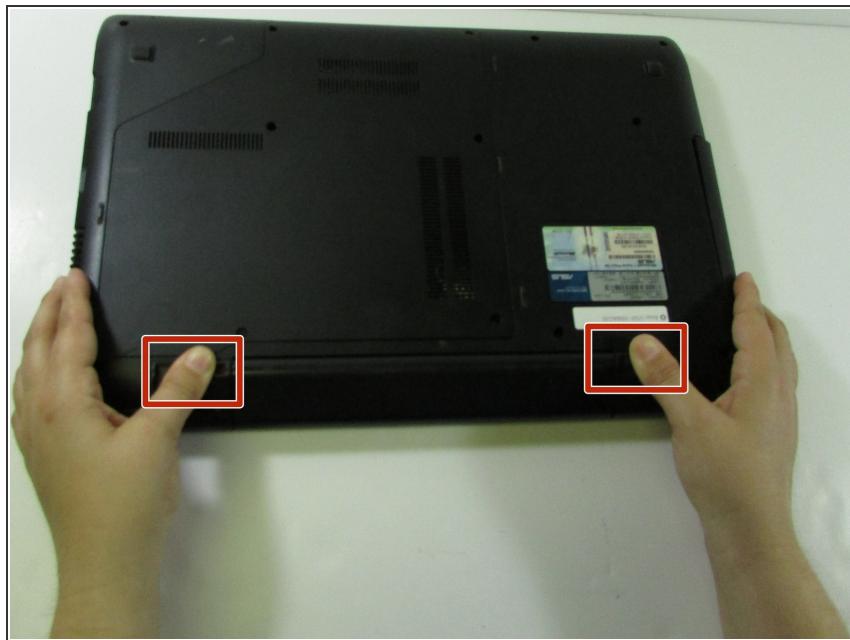

- Turn the laptop over so the bottom is facing up.
- Slide the tabs on either side of the battery away from the battery, toward the edges of the laptop.
- Slide the left tab to the left to lock it into the unlocked position. Red showing next to the tab signifies that it's unlocked.

*(i)* You will have to hold the right tab to the right to keep it unlocked while removing the battery.

## Step 2



- Hold down the tab on the right while sliding the battery out.
- Remove the battery.

## Step 3 — Keyboard





- Insert one of the pry tools under a top corner and the other tool under the side of the top corner (make sure to get under the metal of the keyboard, not just the first layer of plastic). Then pry the corner down and out from under the little overhang its sitting under.
- Next, slide the pry tool on the top over to the next overhang and insert the second tool on the other side. Push down and pry out the keyboard.
- Repeat all the way down to the opposite corner.

## Step 4



- Once the keyboard is free, lift it up slightly and release the cable connection underneath.

## Step 5

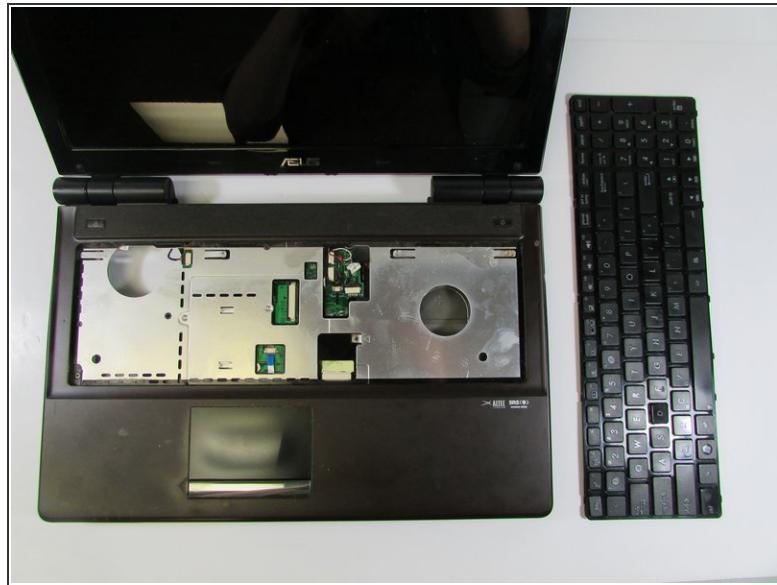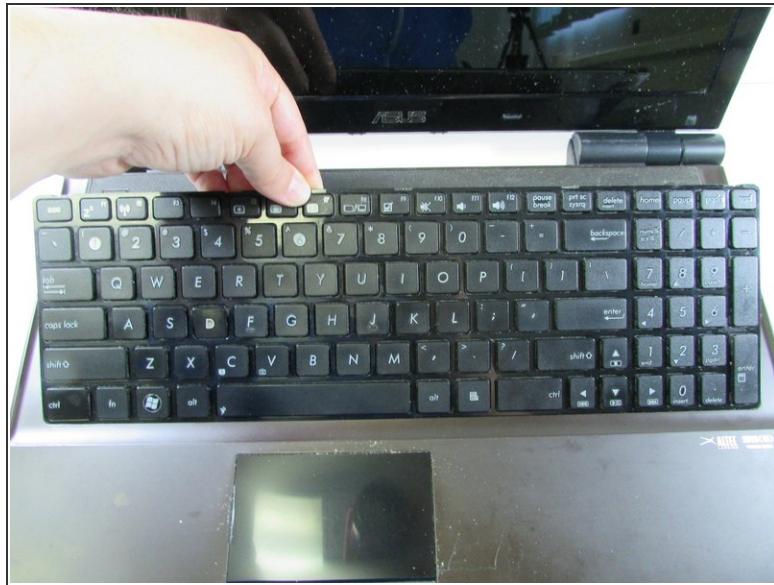

- Remove the keyboard completely.

To reassemble your device, follow these instructions in reverse order.