


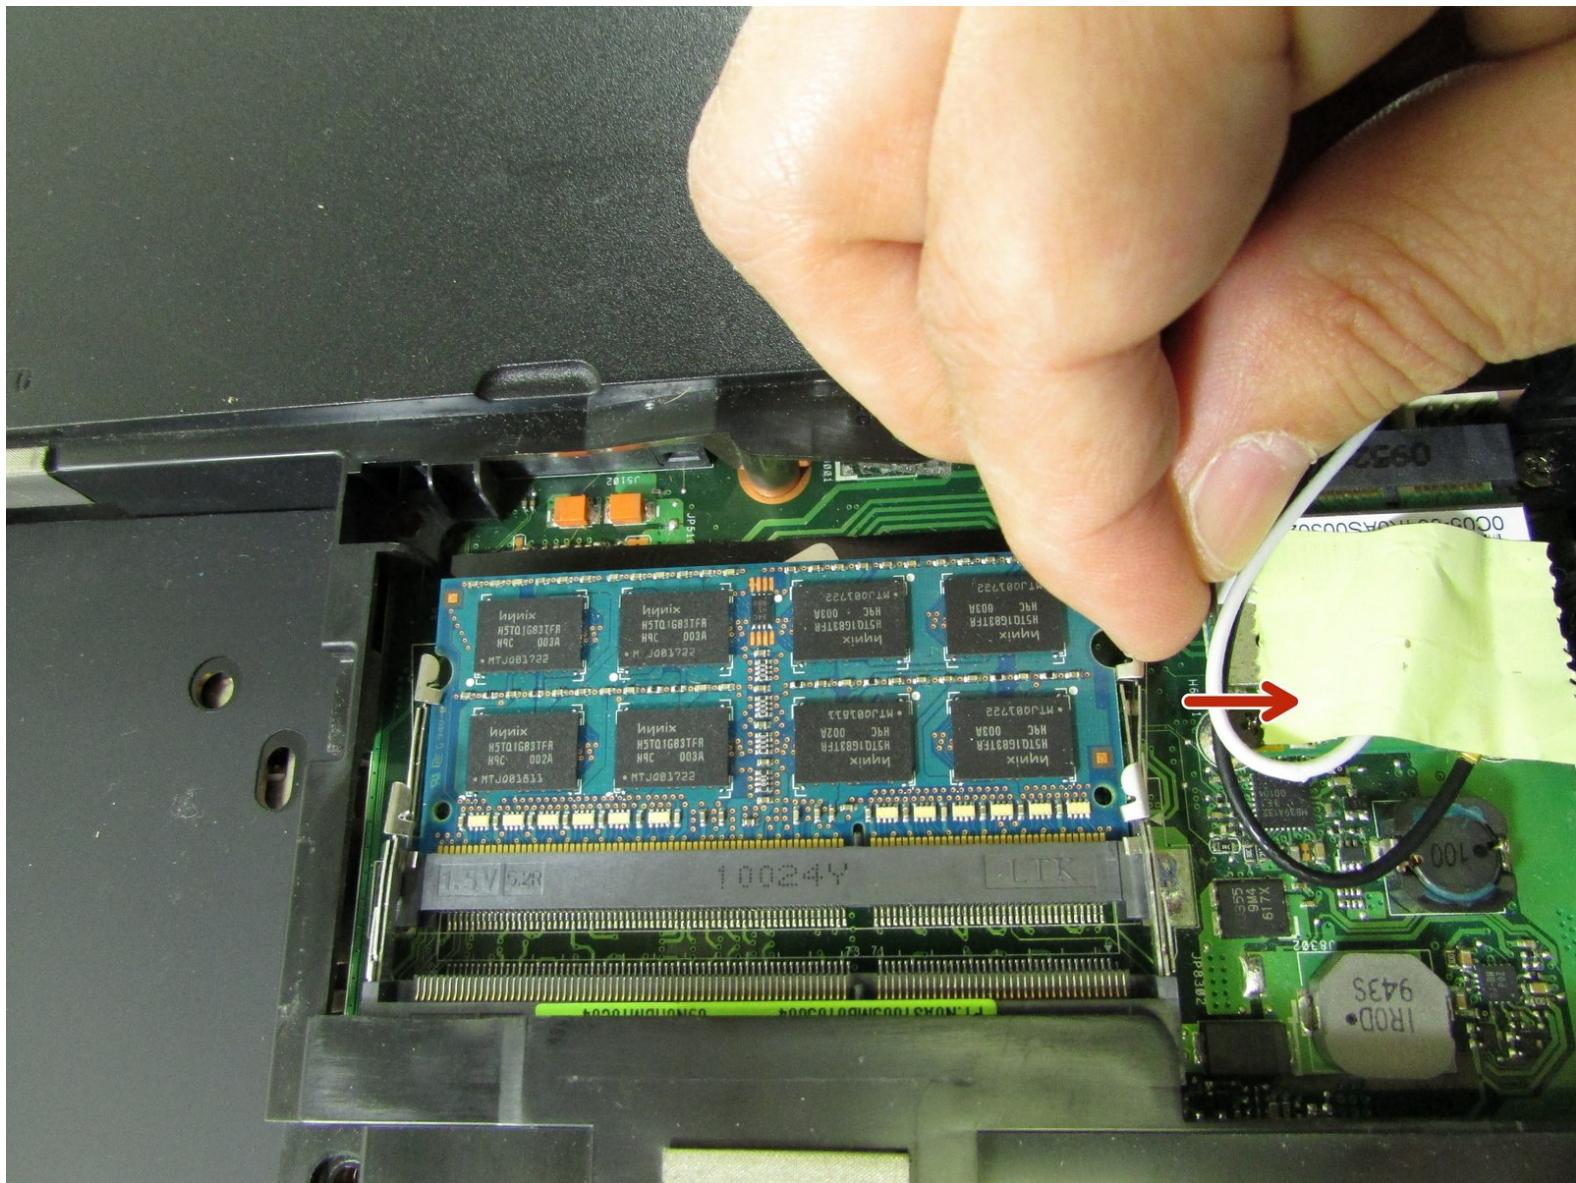

Asus U50F-RBBAG05 RAM Replacement

This guide is to show you how to remove/replace the RAM of your Asus U50F-RBBAG05.

Written By: Kelly Greeling




INTRODUCTION

We will teach you how to remove/replace the RAM of your Asus U50F-RBBAG05.

TOOLS:

- [Phillips Head Screwdriver: Size PH1 \(1\)](#)
- [Spudger \(1\)](#)
- [dry erase marker \(1\)](#)
- [Magnetic Project Mat \(1\)](#)

Step 1 — Battery

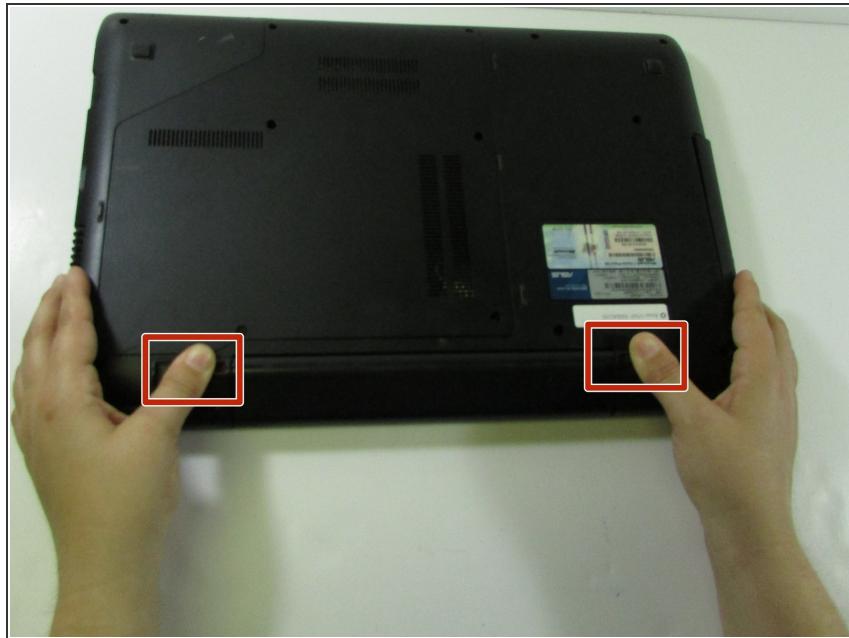

- Turn the laptop over so the bottom is facing up.
- Slide the tabs on either side of the battery away from the battery, toward the edges of the laptop.
- Slide the left tab to the left to lock it into the unlocked position. Red showing next to the tab signifies that it's unlocked.


(i) You will have to hold the right tab to the right to keep it unlocked while removing the battery.

Step 2



- Hold down the tab on the right while sliding the battery out.
- Remove the battery.

Step 3 — Underpanel

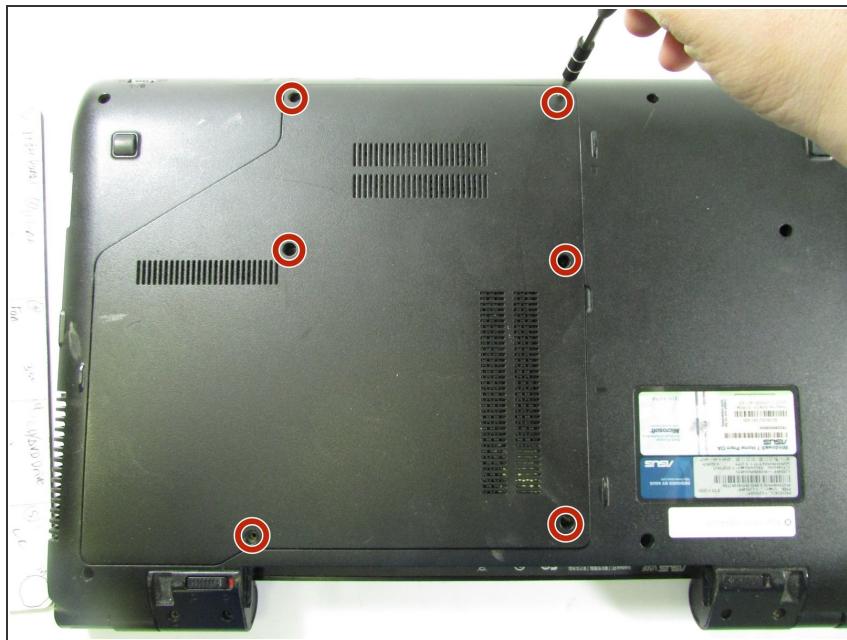


- Remove 6 screws

Step 4





- Pry the lower panel up with your fingernail/spudger.

Step 5

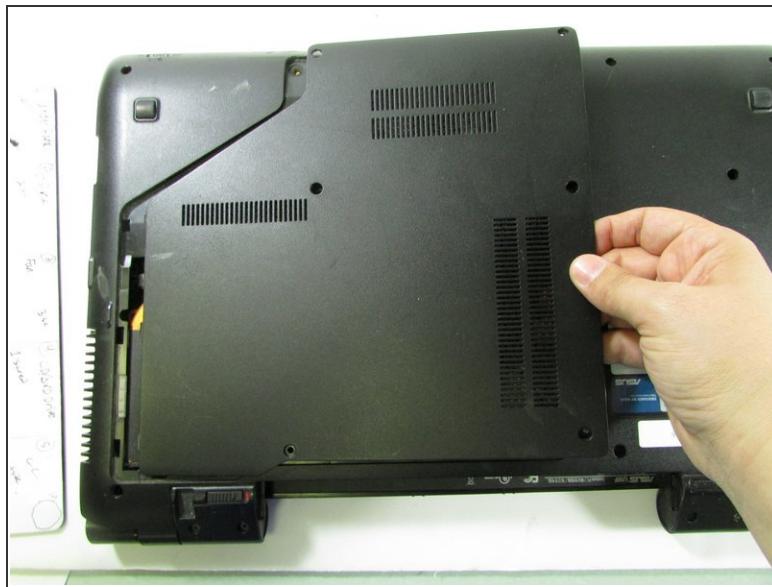


- Lift up and remove

Step 6 — Random Access Memory (RAM)

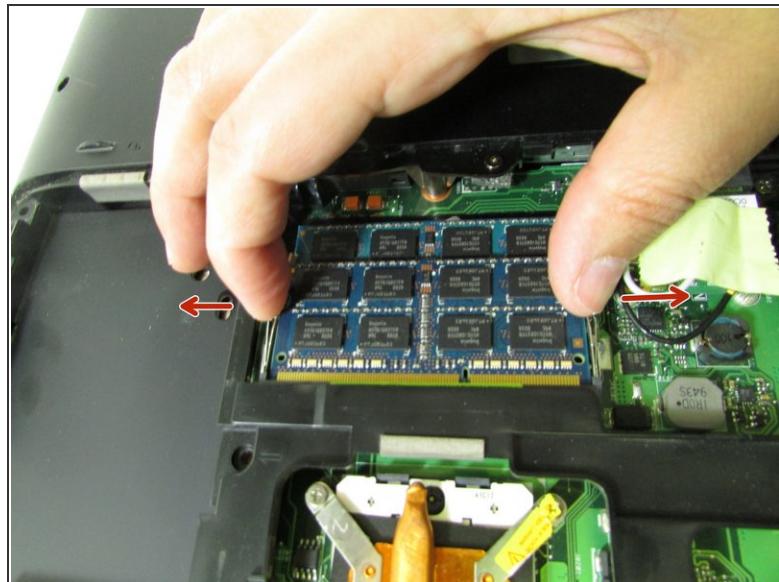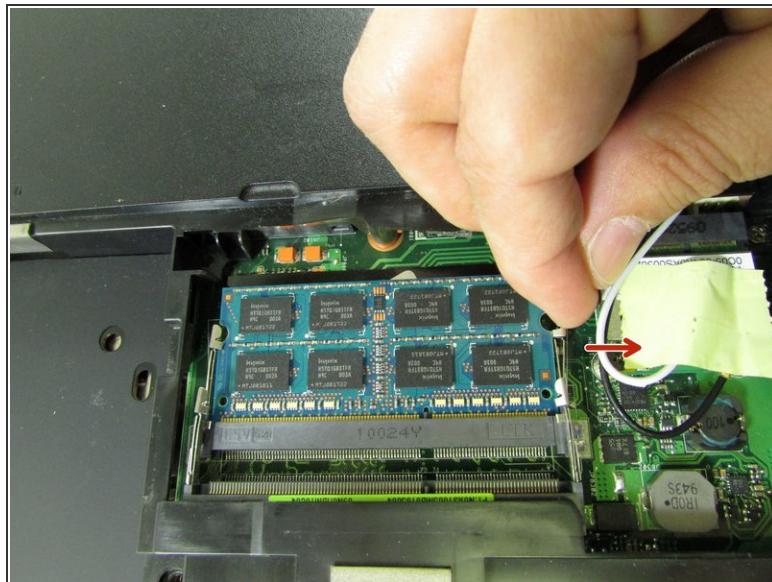

- Push back on the silver clips until you hear/feel a pop.

Step 7

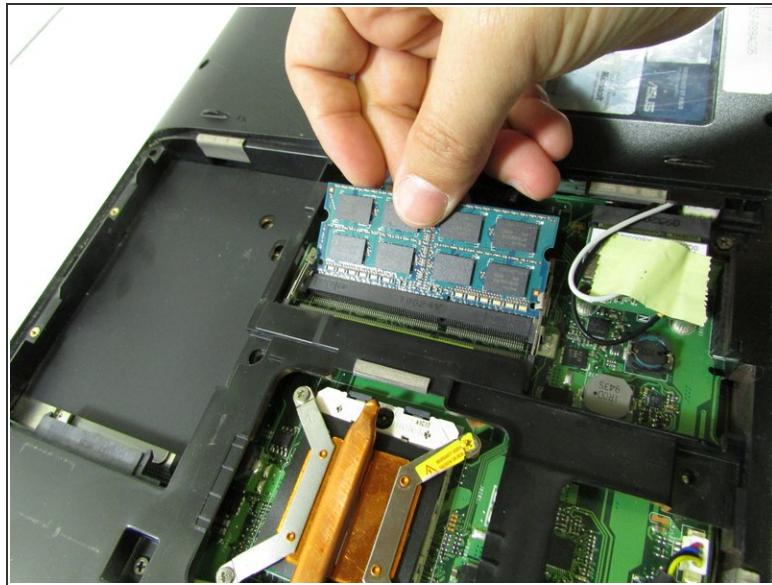

- Pull back RAM card and remove
- Repeat for lower RAM card

To reassemble your device, follow these instructions in reverse order.