




Asus U50F-RBBAG05 Underpanel Replacement

This is a guide to remove and/or replace the lower panel of your Asus U50F-RBBAG05.

Written By: Kelly Greeling

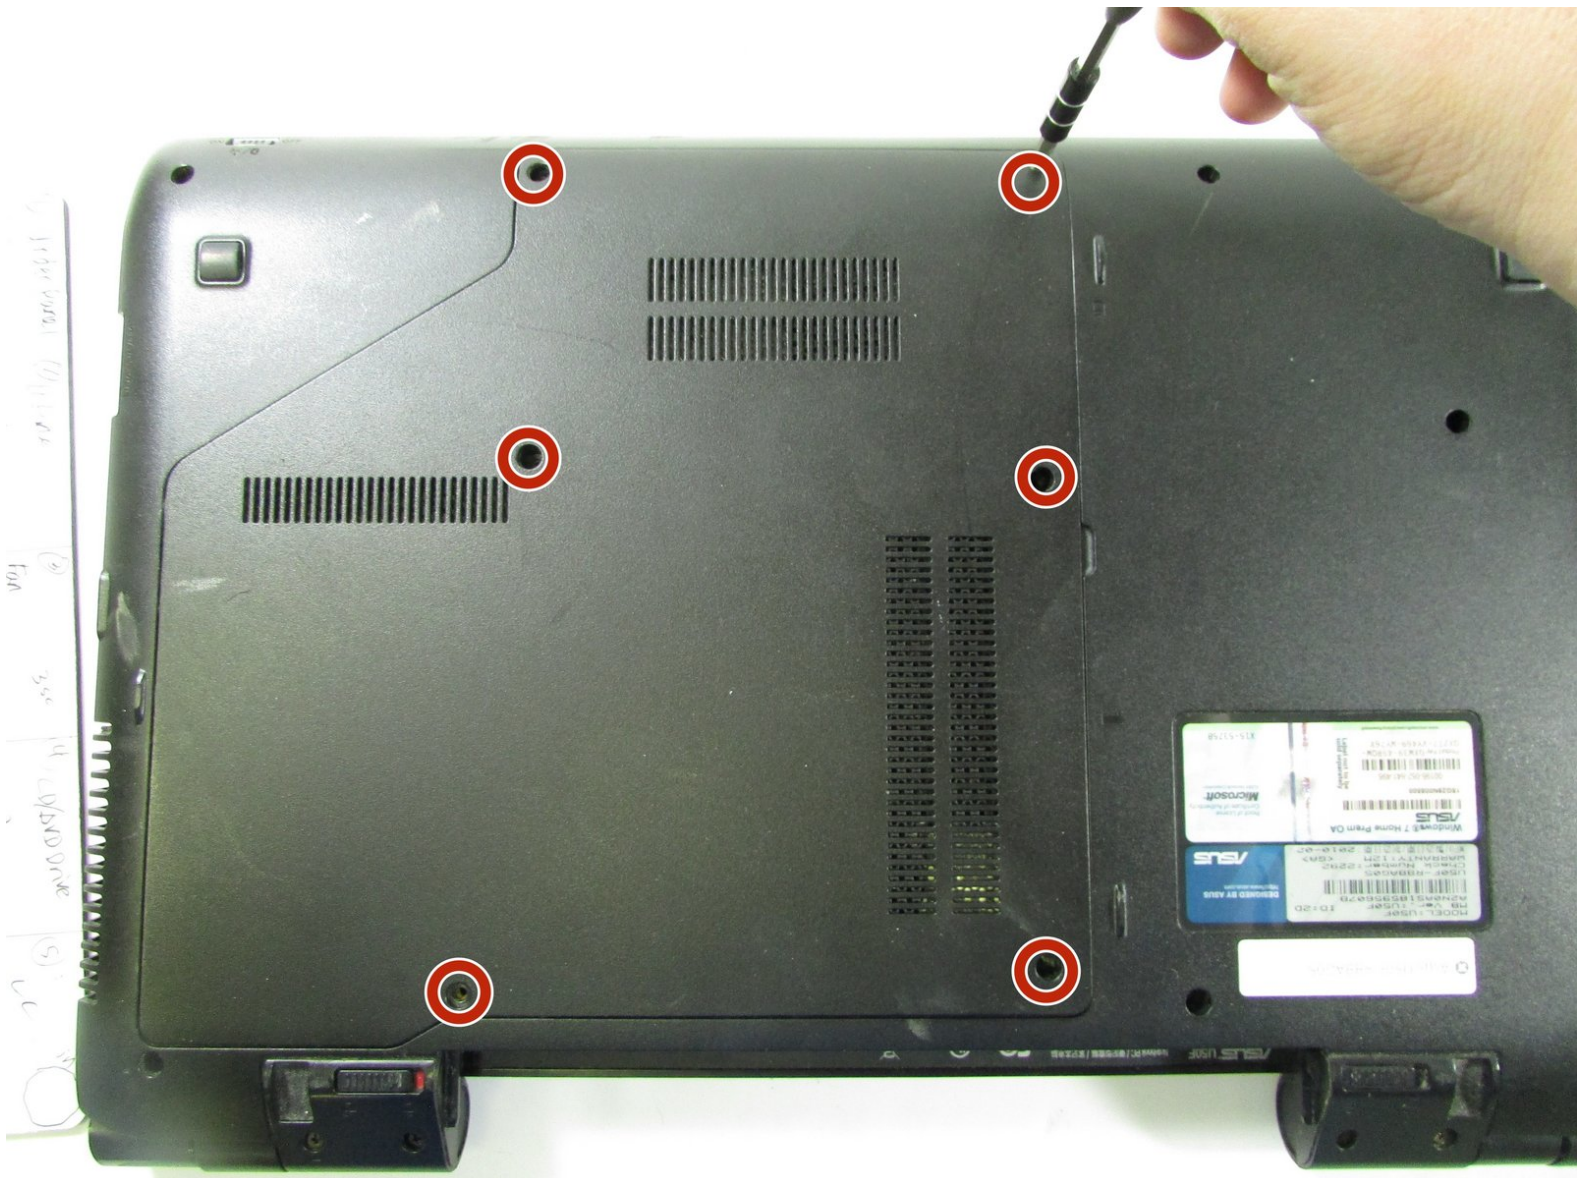


INTRODUCTION

We are going to teach you how to remove /replace the Lower Panel of your Asus U50F-RBBAG05.

TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
 - [Spudger](#) (1)
 - [dry erase marker](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery

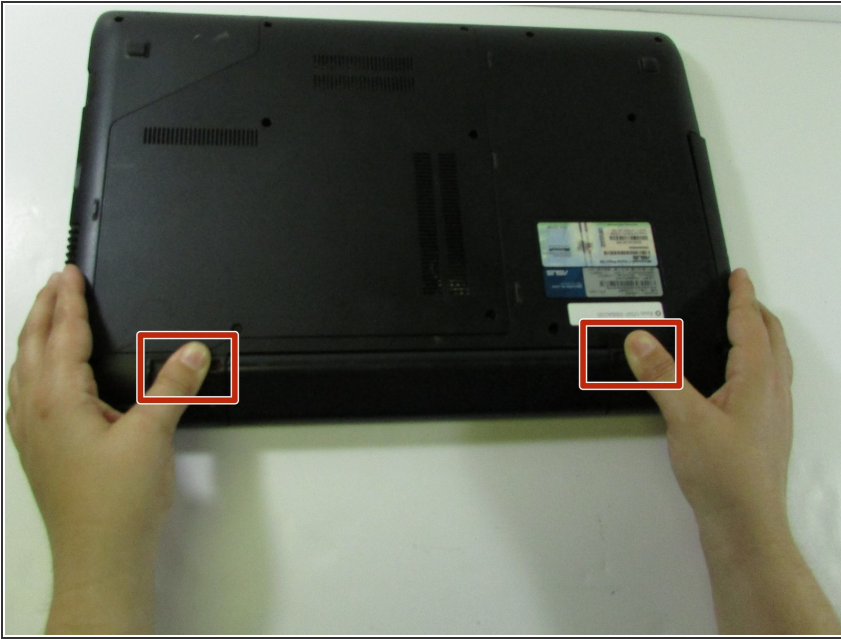


- Turn the laptop over so the bottom is facing up.
 - Slide the tabs on either side of the battery away from the battery, toward the edges of the laptop.
 - Slide the left tab to the left to lock it into the unlocked position. Red showing next to the tab signifies that it's unlocked.
- i** You will have to hold the right tab to the right to keep it unlocked while removing the battery.

Step 2



- Hold down the tab on the right while sliding the battery out.
- Remove the battery.

Step 3 — Underpanel

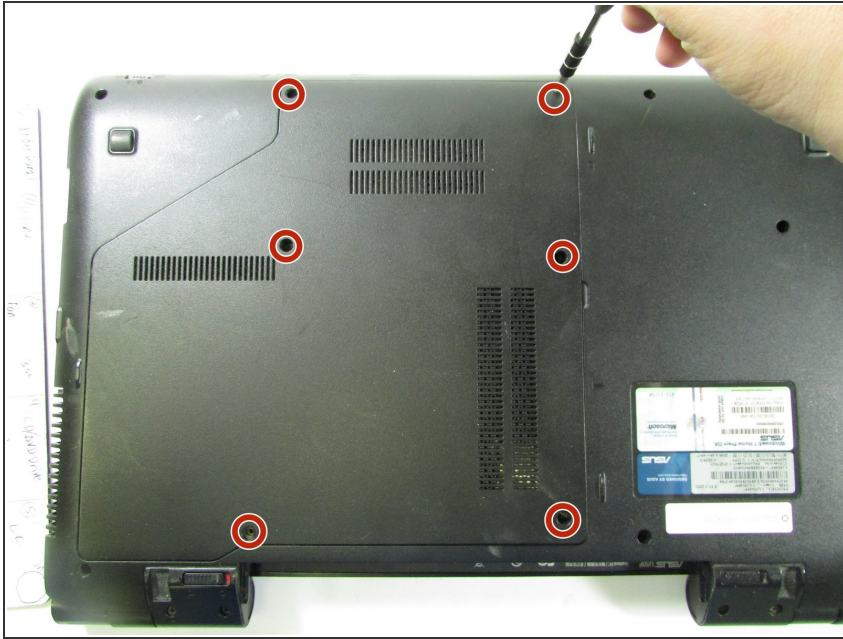

- Remove 6 screws

Step 4



- Pry the lower panel up with your fingernail/spudger.

Step 5



- Lift up and remove

To reassemble your device, follow these instructions in reverse order.