




# Asus U56E-BBL6 Keyboard Replacement

How to replace a Asus U56E-BBL6 keyboard.

Written By: Josiah Allard

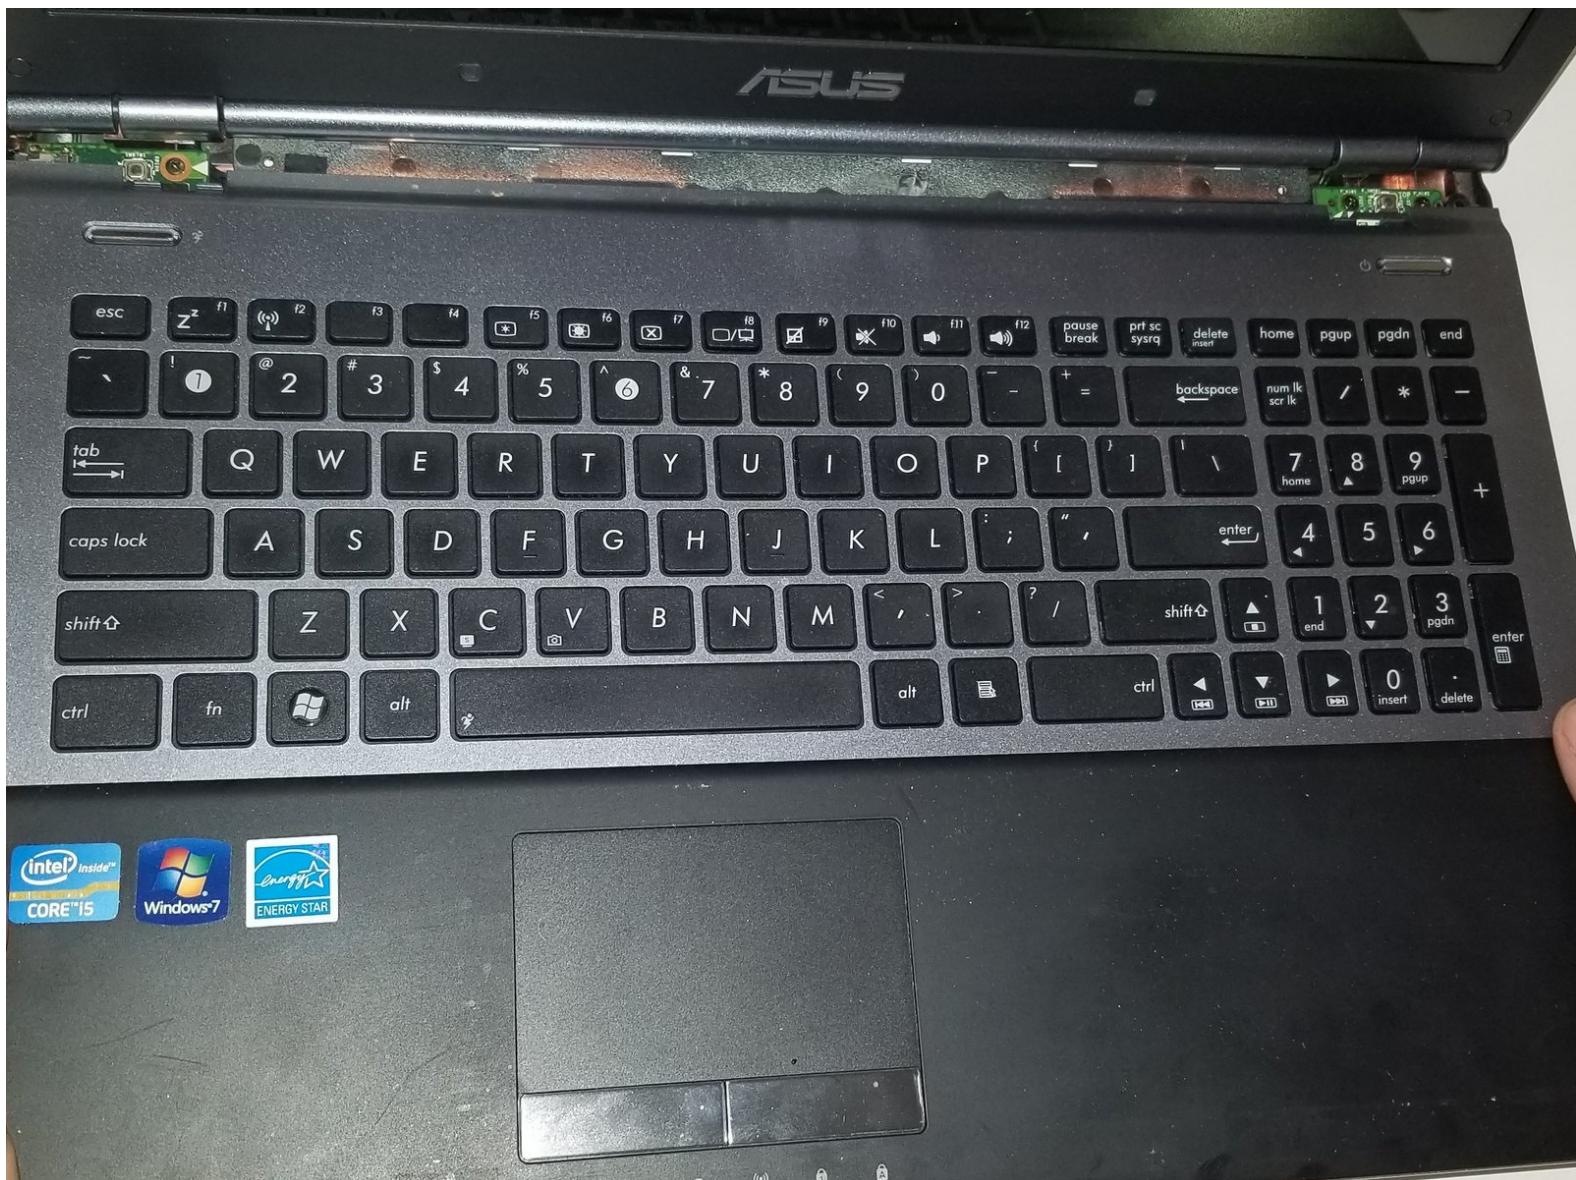

## INTRODUCTION

This guide outlines how to replace a keyboard on an Asus budget laptop. These laptops are quite compact, which results in a keyboard replacement being a very involved process.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



⚠ Make sure you unplugged the laptop before you begin the replacement process.


- Locate the battery locking tabs on the upper right and left corner.
- Press the tabs in towards each other.

## Step 2



- Pull the battery outwards to remove it.

## Step 3 — Back Panel

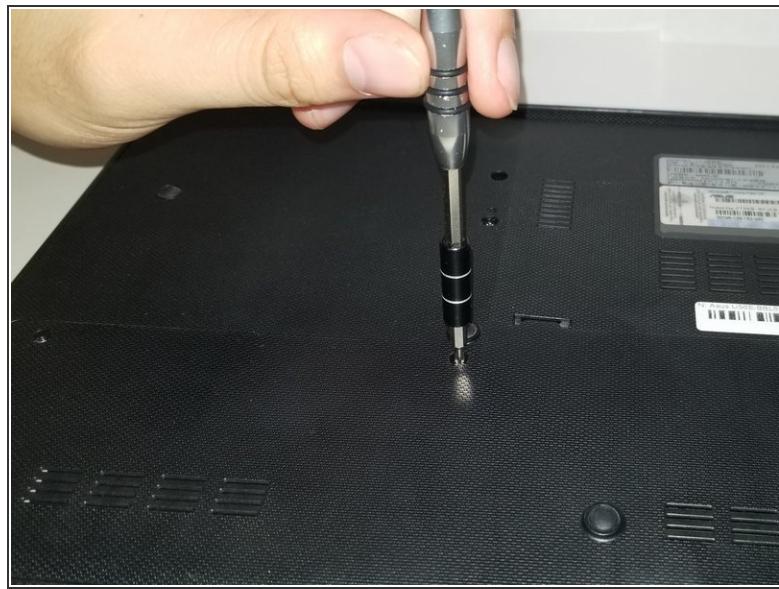

- Using a Phillips #00 screwdriver, remove the screws.

## Step 4





- Lift backplate and remove from the case.

## Step 5 — RAM



- Once inside the panel, locate your RAM sticks.


## Step 6

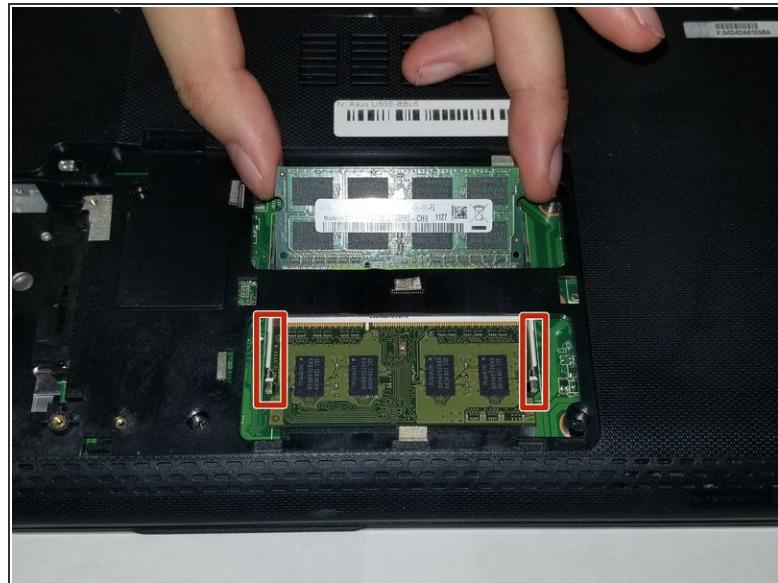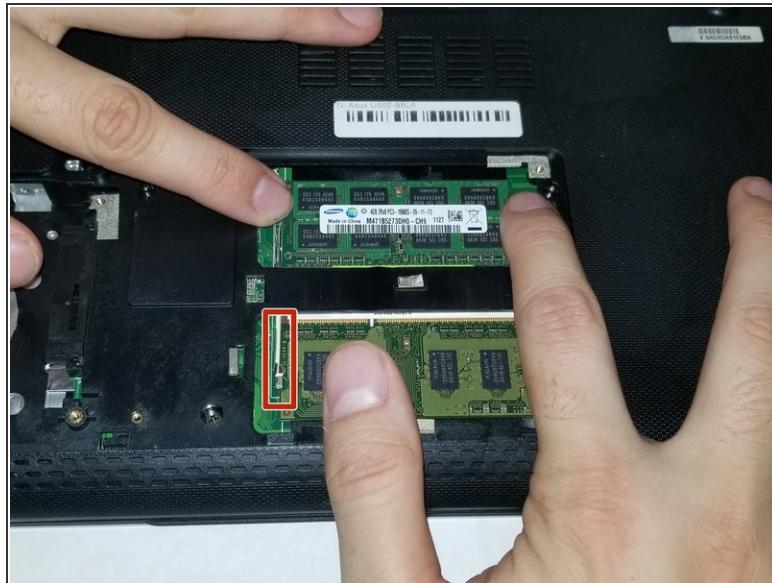

*(i)* This device is embedded with two RAM sticks.


- Push the metal brackets carefully to release and remove the RAM stick .

## Step 7

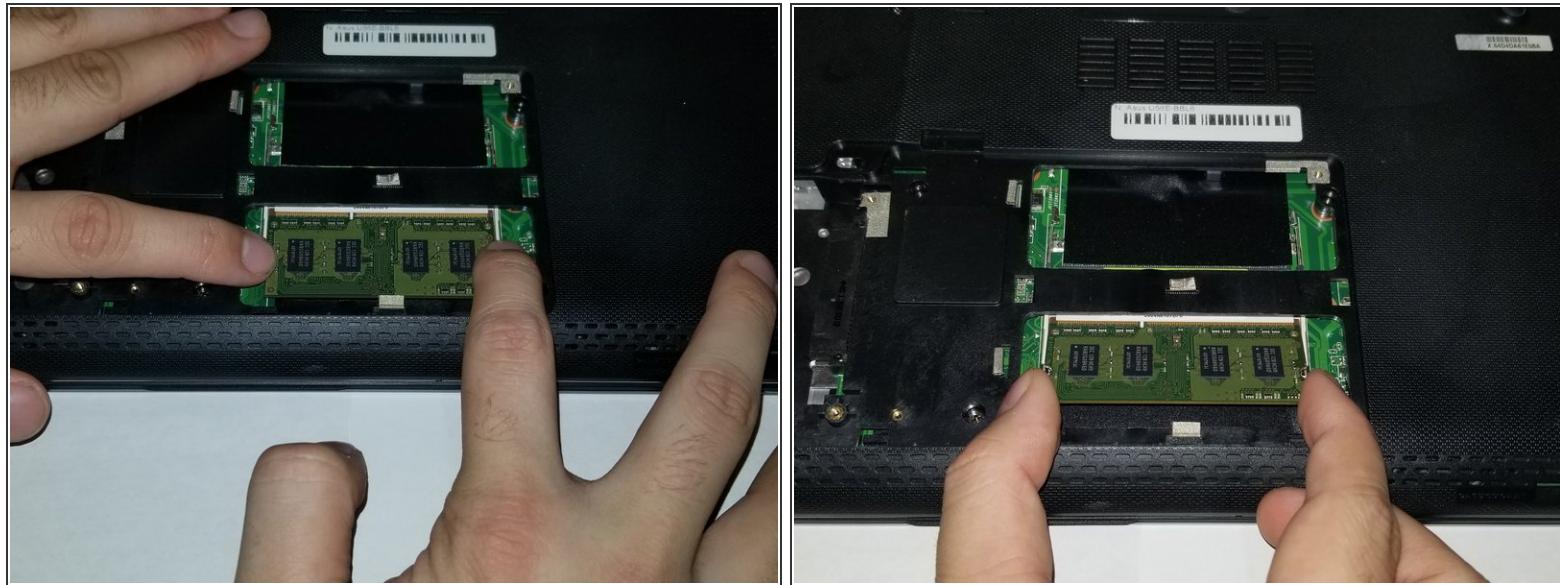


- Repeat the previous step for removing the other RAM stick.

## Step 8 — Keyboard

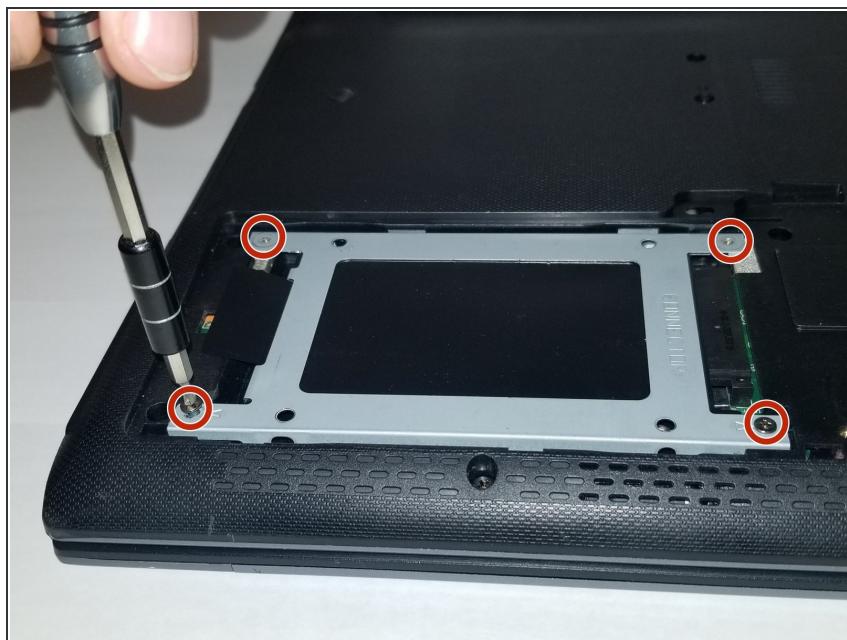


- Using a Phillips #00, remove the four screws.

## Step 9

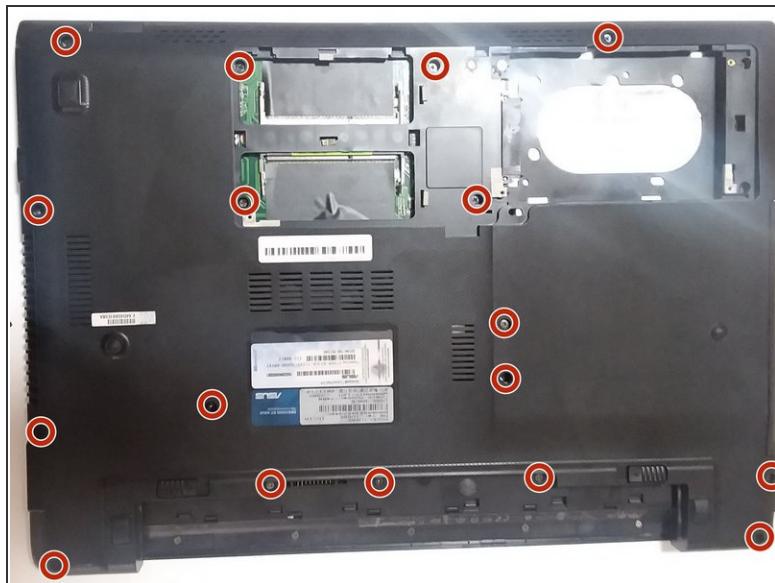


- Using a Phillips #00 screwdriver, remove the screws.

## Step 10

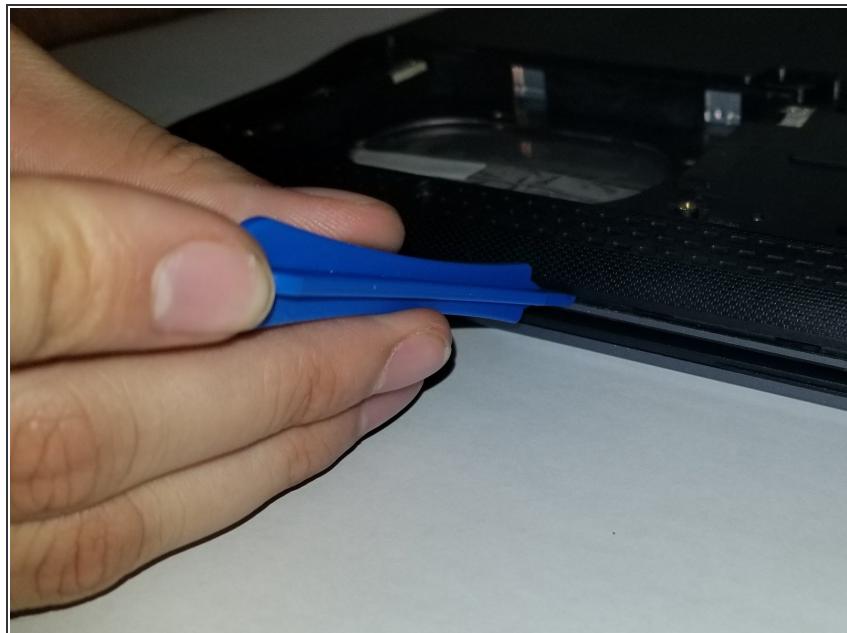

- Use a plastic opening tool around the entire edge.
- Separate the case from the keyboard.

## Step 11

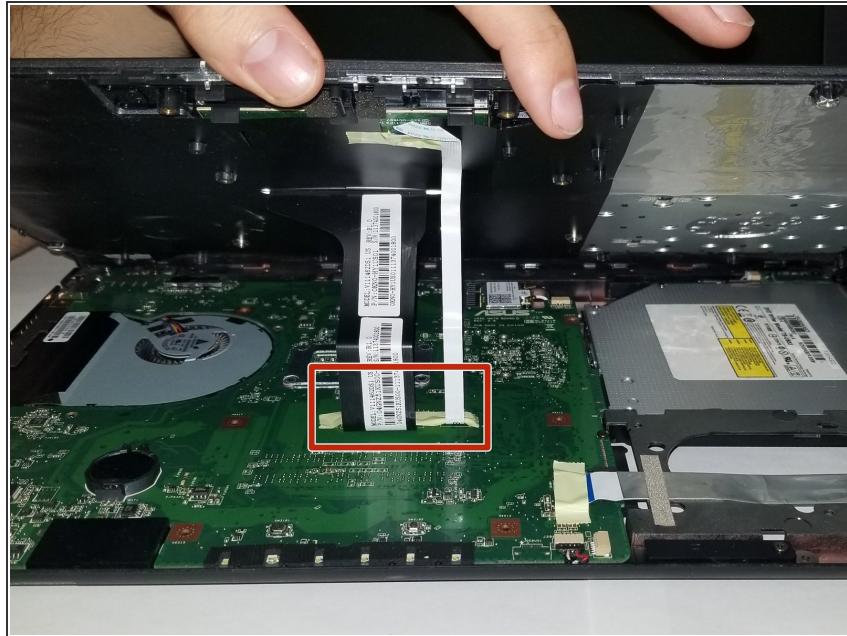


ⓘ Ensure the laptop is face up for this step.

- Gently lift the keyboard from the base of the laptop.


⚠ Be careful of the ribbon cables connecting the keyboard.

## Step 12

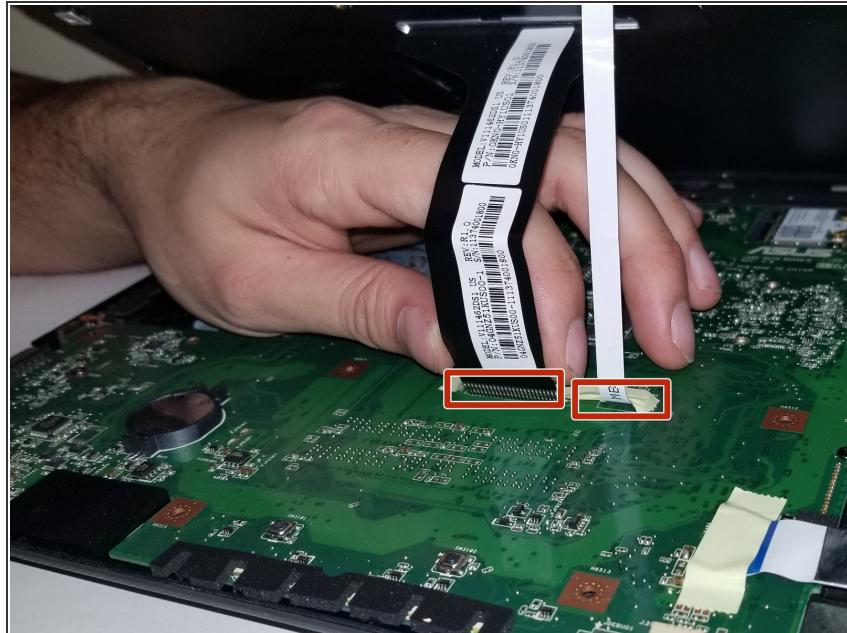

- Gently tug the ribbon cables free from their slots.

## Step 13

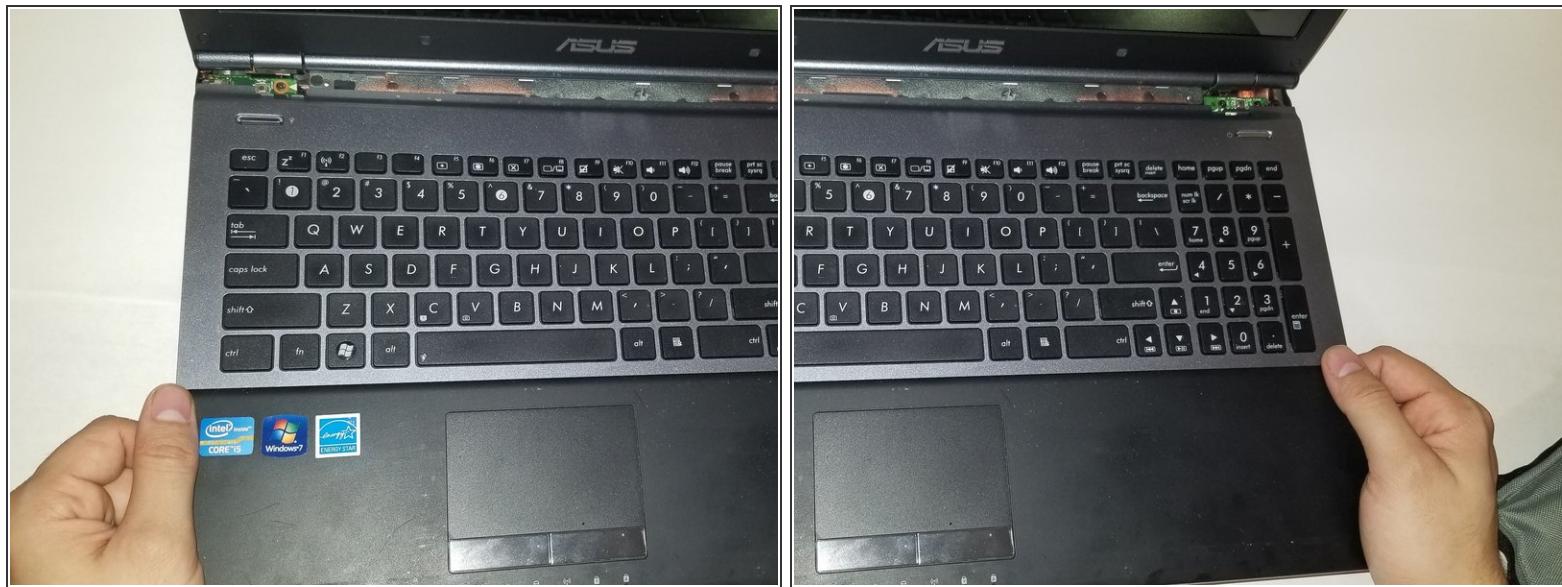

- Using both hands, pull the keyboard back and out, fully separating the keyboard from the laptop.

To reassemble your device, follow these instructions in reverse order.