



# Asus U56E-BBL6 RAM Replacement

How to replace Asus U56E-BBL6 RAM.

Written By: Josiah Allard




## INTRODUCTION

This guide will show how to remove and replace the RAM on your Asus U56E-BBL6 laptop.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Panel

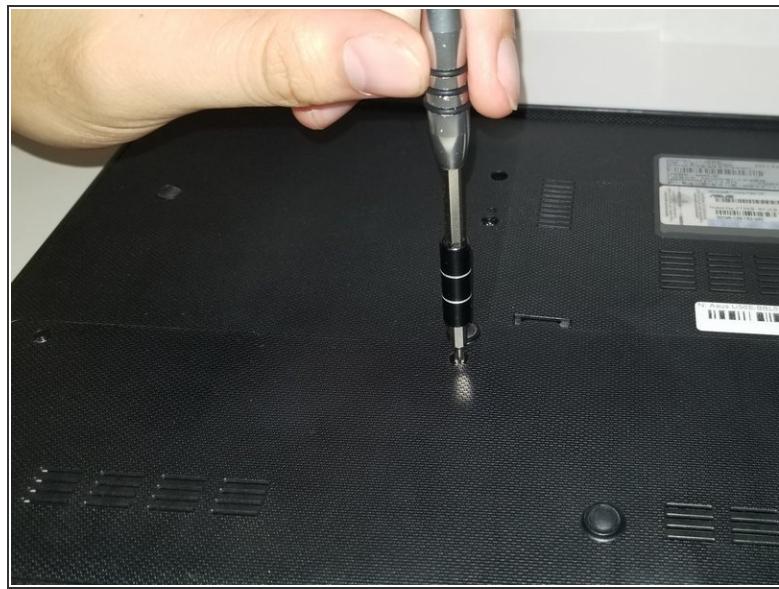

- Using a Phillips #00 screwdriver, remove the screws.

## Step 2





- Lift backplate and remove from the case.

## Step 3 — RAM



- Once inside the panel, locate your RAM sticks.

## Step 4

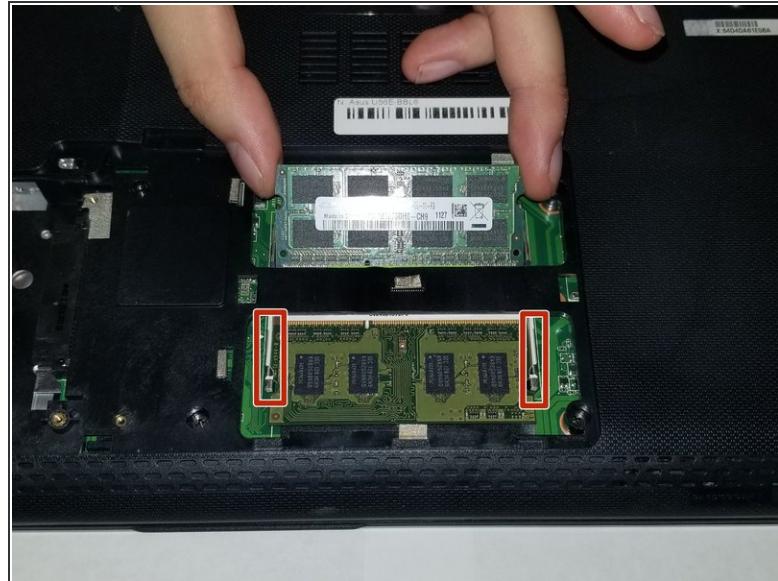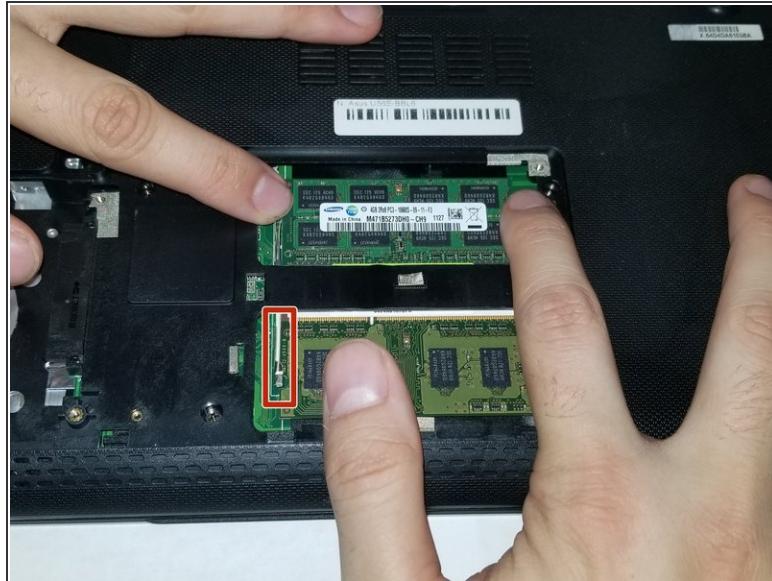

*(i)* This device is embedded with two RAM sticks.

- Push the metal brackets carefully to release and remove the RAM stick .

## Step 5



- Repeat the previous step for removing the other RAM stick.

To reassemble your device, follow these instructions in reverse order.