



Asus UL30VT-A1 Hard Drive Replacement

How to replace the hard drive in your Asus UL30VT-A1.

Written By: Miguel Gonzalez



INTRODUCTION

Replacing your HDD on your Asus laptop is fairly simple. Before you decide a replacement HDD is necessary refer to the [troubleshooting page](#)

TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

PARTS:

- 2.5" SATA Hard Drive (1)

Step 1 — Hard Drive




- Flip your device so that the back of the device is facing you.

Step 2



- Remove the four screws using your Phillips #0 screwdriver to attain access to your Hard Drive.
- Remove the panel using a plastic opening tool.

Step 3

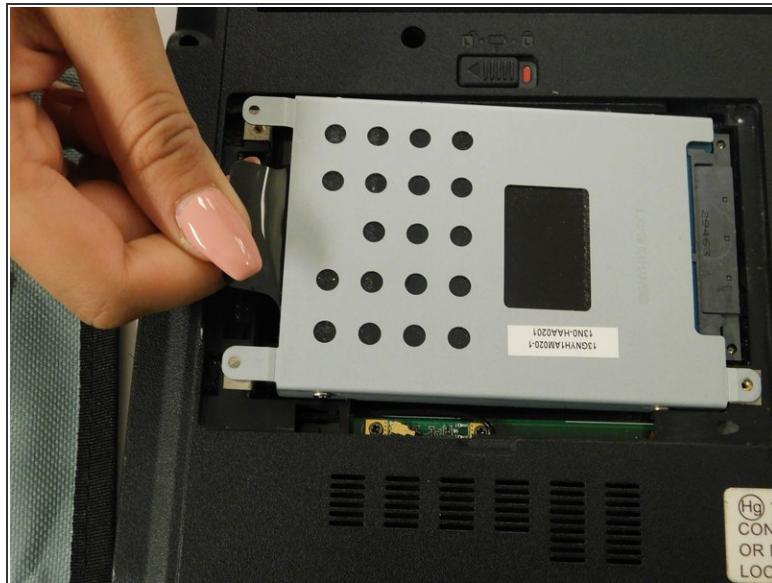

- Gently pull the black strip and the Hard Drive should slide right off. Pull your hard drive to the side not up to avoid damage to the slot.

To reassemble your device, follow these instructions in reverse order.