



# Asus UL80J RAM Replacement

This guide will teach you how to replace your RAM card for an Asus UL80J-BBK5.

Written By: John



## INTRODUCTION

RAM stands for Random Access Memory. How much RAM you have determines what kind of tasks you can do simultaneously. This often affects performance in a multitude of ways. This guide will show you how to replace your RAM cards.

### TOOLS:

- [Phillips Screwdriver](#) (1)

## Step 1 — RAM cards



- Unscrew the back plate in the middle of the laptop by removing the two 5 mm screws - this will expose the RAM cards.

## Step 2



- Pull the tabs and then slide the card to remove the RAM cards. To reinsert a new RAM card, slide the card in and then make sure it clips in with the tabs.

To reassemble your device, follow these instructions in reverse order.