



# Asus UL80VT Battery Replacement

This guide is a step-by-step walkthrough for replacing your Asus UL80VT battery.

Written By: James DellaMorte



## INTRODUCTION

Replacing the battery is very straightforward. Once the battery is unlocked, it will come right out. This replacement can be done when battery life is poor or if the battery is not holding a charge at all.

## Step 1 — Battery



- Flip the laptop so you can see the back side.

## Step 2



- Identify the two slide locks below the battery. Slide them outward towards the unlock symbol. You should see a red mark that indicates that the battery is unlocked and is ready for removal.

## Step 3



- Now you can remove the battery while continuing to hold the right battery lock in the unlock position.

To reassemble your device, follow these instructions in reverse order.