



Asus V6800V Keyboard Replacement

How to remove the keyboard


Written By: Steven



 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)


Step 1 — Battery

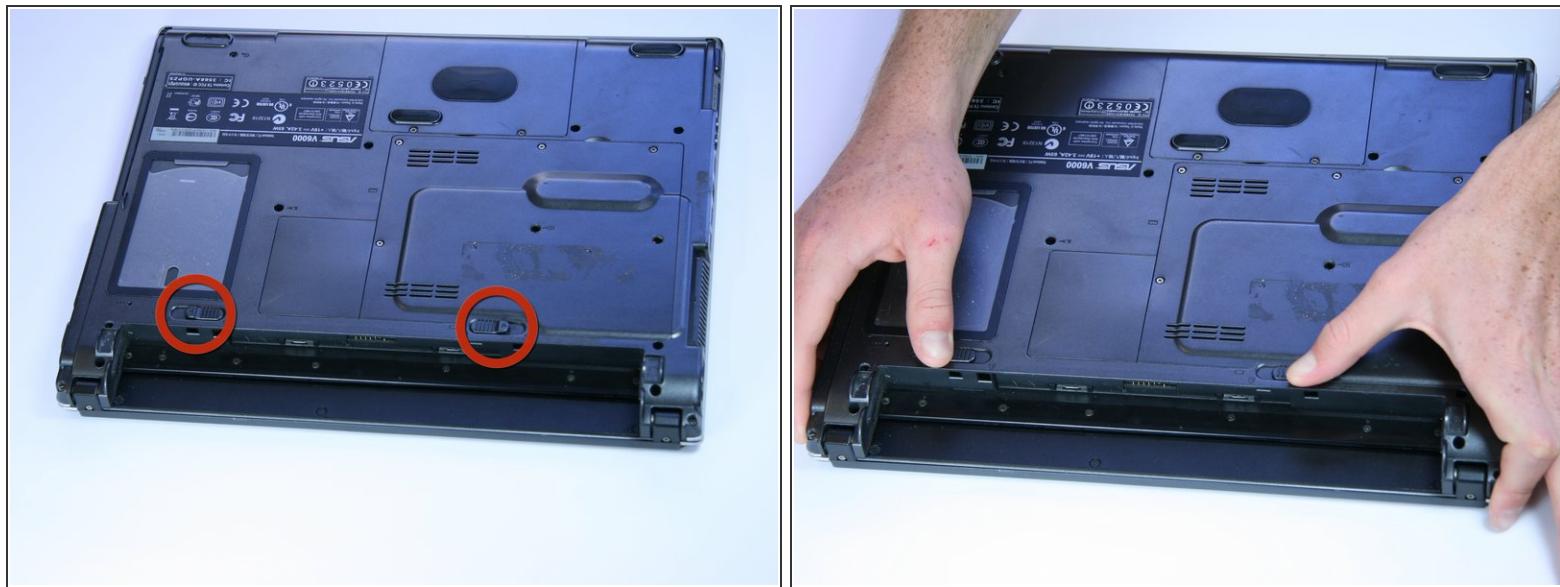

- Flip the computer over so that it is upside down.
- Slide both latches away from each other (towards the outside).
- Push the battery out with your fingers.


(i) The actual battery is not shown in the photograph.

Step 2 — Keyboard

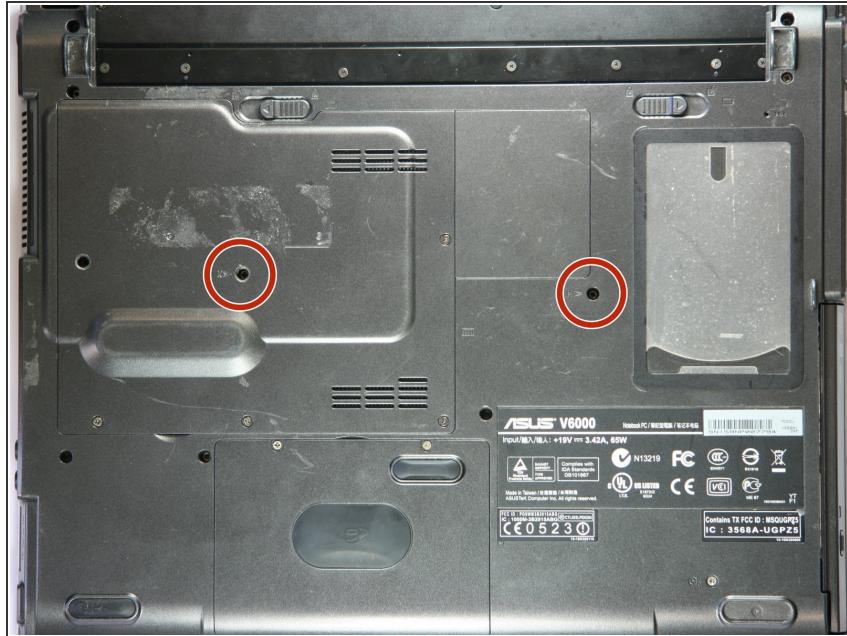



- Remove the two screws on the underside of the case.
- *(i)* These screws should have a keyboard "K" symbol next to them.

Step 3

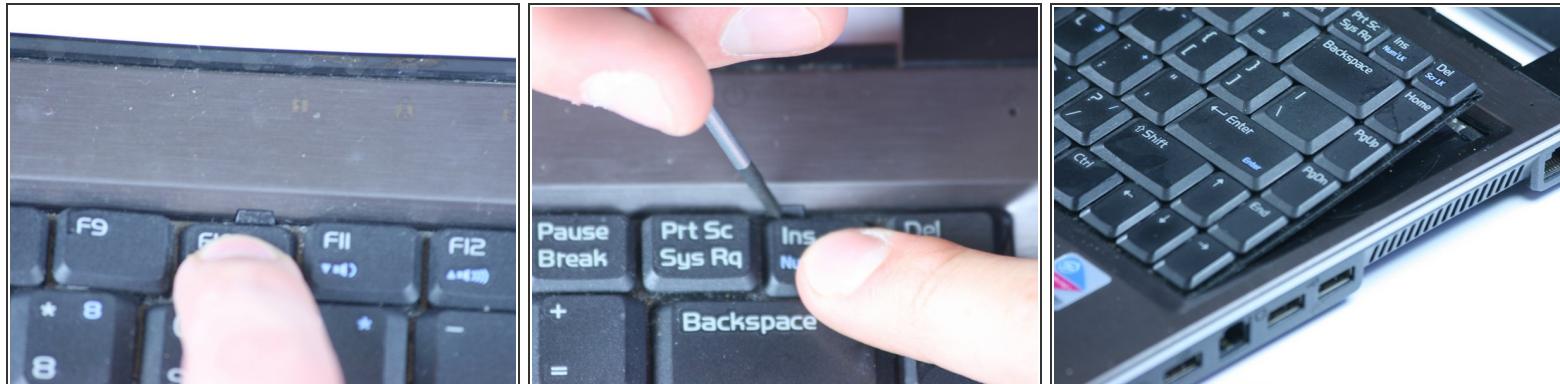

- Locate the little tabs above the INSERT, F10 and F1 keys, and between the F5 and F6 keys.
- Starting with the tab above the F1 key, press the tabs inward using your fingernail or spudger. Continue this process for the rest of the tabs.
- *(i)* Once all four tabs have been released, the top half of the keyboard should be free.

Step 4

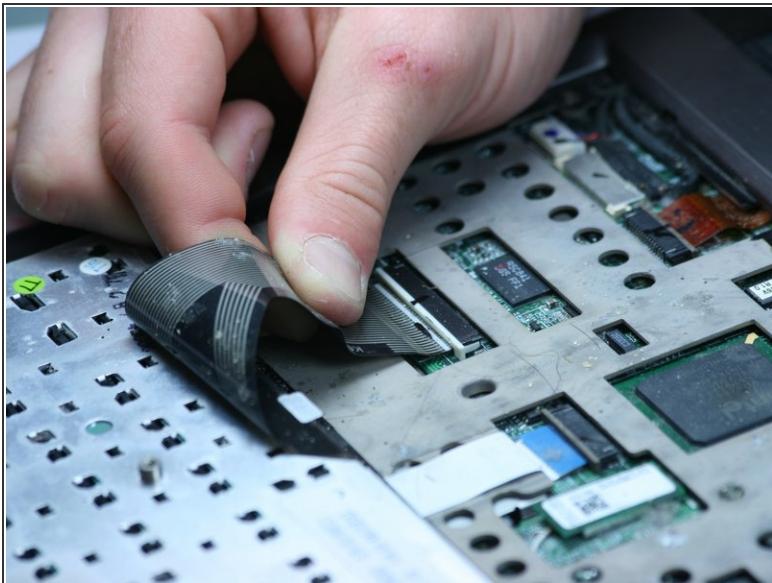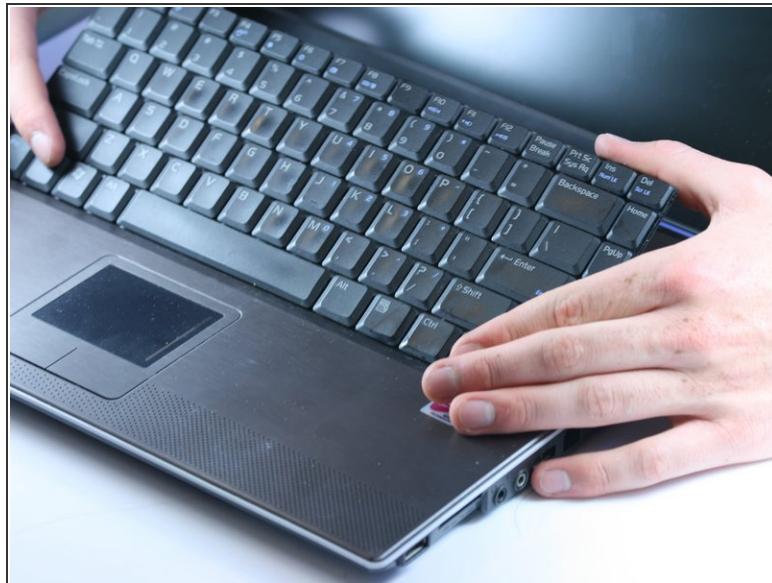

- Pull the keyboard out at a 45 degree angle and place it upside down on the scroll pad.
- Pull the wide ribbon cable laterally from its socket on the motherboard.

To reassemble your device, follow these instructions in reverse order.