




Asus Vivobook Max X541SA-PD0703X CD drive Replacement

This guide will provide instructions on how to access the interior parts of the Asus Vivobook Max X541SA-PD0703X and replace the CD drive.

Written By: Mayar Eskandarani

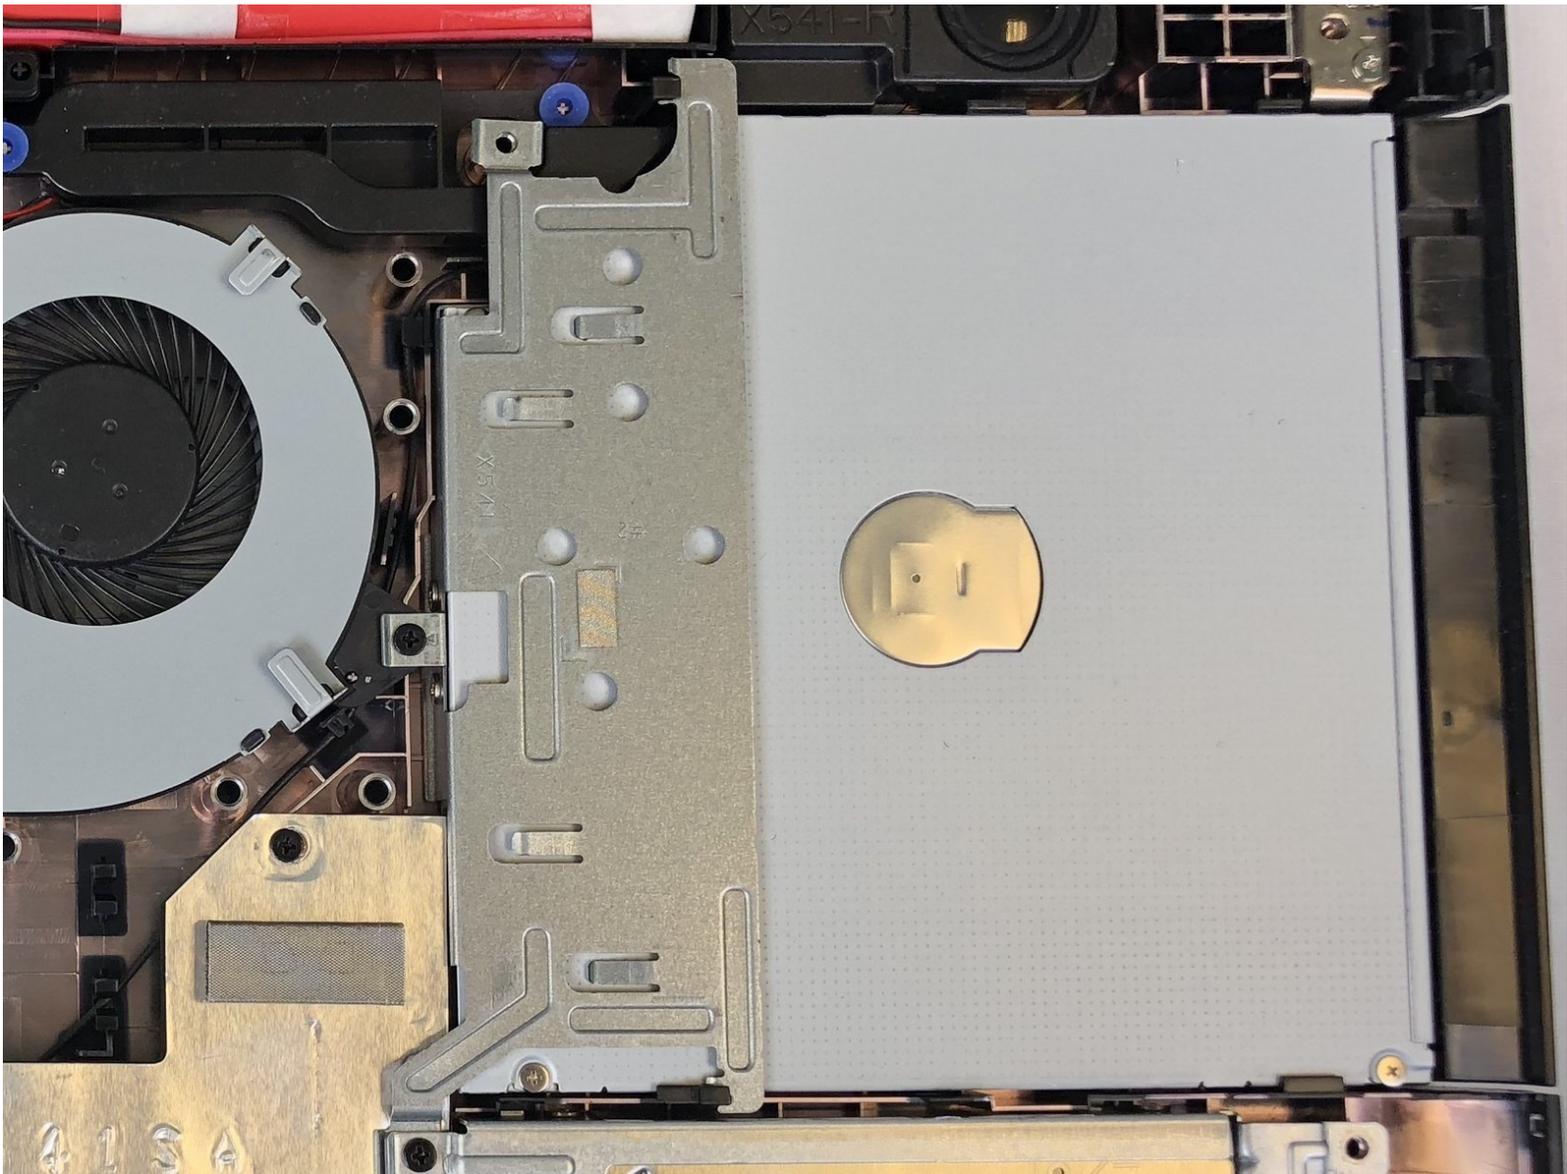

This document was generated on 2019-11-13 07:33:19 AM (MST).

INTRODUCTION

The Disc Drive is an essential part of the laptop which is needed to read or write data onto a CD. This guide will show you how to remove and replace the Disc Drive drive of the Asus Vivobook Max X541SA-PD0703X.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



PARTS:

- [disc drive](#) (1)

Step 1 — Hard Drive



- Flip the laptop upside down so that the back of the laptop faces you.

Step 2



- Remove the following ten Phillips #0 screws from the bottom of the laptop:
 - Six 13mm screws.
 - Four 11mm screws.

Step 3




- Using a plastic opening tool, pry up the palm rest from the bottom case of the laptop.
- ⓘ Don't completely remove as there are ribbon cables connecting the two halves.

Step 4





- Use a spudger to flip up the retaining flaps on both keyboard ribbon cable [ZIF](#) sockets.
- Pull the ribbon cables out of their sockets.

Step 5

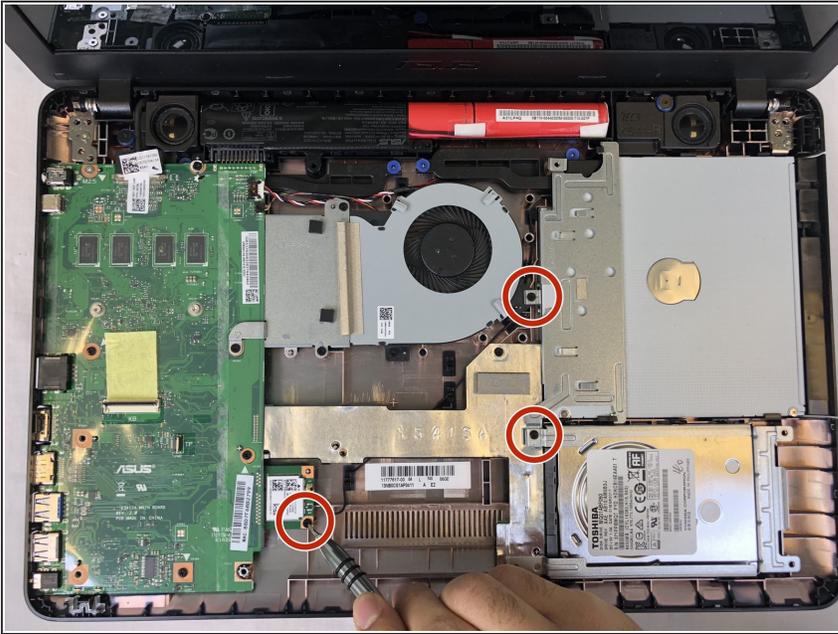


- Remove the three 6mm Phillips #0 screws from the motherboard.

Step 6

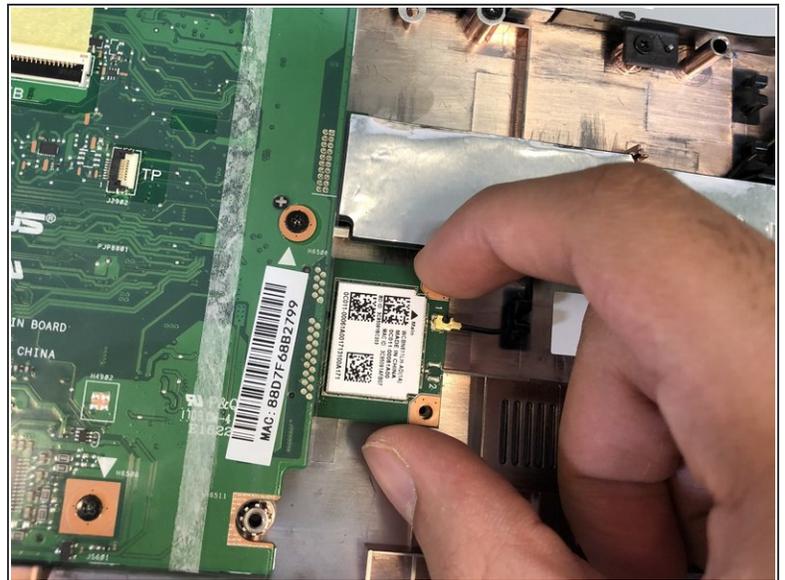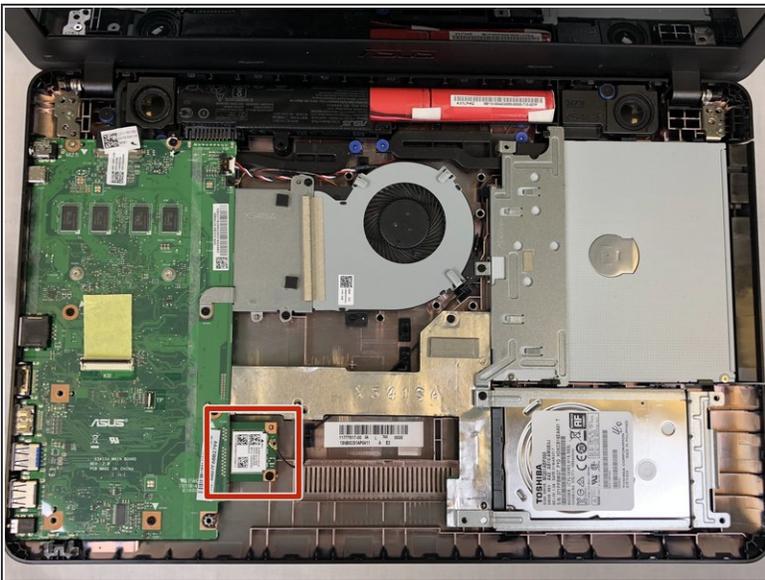


- Pull the Wi-Fi card out of the motherboard.

Step 7

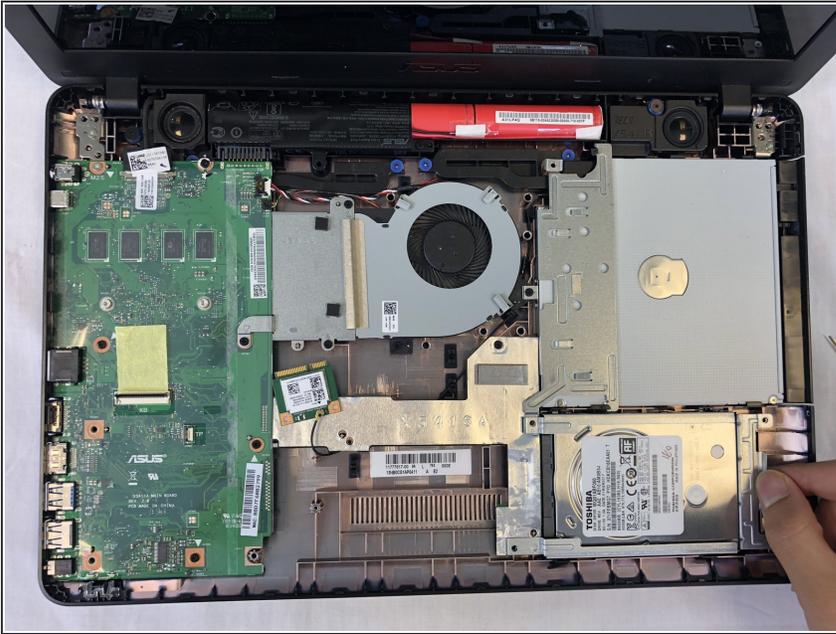

- Remove the hard drive by pulling it towards the right, and removing it from the laptop case

Step 8 — Disc Drive

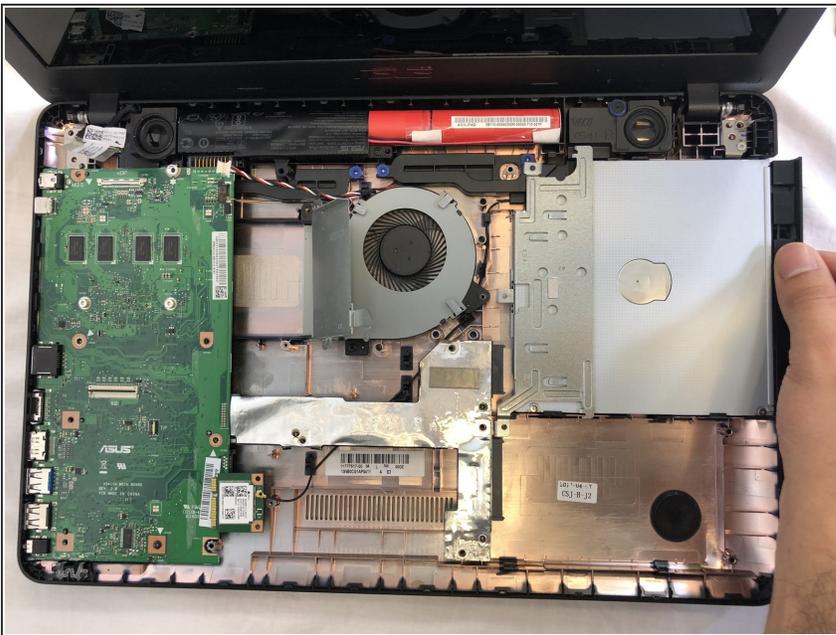

- Remove the disc drive by sliding it towards the right and removing it from the laptop case

To reassemble your device, follow these instructions in reverse order.