



Asus Vivobook Max X541SA-PD0703X Track Pad Replacement

This guide will provide instructions on how to access the interior parts of the Asus Vivobook Max X541SA-PD0703X and replace the track pad.

Written By: Hetvi Mehta



INTRODUCTION

This guide will show you how to remove and replace the track pad of your Asus Vivobook Max X541SA-PD0703X. There are no additional parts that you need to replace in order to access the track pad.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)

PARTS:

- [Track Pad](#) (1)

Step 1 — Keyboard




- Flip the laptop upside down so that the back of the laptop faces you.

Step 2





- Remove the following ten Phillips #0 screws from the bottom of the laptop:
 - Six 13mm screws.
 - Four 11mm screws.

Step 3

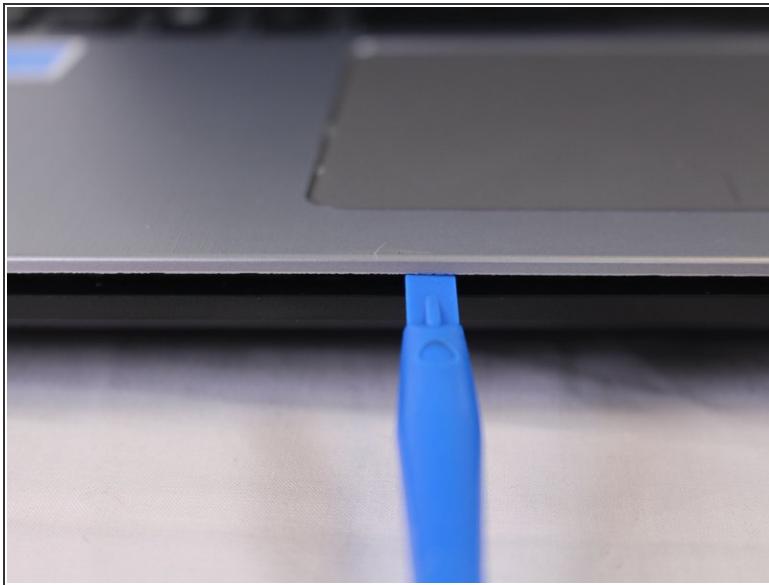


- Using a plastic opening tool, pry up the palm rest form the bottom half of the laptop.
- *i* Ribbon cables connect the two half so don't remove completely.

Step 4

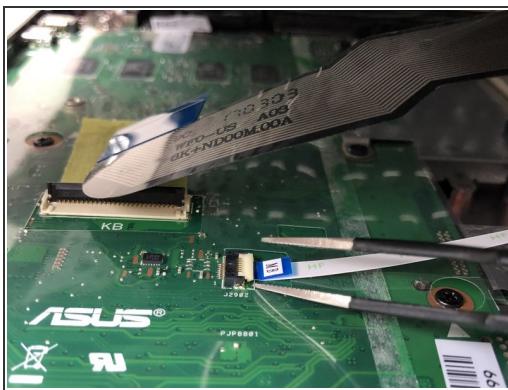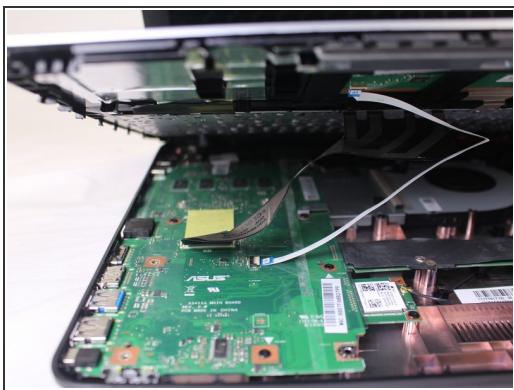


- Use a spudger to flip up the retaining flap on the keyboard ribbon cable [ZIF](#) sockets.
- Pull the ribbon cables out of their sockets.

Step 5

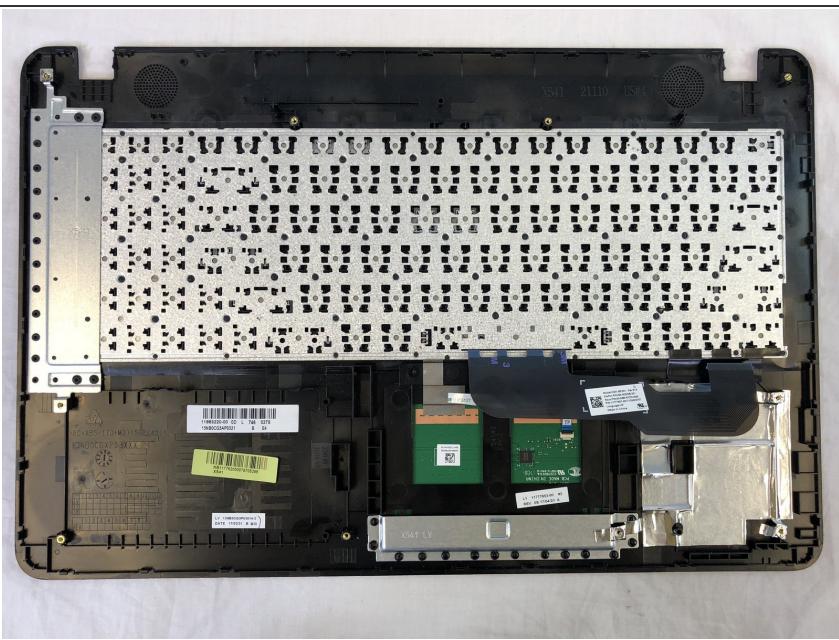


- Take the keyboard half of the laptop and place it in front of you so that the keys are facing down.

Step 6

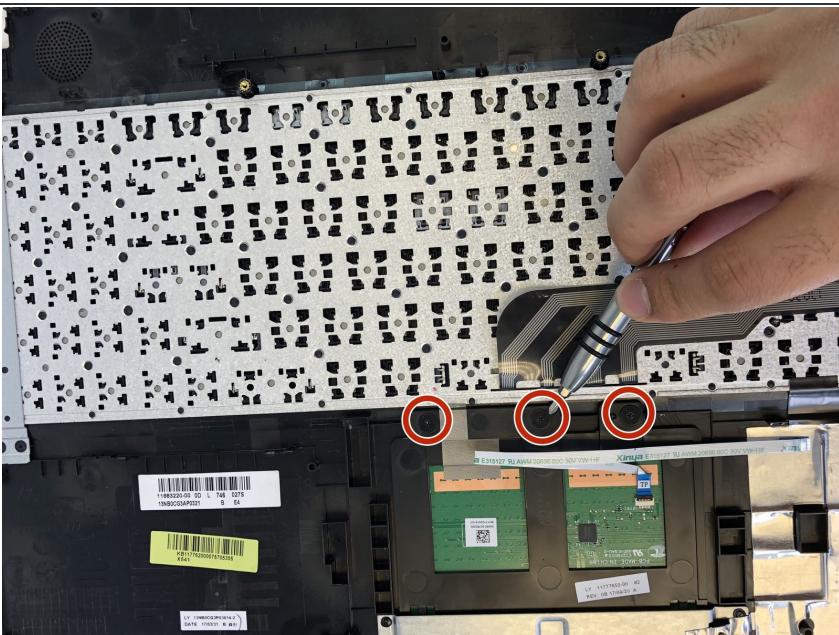


- Remove the three 3mm Phillips #0 screws from the touchpad.

Step 7

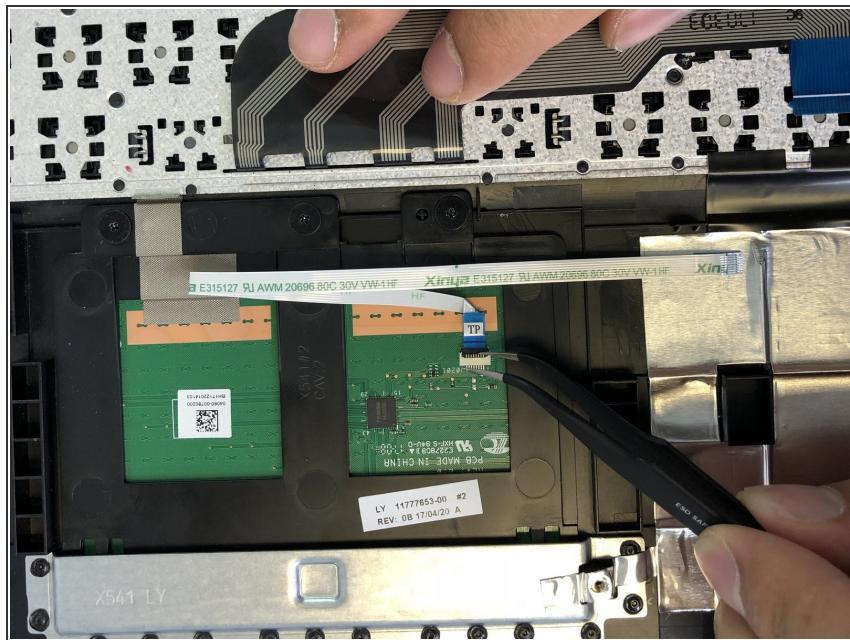

- Use a spudger to flip up the retaining flap on the touch pad ribbon cable [ZIF](#) socket.
- Pull the ribbon out of the socket.

Step 8

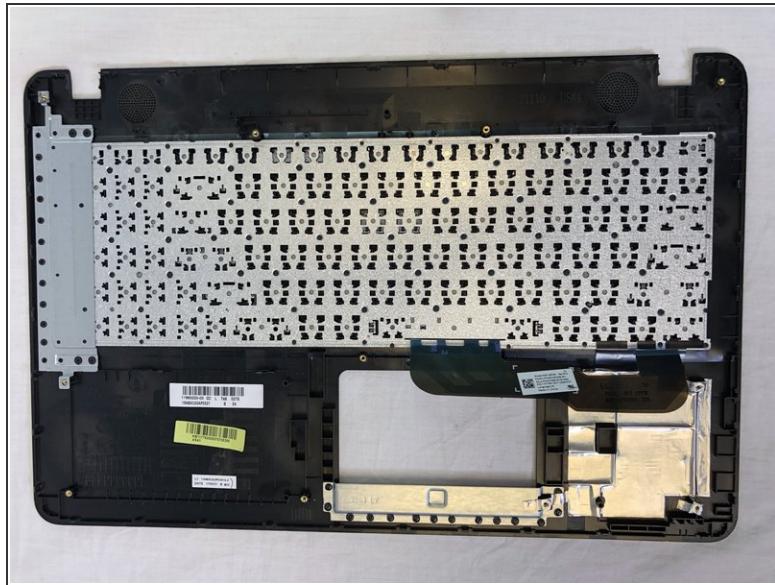

- Remove the touchpad.

To reassemble your device, follow these instructions in reverse order.