



# Asus Vivobook Max X541SA-PD0703X Wi - Fi Card Replacement

This guide will provide instructions on how to access the interior parts of the Asus Vivobook Max X541SA-PD0703X and replace the Wi - Fi Card.

Written By: Hetvi Mehta



## INTRODUCTION

This guide will show you how to replace the Wi - Fi Card of your Asus Vivobook Max X541SA-PD0703X. In order to replace the Wi - Fi Card, you do not need to remove any other parts.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)

### PARTS:

- [Wi-Fi Card](#) (1)

## Step 1 — Wi-Fi Card




- Flip the laptop upside down so that the back of the laptop faces you.

## Step 2






- Remove the following ten Phillips #0 screws from the bottom of the laptop:
  - Six 13mm screws.
  - Four 11mm screws.

## Step 3

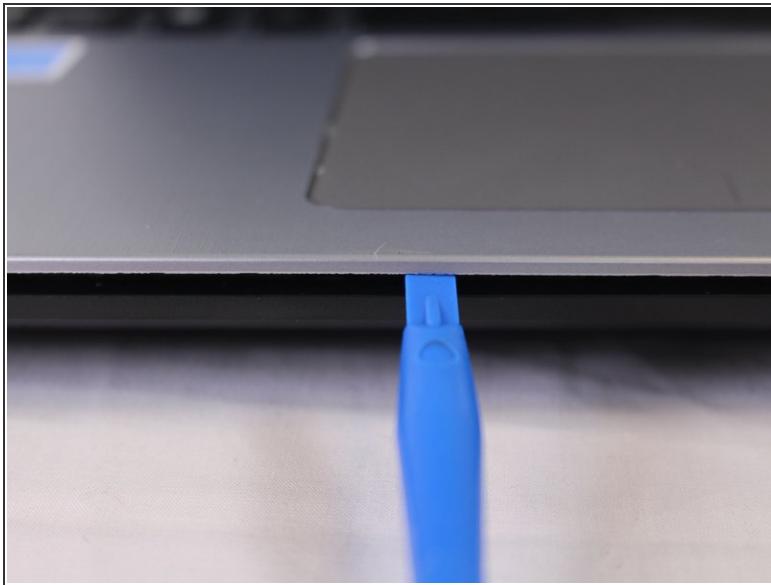


- Using a plastic opening tool, pry up the palm rest from the bottom half of the laptop.
- *i* Ribbon cables still connect both halves so don't remove completely.

## Step 4

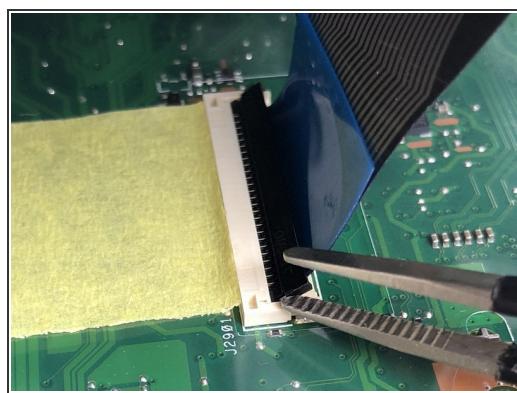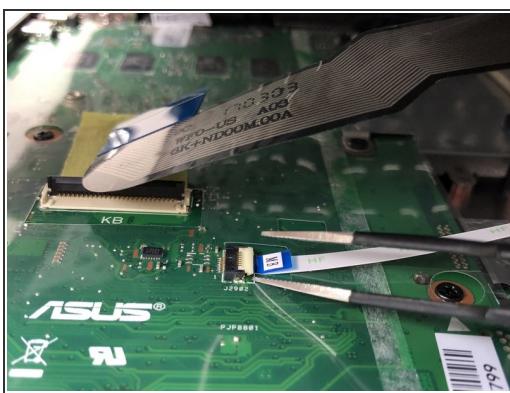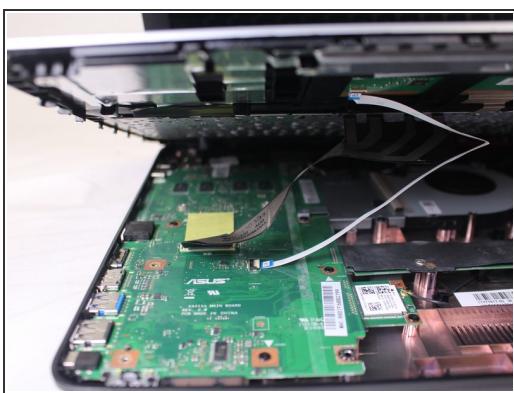


- Use a spudger to flip up the retaining flap on the keyboard ribbon cable ZIF sockets.
- Pull the ribbon cables out of their sockets.

## Step 5

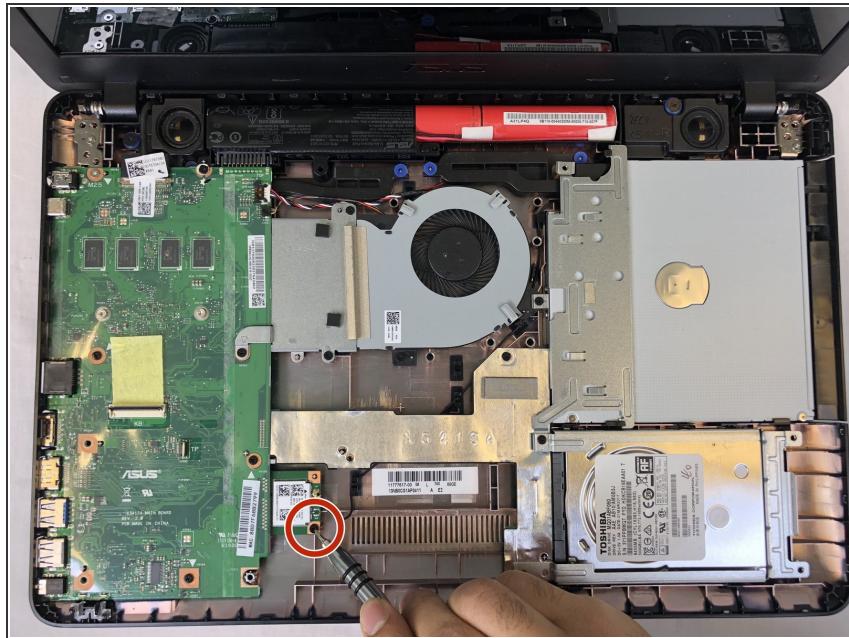

- Remove the 6mm Phillips #0 screw from the Wi-Fi card.

## Step 6

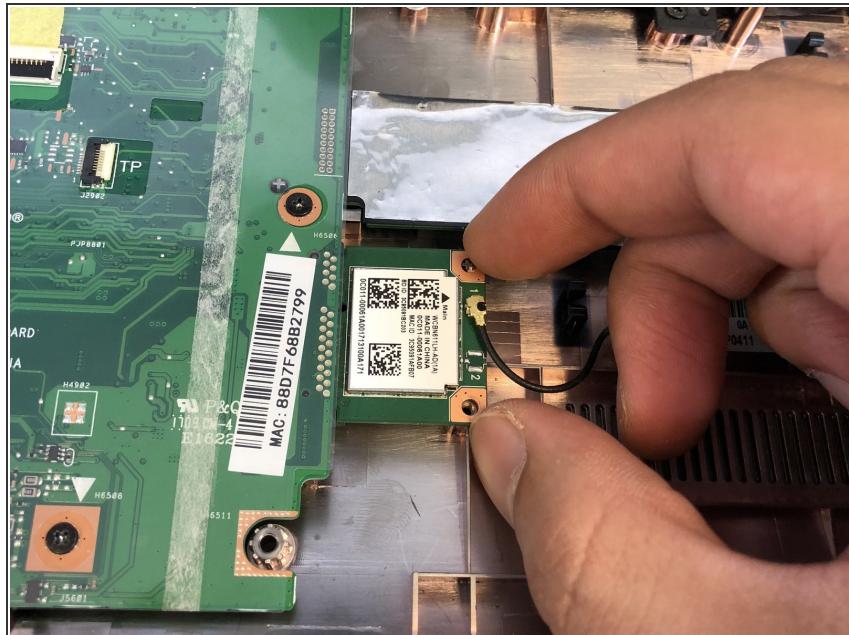

- Pull the Wi-Fi card out of the motherboard.

## Step 7



- Disconnect the antenna cable from the Wi-Fi chip.

To reassemble your device, follow these instructions in reverse order.