



Asus Vivobook Q301LA-BHI5T02 Fan and Heatsink Replacement

This guide shows how to replace the fan and attached heatsink.

Written By: Royce Gunter



INTRODUCTION

This guide will show you how to replace your fan and heatsink. This will restore the cooling capabilities of the laptop close to factory conditions. Before starting the steps make sure the Laptop is fully powered off.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

PARTS:

- [Isopropyl Alcohol](#) (1)
- [Thermal Paste](#) (1)
- [CPU Cooling Fan with Heatsink](#) (1)

Step 1 — Back Cover



- ⓘ Make sure the computer is turned off.
- Flip the device over so that the back cover is facing you.

Step 2




- Remove the four 5mm Phillips #1 screws from the top of the laptop.
- Remove the two 6mm Phillips #1 screws from the sides of the laptop.
- Remove the four 2mm Phillips #1 screws from the bottom of the laptop.

Step 3




- Use a plastic opening tool to gently pry the bottom of the laptop up. Slowly slide it along the edges, twisting it every so often to pop the bottom of the laptop out of the clips holding it in place.

Step 4

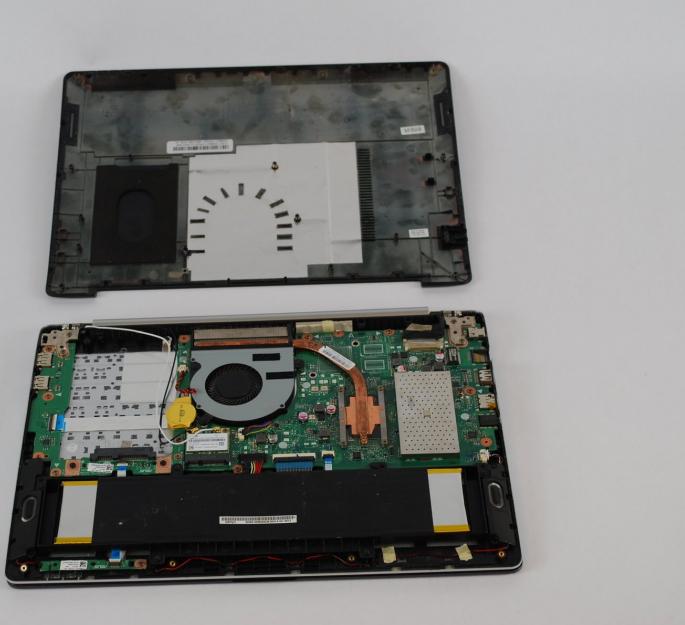


- Lift off the cover and remove the back cover from the device.

Step 5 — Fan and Heatsink

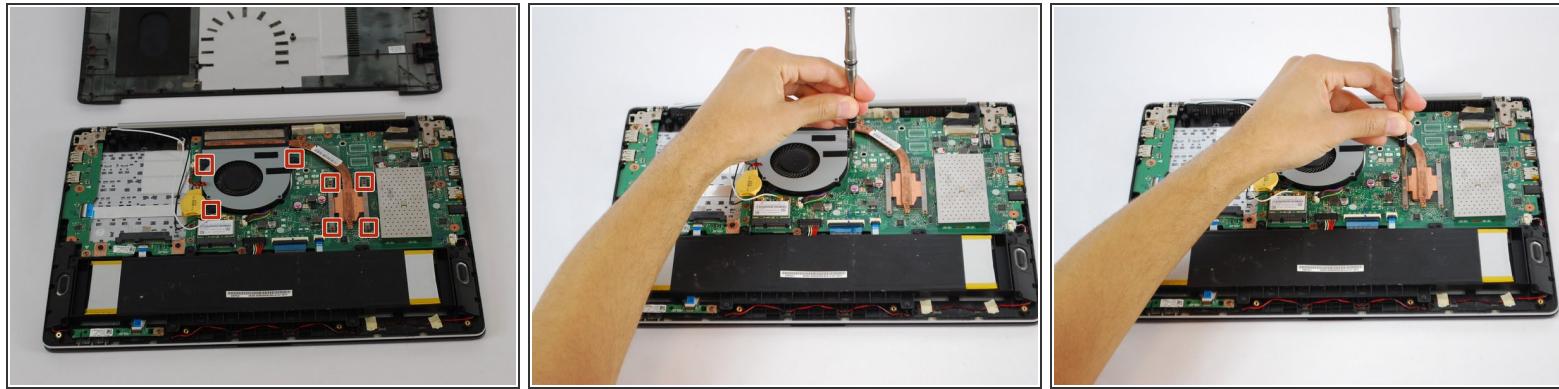


- Using a Phillips #1 Screwdriver remove the three 3 mm black screws and four 2 mm copper screws holding the fan and heat sink in place.

Step 6

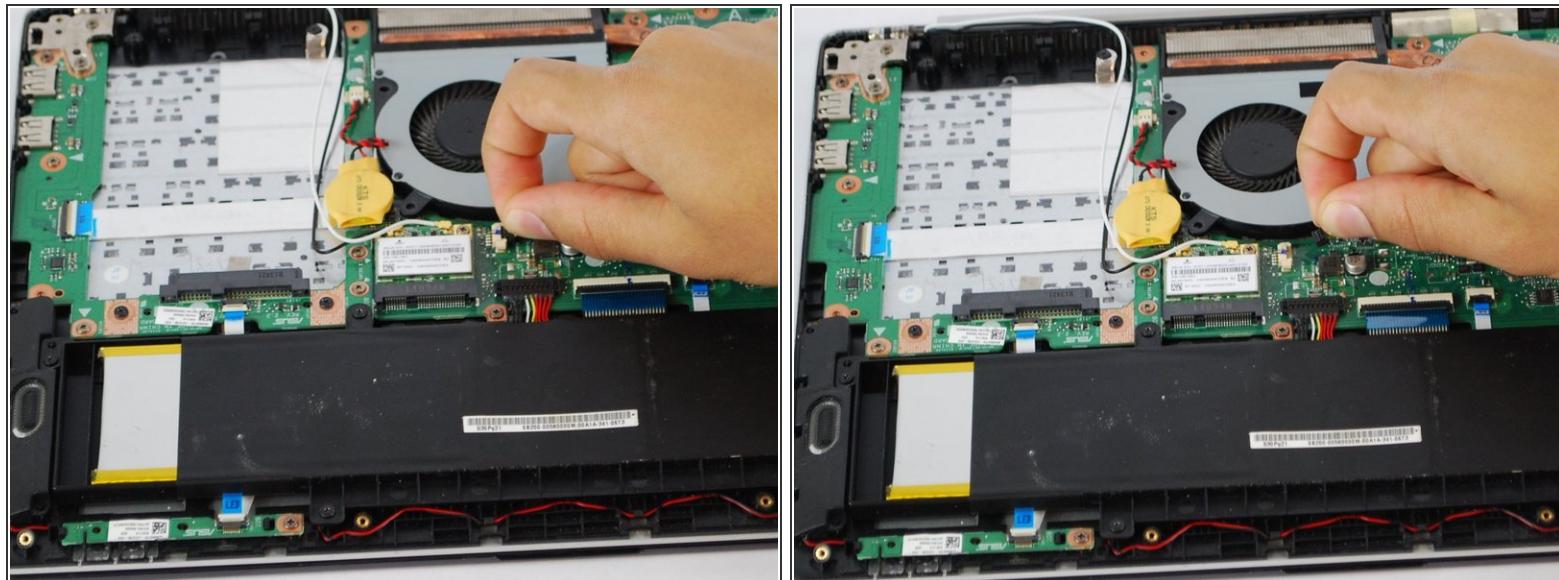

- Remove the wire connecting the fan to the motherboard.

Step 7

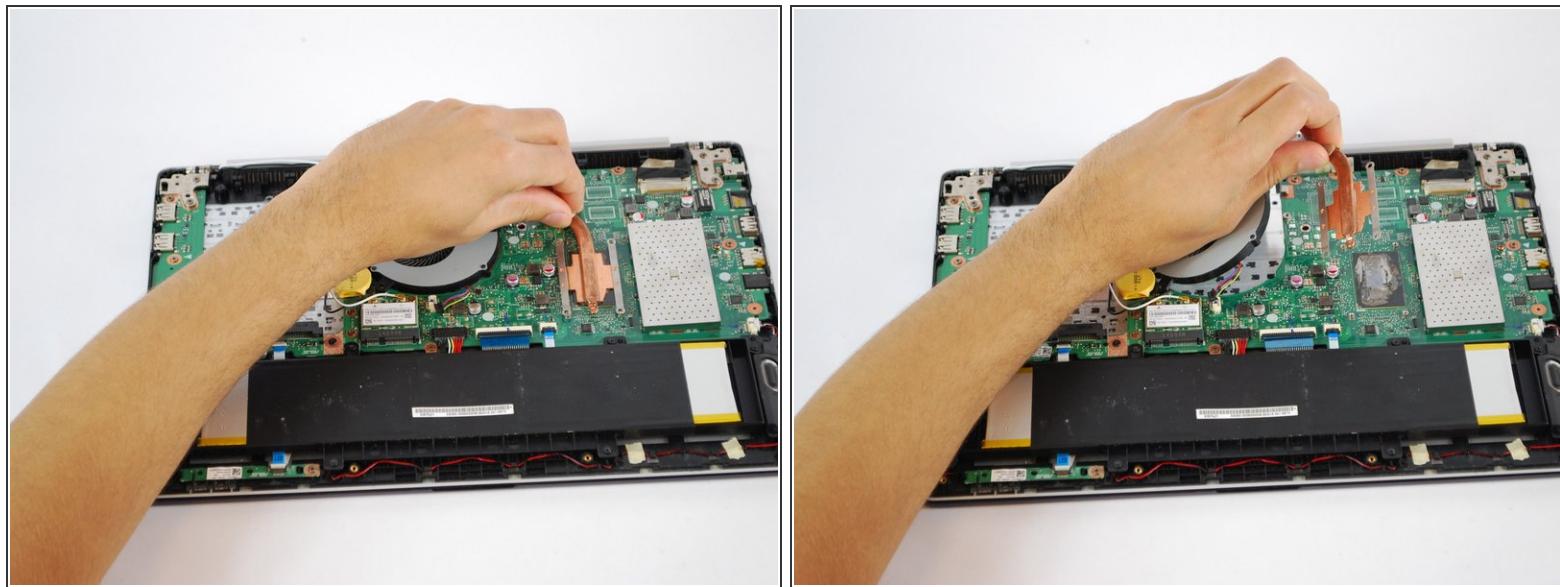

- Gently remove the fan and heat sink from the motherboard.
- ☒ On reassembly, be sure to clean the CPU and heat sink and reapply thermal compound to the CPU. Follow [this guide](#) to learn how.

To reassemble your device, follow these instructions in reverse order.