



# Asus X200MA Battery Replacement

A few screws and your battery is out.

Written By: Vanessa Garcia



## INTRODUCTION

If your battery is giving you a hard time on your laptop, follow this guide.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Back Panel



- Remove the following six screws:
  - Six 4 mm screws using a Phillips #0 screwdriver.
- Remove the following one screw:
  - One 14 mm screw using a Phillips #0 screwdriver.

 The 14mm screw goes in the center.

## Step 2



- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

## Step 3 — Battery

- Take two rubber caps off the back side of the laptop.




## Step 4

- Remove the following two screws under the rubber caps.
- Two 14 mm screws using the Phillips #0 screw driver.



## Step 5

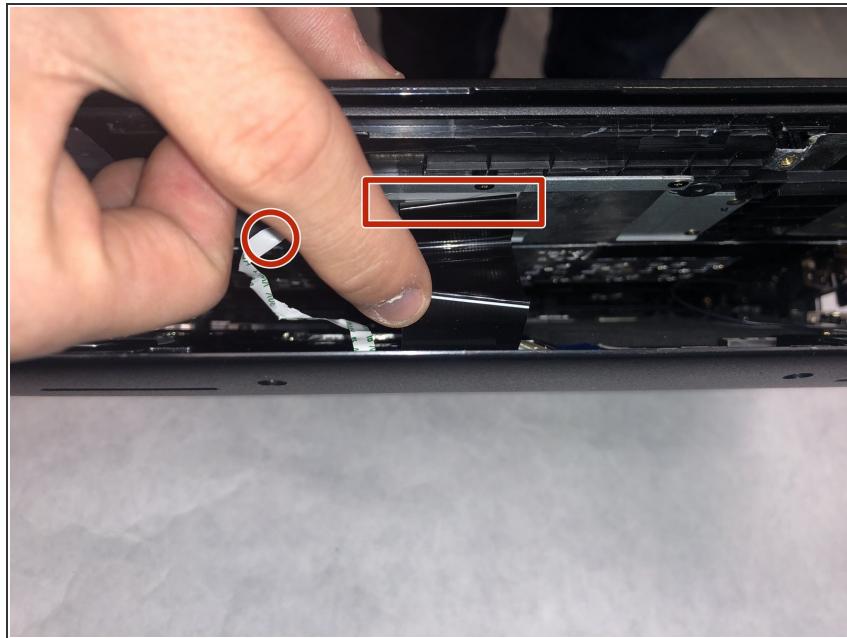


- Flip up the following:
  - The two latches holding the two cables shown (white and black)
- Pull the cables free from the latches
- Lift the keyboard from the computer

## Step 6



- Remove the following screws from the inside of the laptop:
  - Two 4 mm screws using the Phillips #0 Phillips screwdriver.
  - One 5 mm screw using the Phillips #0 Phillips screwdriver located in the center a little below the battery.

## Step 7

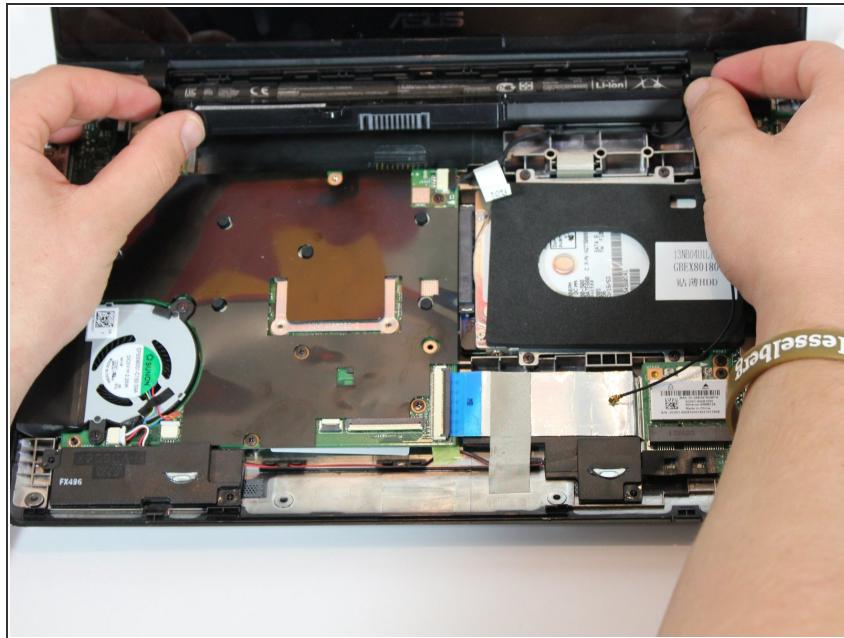

- Slide the battery up and out.

To reassemble your device, follow these instructions in reverse order.