



Asus X200MA Keyboard Assembly Replacement

In order to get to the inside of the laptop, these steps will help guide you through removing the keyboard assembly.

Written By: Vanessa Garcia



 **TOOLS:**

- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Back Panel



- Remove the following six screws:
 - Six 4 mm screws using a Phillips #0 screwdriver.
- Remove the following one screw:
 - One 14 mm screw using a Phillips #0 screwdriver.

 The 14mm screw goes in the center.

Step 2



- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

To reassemble your device, follow these instructions in reverse order.