



# Asus X202E-UH31T Battery Replacement

This guide walks you through the process of replacing a bad or faulty battery.

Written By: Brandon Bloomfield



## INTRODUCTION

If your AsusX202E does not turn on or loses power quickly use this guide to replace the battery.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Remove the 9 1.2mm phillips head screws on the bottom of the computer using a small Phillips head screw driver.

## Step 2




- Use a plastic opening tool to open the components of the laptop. In order to do this, insert the plastic opening tool in between the two covers then pry open.

## Step 3




- Once the back is off the device, unscrew the 7 1.2mm phillips head screws that hold the battery in place using a small phillips head screw driver

## Step 4

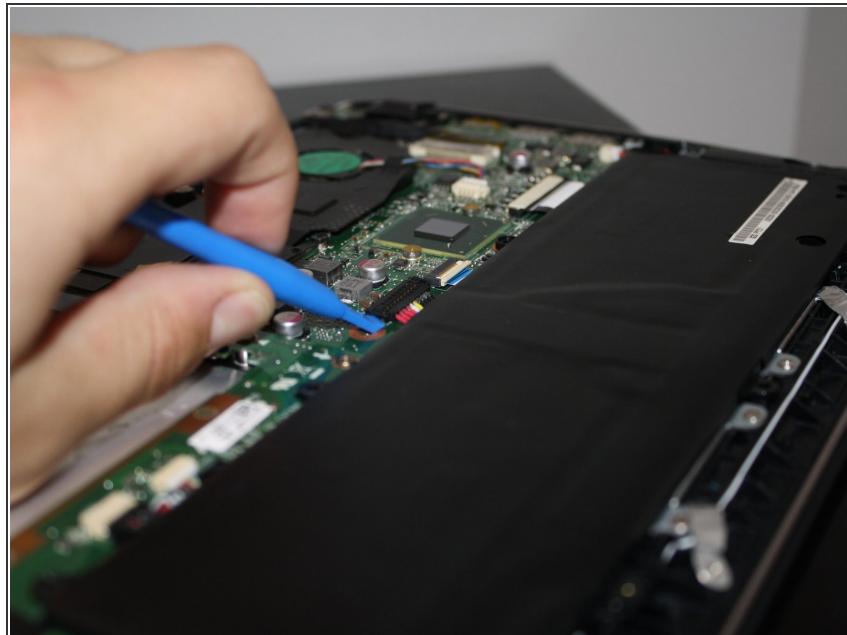

- Once the screws holding the battery are out, use the plastic opening tool to disconnect the battery cable ribbon from the motherboard

## Step 5

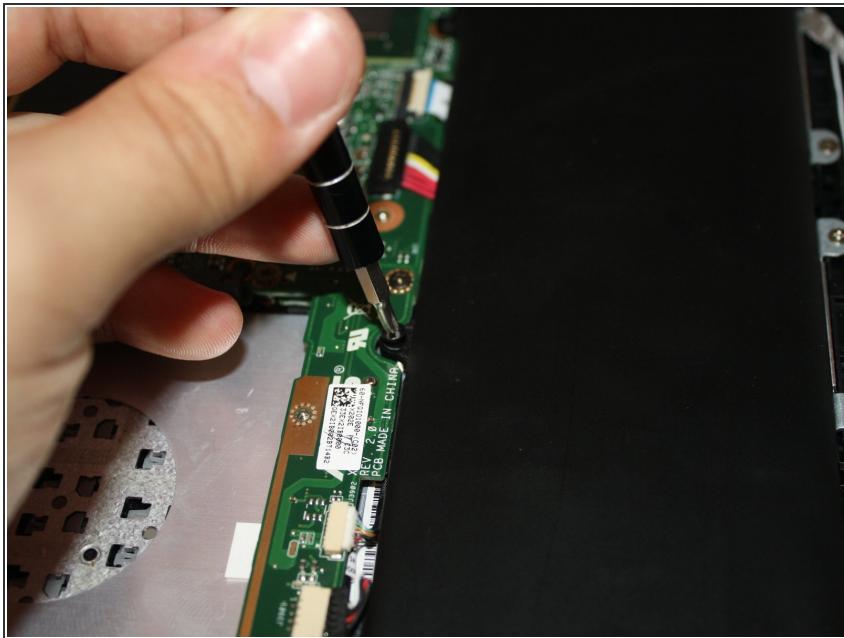

After replacing the battery, attach the wire ribbon to the motherboard and screw the designated screws back into the battery to secure it

To reassemble your device, follow these steps in reverse order.