



# Asus X5511M-RCLN03 Battery Replacement

This guide will show how to remove the battery from the Asus X5511M-RCLN03.

Written By: Ryann Easterbrook



## INTRODUCTION

In this guide, you will learn how to remove or replace the battery of your laptop.

### TOOLS:

- Heavy-Duty Spudger (1)
- Phillips #00 Screwdriver (1)

### PARTS:


- Replacement Battery (1)

## Step 1 — Battery




- Position the laptop with the back cover facing upward.

## Step 2

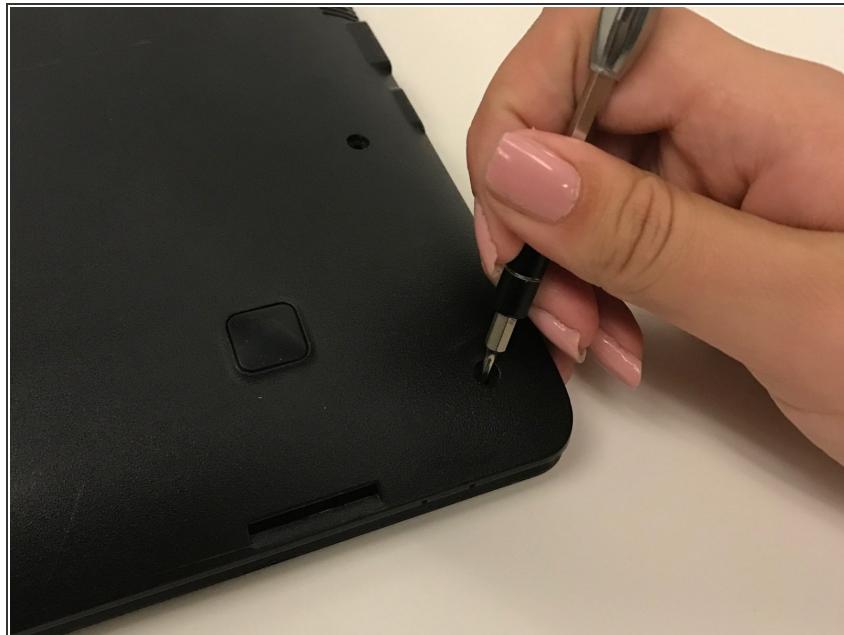


- Remove all 4 mm screws using a #00 Philip's screwdriver.

## Step 3

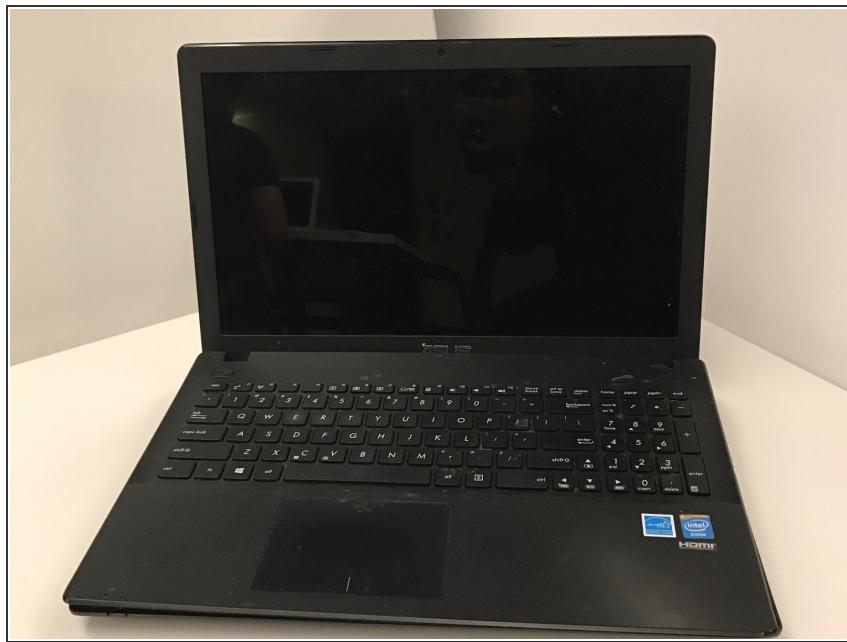

- Open the laptop with the keyboard facing upward.

## Step 4

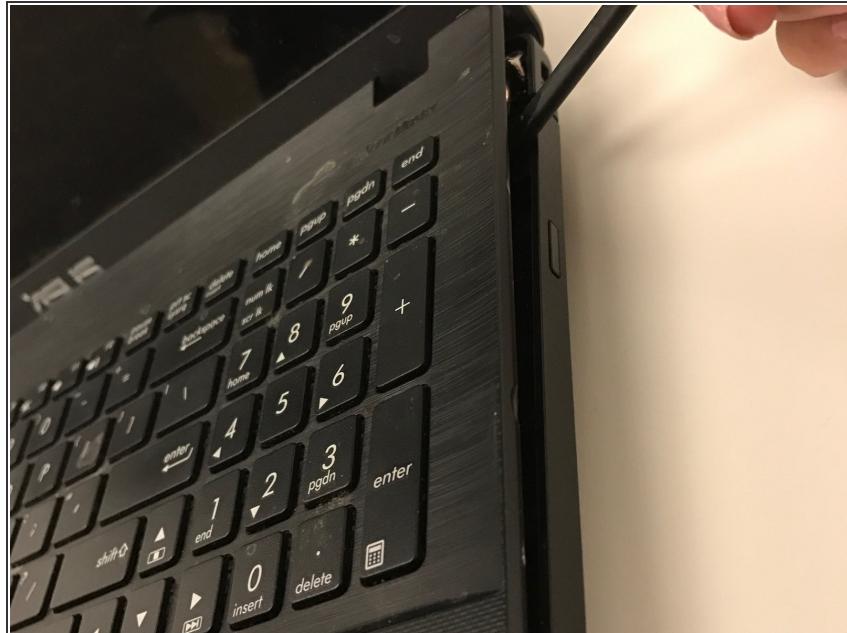


- Carefully pry up the keyboard cover with your fingers or with a plastic spudger.

## Step 5



- Remove electrical ribbons by gently lifting up the tab that is holding them down, then pulling them gently.

## Step 6

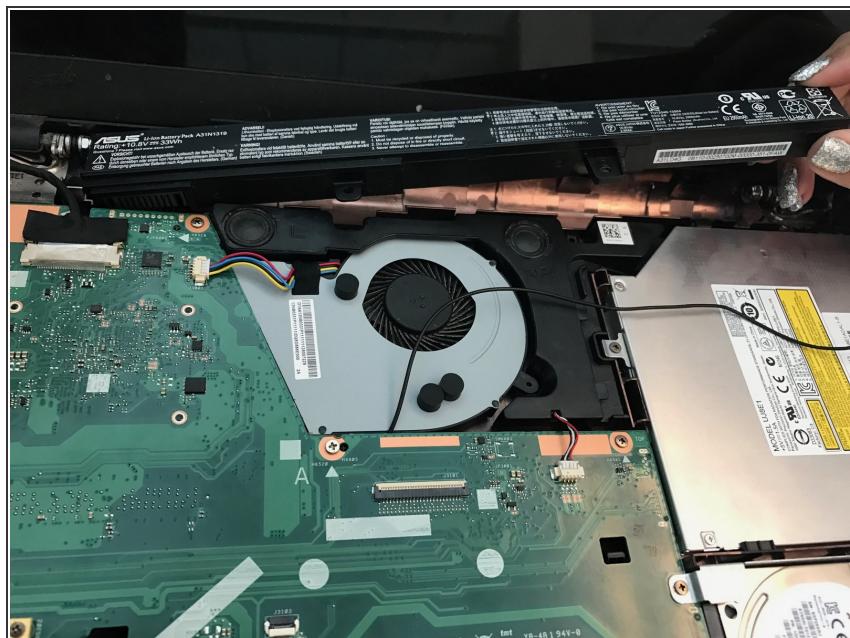

- Set the keyboard plate aside. Gently lift up battery to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-23 08:53:27 AM (MST).

