



# Asus X555LA-SI305041 Battery Replacement

This guide will give you step by step instructions to replacing the battery on the Asus X555LA laptop.

Written By: Garrett Doll




## INTRODUCTION

This guide will step you through replacing the battery in the Asus X555LA.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Keyboard Assembly

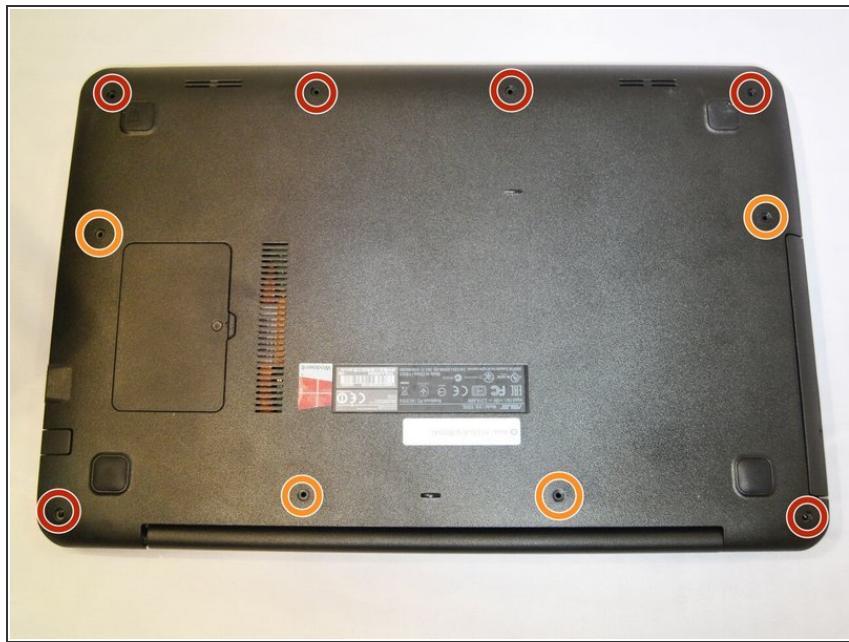

- Remove the following Phillips #0 screws from the lower case:
  - Six 9 mm screws
  - Four 11 mm screws


## Step 2



- Use the plastic opening tool to separate the top cover from the laptop.
- Start by prying on the front of the laptop.
- Continue prying around the cover and end just under the screen to release the front cover.


 Do not fully remove the top cover, it is attached by two ribbon cables that will be disconnected in the following steps.

## Step 3

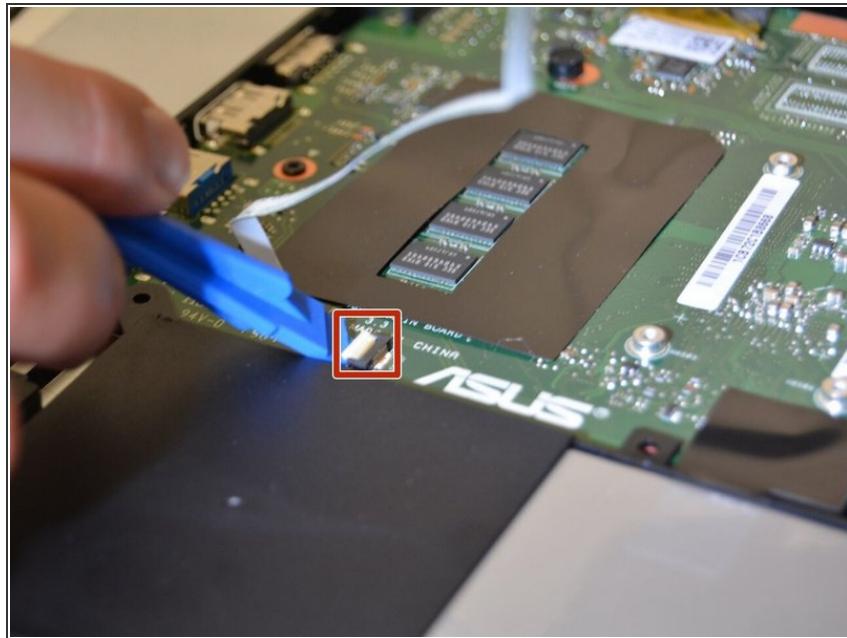

- To release the ZIF latch, flip up the small white tab.
- Pull the white ribbon cable out of the socket to disconnect it.

## Step 4

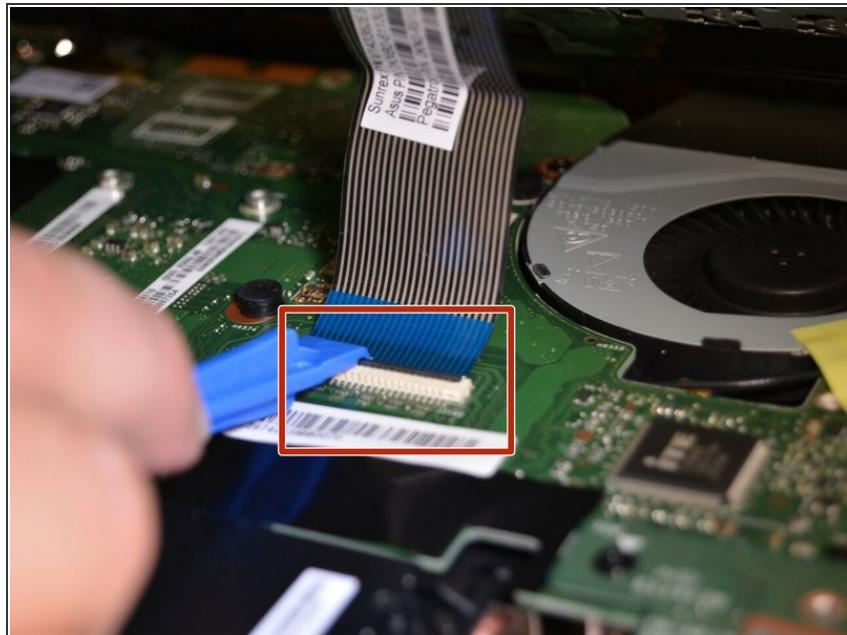


- To release the ZIF latch on the keyboard cable, flip the gray tab up.
- Gently pull the black and blue ribbon cable out of its connector.

## Step 5




- You can now fully remove the keyboard and front panel to gain access to the inside of the laptop.

## Step 6 — Battery

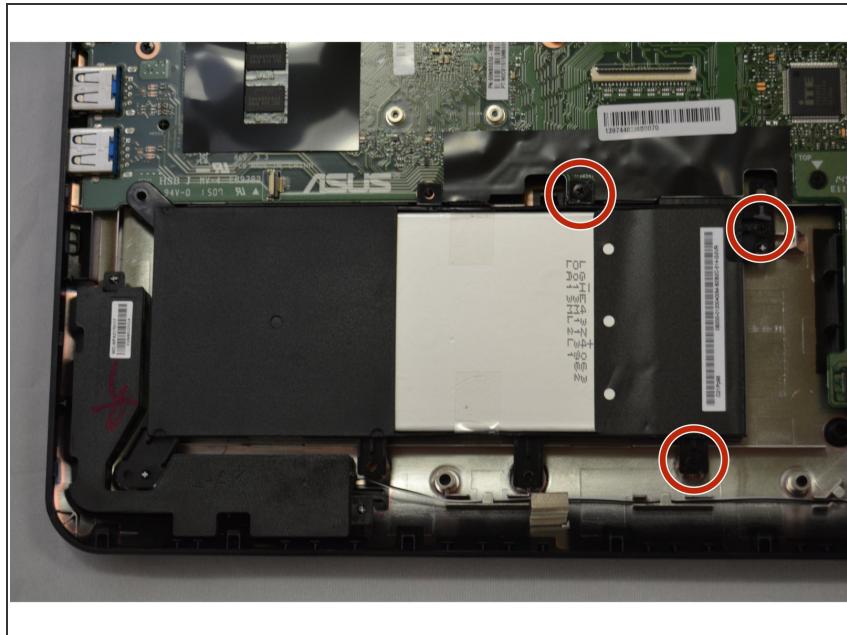

- Remove the three 5mm Phillips #0 screws securing the battery.

## Step 7

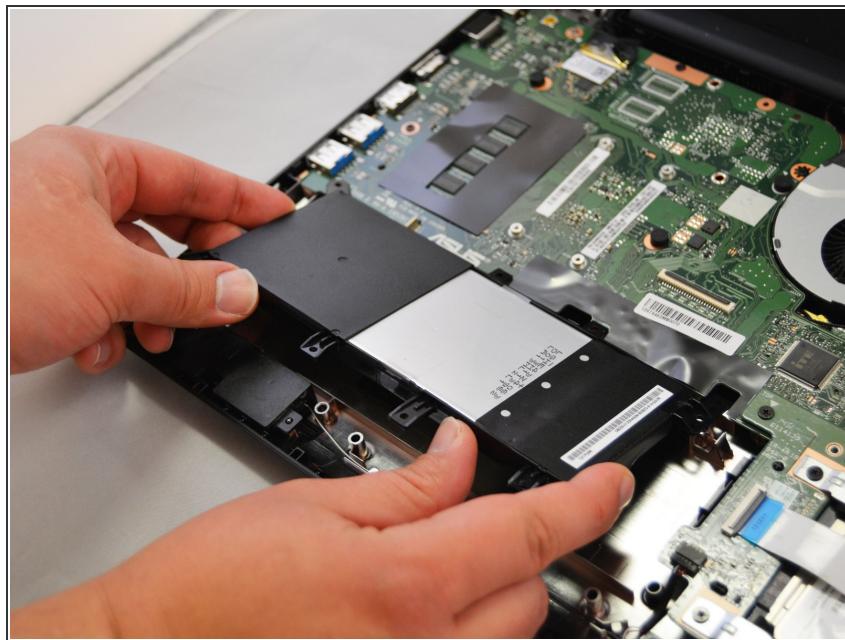

- Gently remove battery from casing.  
The battery should remove easily.
- Replace with new battery.

To reassemble your device, follow these instructions in reverse order.