


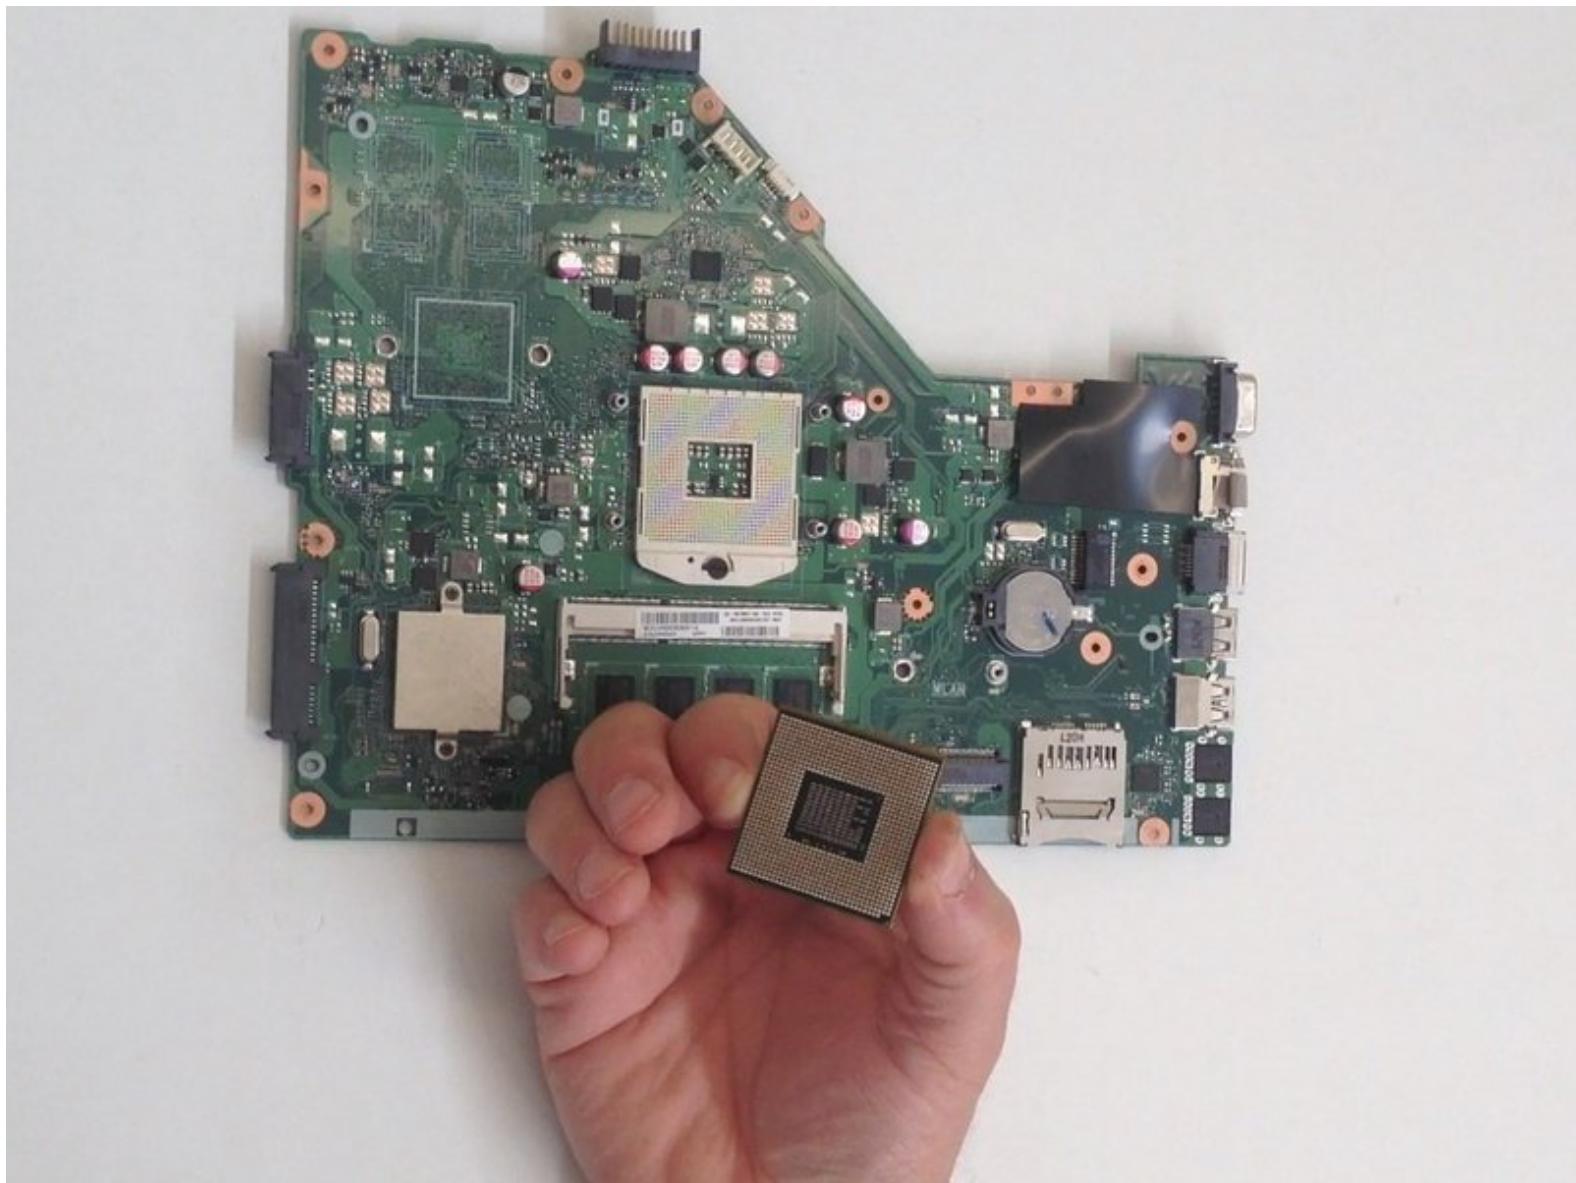

# Asus X55C CPU Intel Replacement

Asus X55C CPU Intel Replacement

Written By: ZFix



# INTRODUCTION

How to disassemble the laptop and replace the Processor.

\_\_\_\_\_ **Video manual:** \_\_\_\_\_

[video: <http://youtu.be/zRjcZQ59SSY>]

## **TOOLS:**

- Tweezers (1)
- Utility Knife (1)
- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

## **PARTS:**


- Arctic Silver Thermal Paste (1)

## Step 1 — Keyboard





- Switch off the laptop and remove the battery.

## Step 2

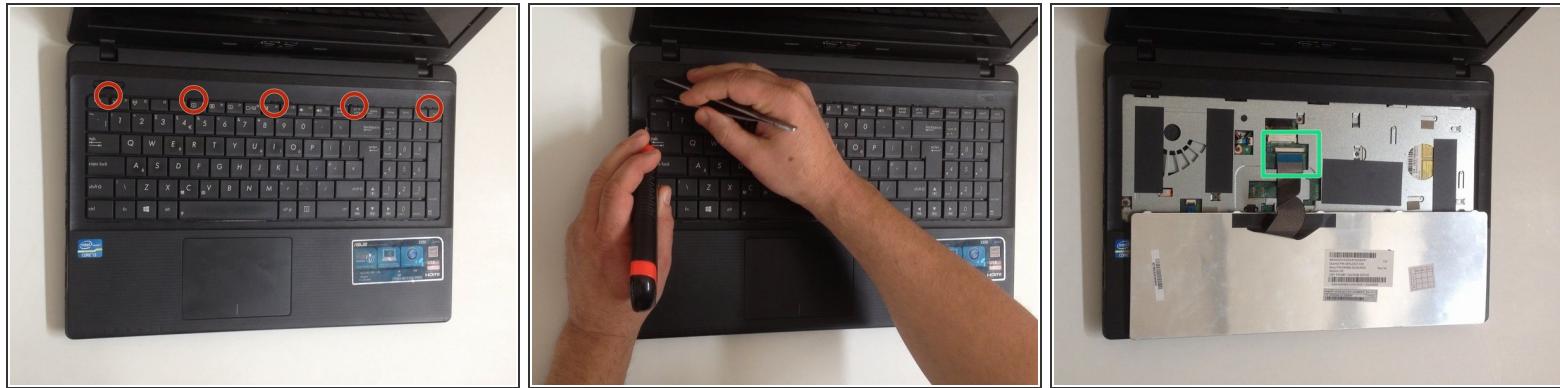

- The Keyboard is held by 5x locking clips.
- Pick up a little the one side of the Keyboard and start opening the clips one by one.
- Disconnect the Keyboard flex cable from the mother board and remove the KB.
- **[Please SUBSCRIBE to my channel](#)** ↗

## Step 3 — Motherboard

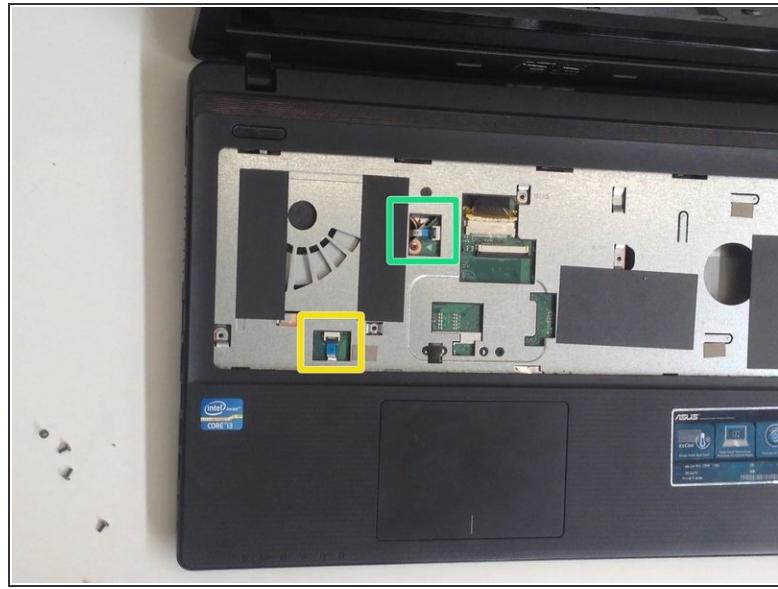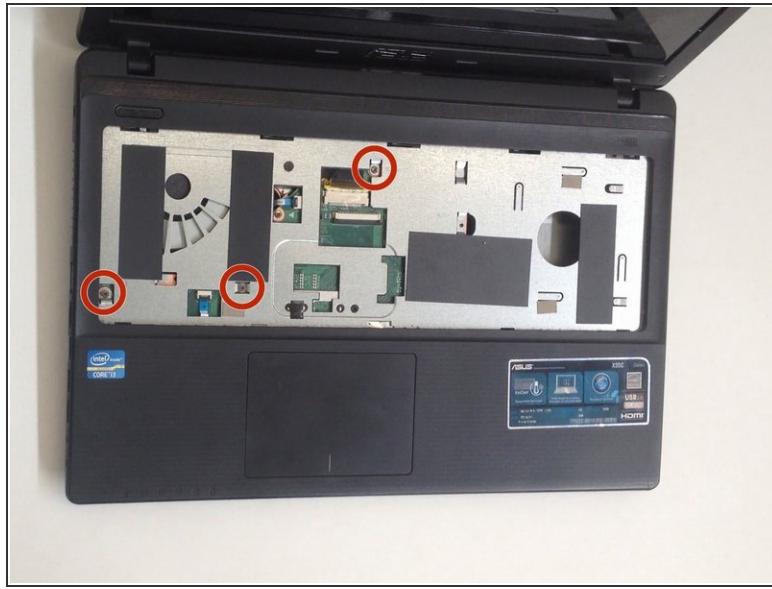

- Remove 3x Philips screws.
- Disconnect the two small flex cables:
  - Power On button flex cable
  - Touch pad flex cable

## Step 4



- Unscrew the two Philips screws and remove the HDD / RAM Cover.
- Remove three screws securing the hard drive caddy (hard drive assembly).
- Slide the hard drive assembly to the left to disconnect it from the motherboard.

This document was generated on 2019-09-23 03:24:41 PM (MST).

## Step 5




- Disconnect the two coaxial antenna cables from the Wi-Fi card.
- Remove any Memory or Dummy card.

## Step 6



- The bottom cover is held by 10x Phillips screws. Remove them.
- With a plastic tool separate the Upper cover and remove it.

## Step 7

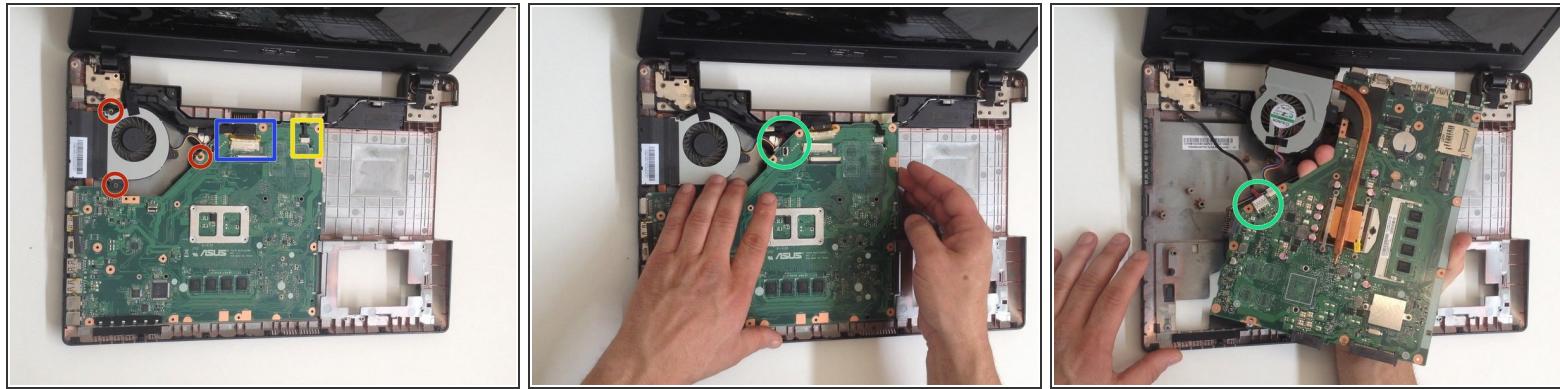



- Disconnect:
  - The Microphone cable
  - The LCD Display flex cable
- Remove 3x Phillips screws.
- Lift the board first from the right edge.
- There is another one cable, from the DC connector, connected to the underside of main board. We should spin the the board to disconnect the DC connector cable.

## Step 8




- ASUS X55C iCore with 4GB no board RAM motherboard, model: **60-N0OMB1100**
- [Please SUBSCRIBE to my channel](#) ↗

## Step 9 — CPU Intel

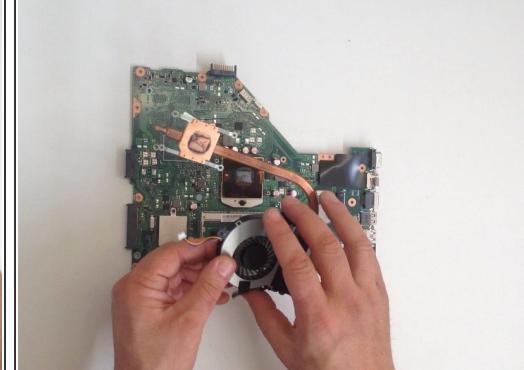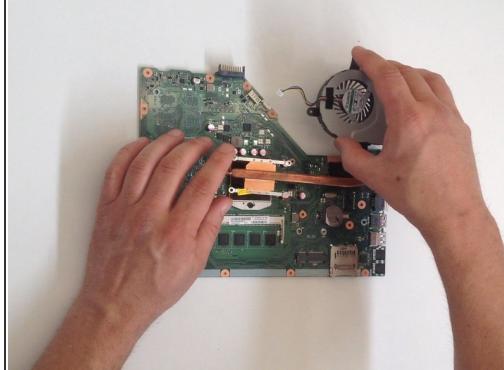

- Disconnect the Fan cable from the Motherboard.
- Remove the screws (4x Phillips screws) that hold the cooling system to the Motherboard
- Remove the Cooling System.

## Step 10

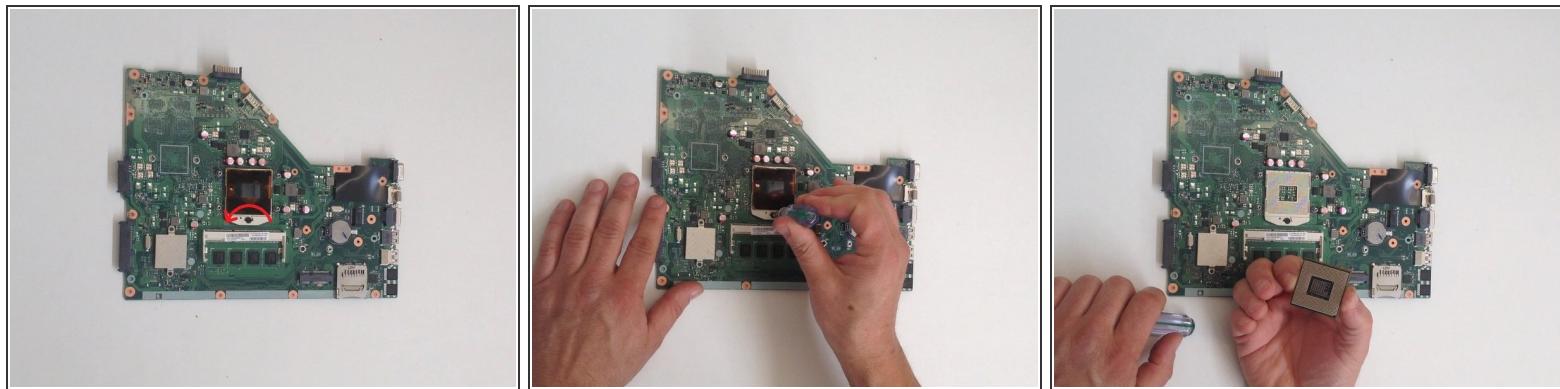

- Counter clockwise release the screw securing the CPU using a flat head screwdriver.
- ⚠ Guideline, lift with equal pressure on two sides of the processor chip to avoid bending any of the pins.
- **Intel Core i3-2370M**
- ⚠ Before installing the new CPU, clean the Cooling system and put new thermal compound / paste.

To reassemble your device, follow these instructions in reverse order.