


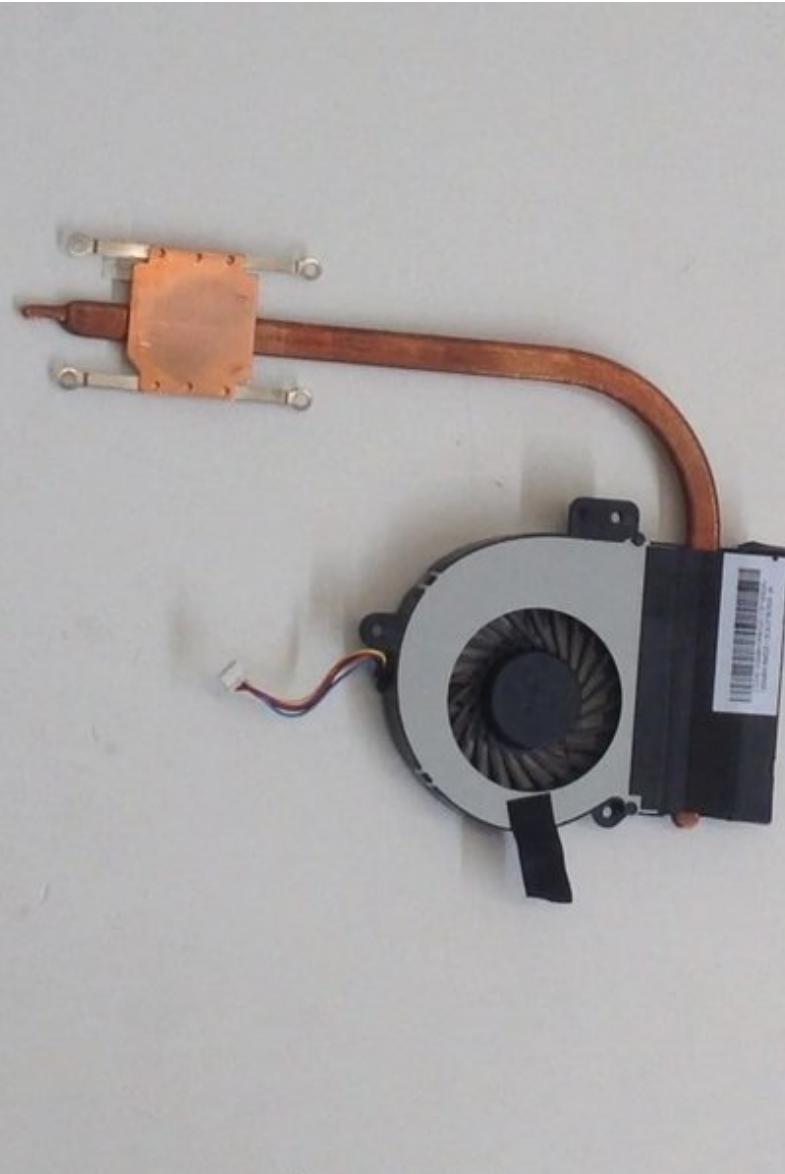

Asus X55C Cooling / FAN System Replacement

Asus X55C Cooling / FAN System Replacement

Written By: ZFix



INTRODUCTION

How to disassemble the laptop and replace the cooling / fan system.

_____ **Video manual:** _____

[video: <http://youtu.be/zRjcZQ59SSY>]

TOOLS:

- Tweezers (1)
- Utility Knife (1)
- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

PARTS:


- Arctic Silver Thermal Paste (1)

Step 1 — Keyboard




- Switch off the laptop and remove the battery.

Step 2

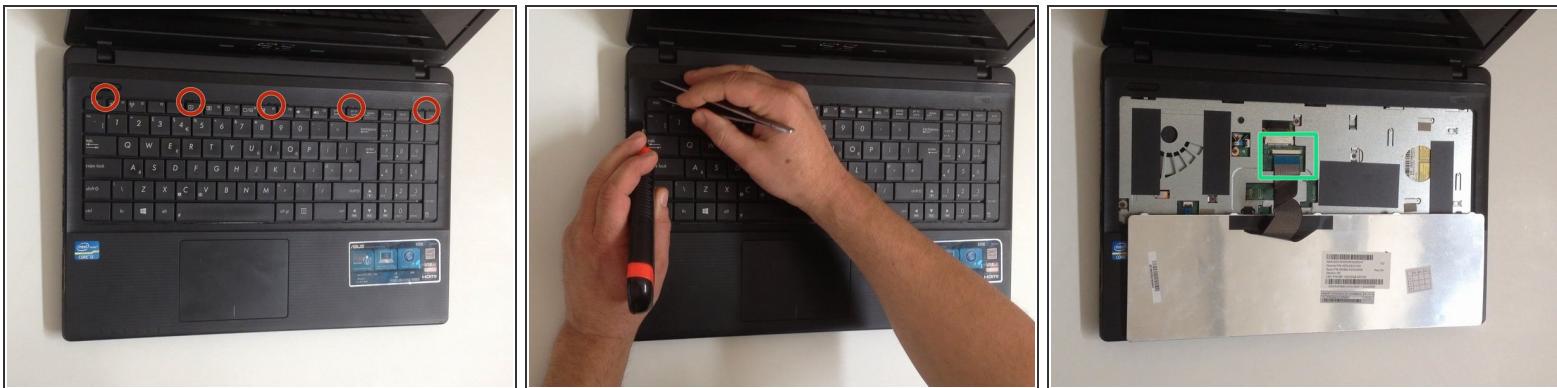

- The Keyboard is held by 5x locking clips.
- Pick up a little the one side of the Keyboard and start opening the clips one by one.
- Disconnect the Keyboard flex cable from the mother board and remove the KB.
- **[Please SUBSCRIBE to my channel](#)** ↗

Step 3 — Motherboard

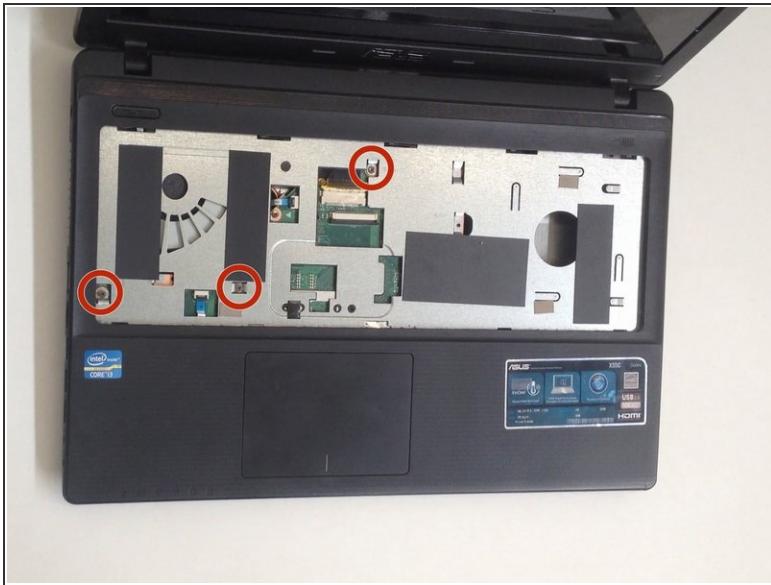

- Remove 3x Philips screws.
- Disconnect the two small flex cables:
 - Power On button flex cable
 - Touch pad flex cable

Step 4



- Unscrew the two Philips screws and remove the HDD / RAM Cover.
- Remove three screws securing the hard drive caddy (hard drive assembly).
- Slide the hard drive assembly to the left to disconnect it from the motherboard.

This document was generated on 2019-09-23 03:24:46 PM (MST).

Step 5




- Disconnect the two coaxial antenna cables from the Wi-Fi card.
- Remove any Memory or Dummy card.

Step 6



- The bottom cover is held by 10x Phillips screws. Remove them.
- With a plastic tool separate the Upper cover and remove it.

Step 7

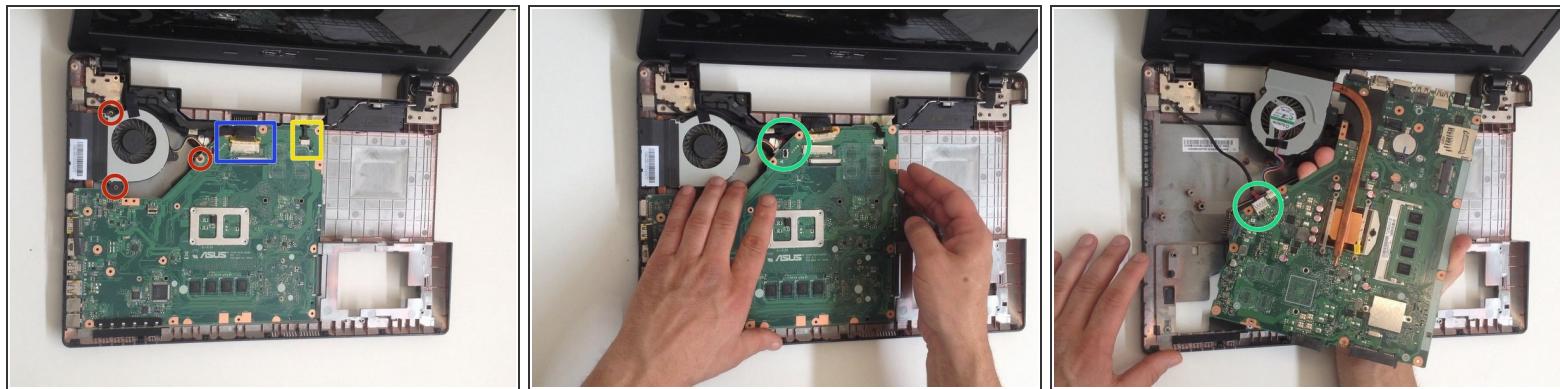


- Disconnect:
 - The Microphone cable
 - The LCD Display flex cable
- Remove 3x Phillips screws.
- Lift the board first from the right edge.
- There is another one cable, from the DC connector, connected to the underside of main board. We should spin the the board to disconnect the DC connector cable.

Step 8



- ASUS X55C iCore with 4GB no board RAM motherboard, model: **60-N0OMB1100**
- [Please SUBSCRIBE to my channel](#) ↴

Step 9 — Cooling / FAN System

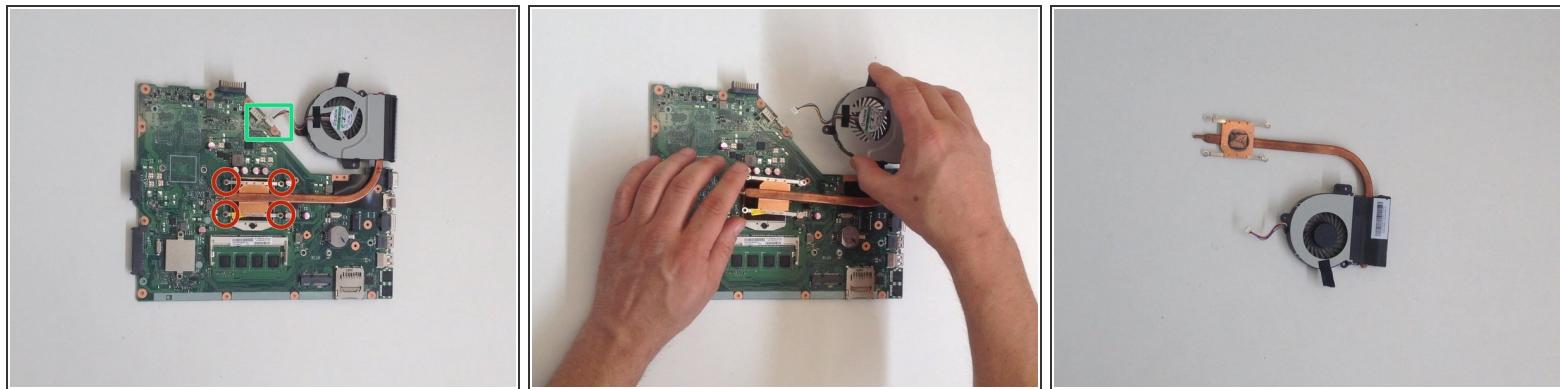

- Disconnect the Fan cable from the Motherboard.
- Remove the screws (4x Phillips screws) that hold the cooling system to the Motherboard
- CPU Cooling System - Cooling Heatsink and Fan.

⚠ Remove the Cooling System carefully, if you don't want to break the CPU.

⚠ Before installing the new Cooling System, clean the CPU and put new thermal compound / paste.

To reassemble your device, follow these instructions in reverse order.