


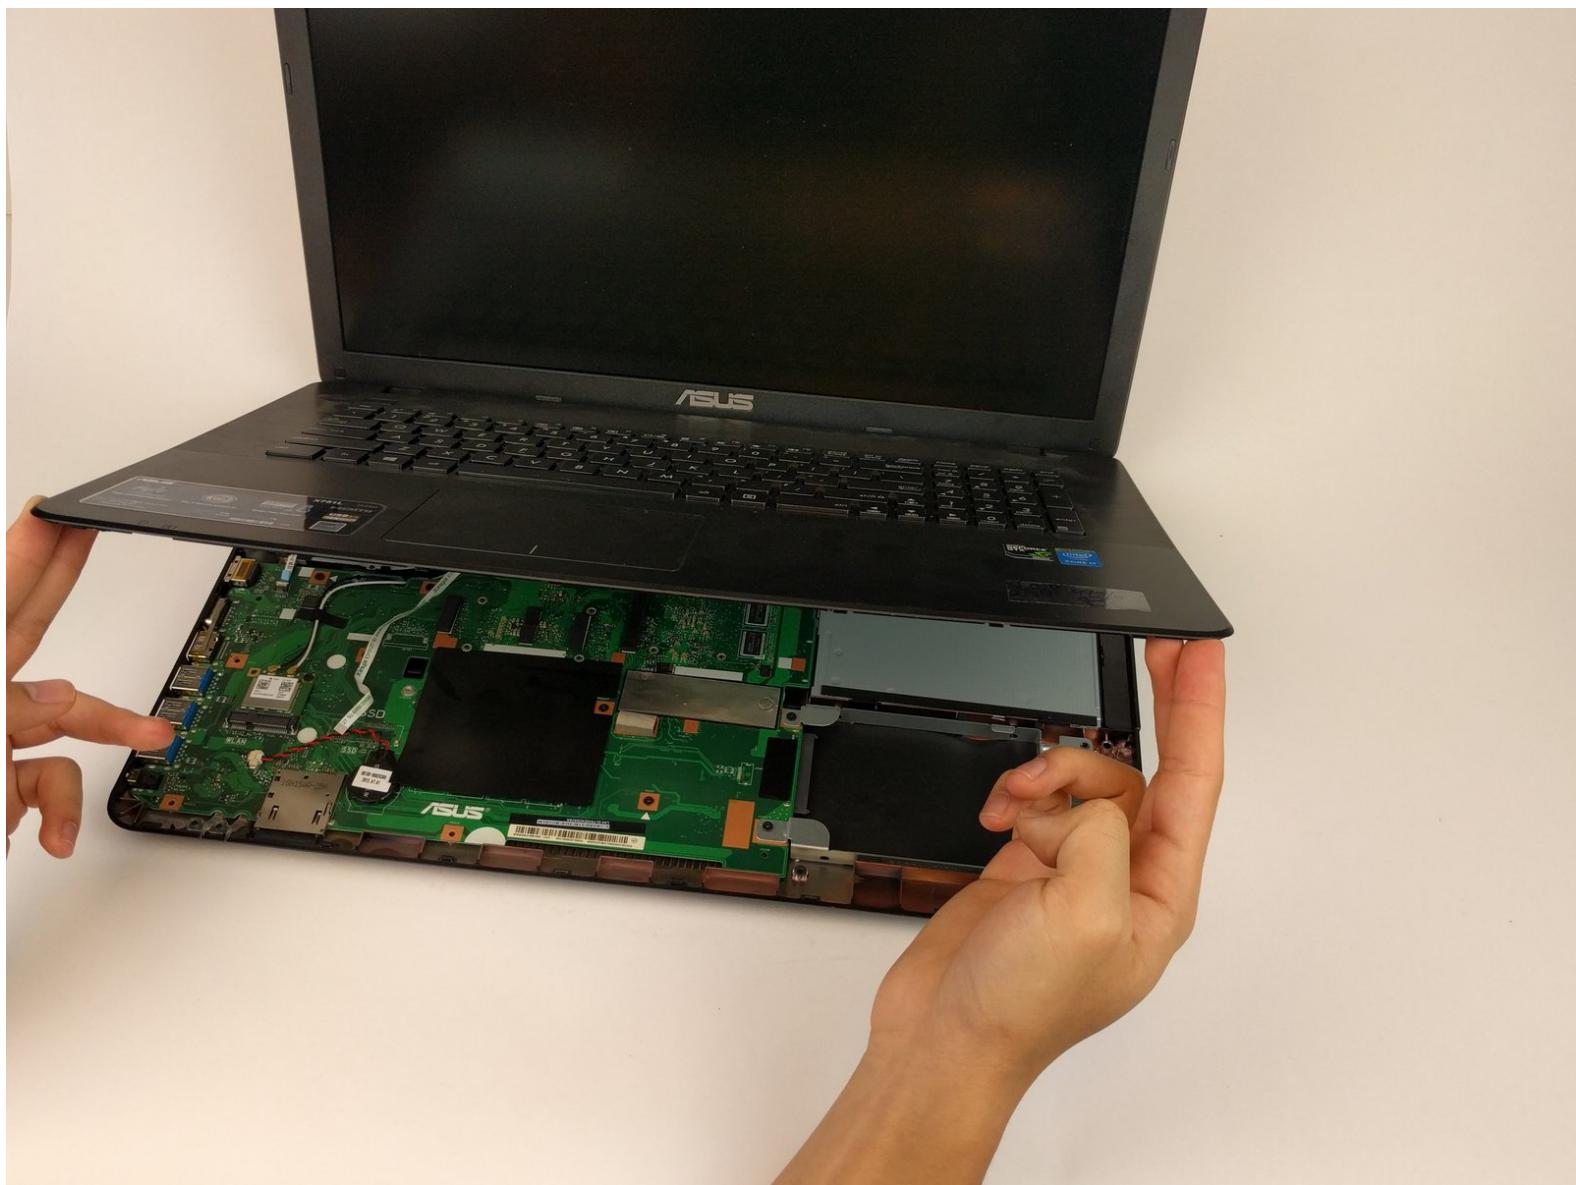

Asus X751L Keyboard Replacement

Use this guide to replace the keyboard on your Asus X751L.

Written By: John Enderton



INTRODUCTION

This guide will walk you through the process of replacing a broken or faulty keyboard on the Asus X751L.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Keyboard



- With the screen closed, place your laptop upside-down with the front facing you.
- Remove the six 14.6mm Phillips #00 screws.
- Remove the four 6.6mm Phillips #00 screws.


Step 2

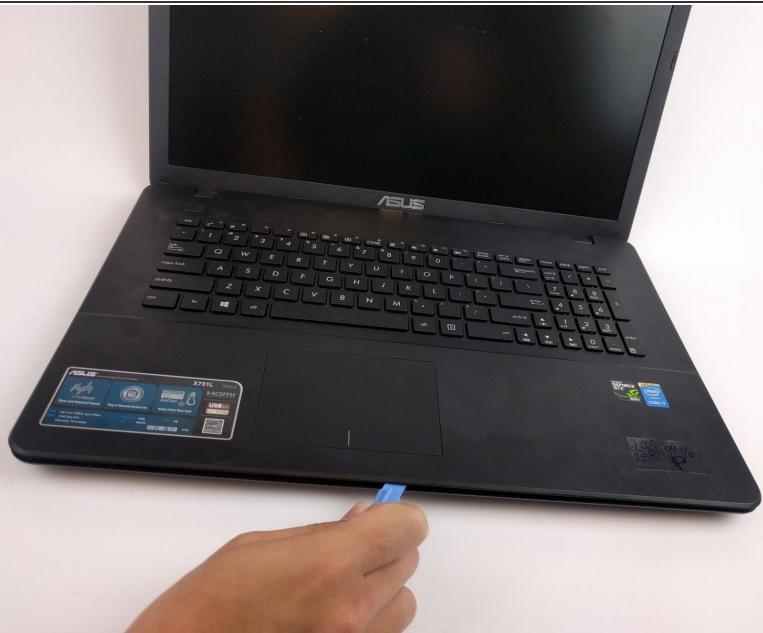

- Flip the laptop over and open the lid.
- Pry around the edges of the laptop base using the plastic opening tool.

 Prying too hard can break the plastic clips.

Step 3

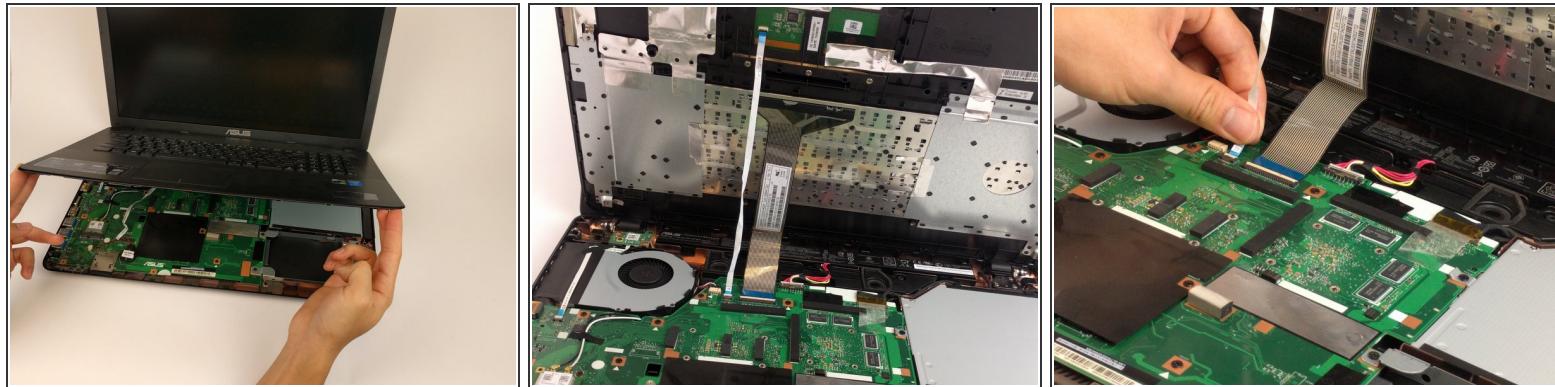

- Carefully lift the keyboard up.
⚠ Be very careful when lifting the keyboard up. Two zero insertion force (ZIF) cables are between the keyboard assembly and the motherboard. Do not lift the assembly too high.
- Disconnect the two ZIF connectors from the motherboard using your fingernail to lift the cream-colored tab.

To reassemble your device, follow these instructions in reverse order.