



Asus ZenBook Flip UX360C Battery Replacement

Removal and replacement guide for the Asus ZenBook Flip UX360C Battery

Written By: Jeff Schuitema



INTRODUCTION

This guide will walk-through the removal and replacement process for the Asus ZenBook Flip UX360C Battery.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Anti-Static Wrist Strap](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Attach an ESD wristband to your wrist and clip the grounding clamp to a grounded metal object.

Step 2




- Remove all eleven 5 mm, Phillips #1 screws on the back cover.

Step 3




- Use a plastic opening tool to remove the keyboard panel.

Step 4

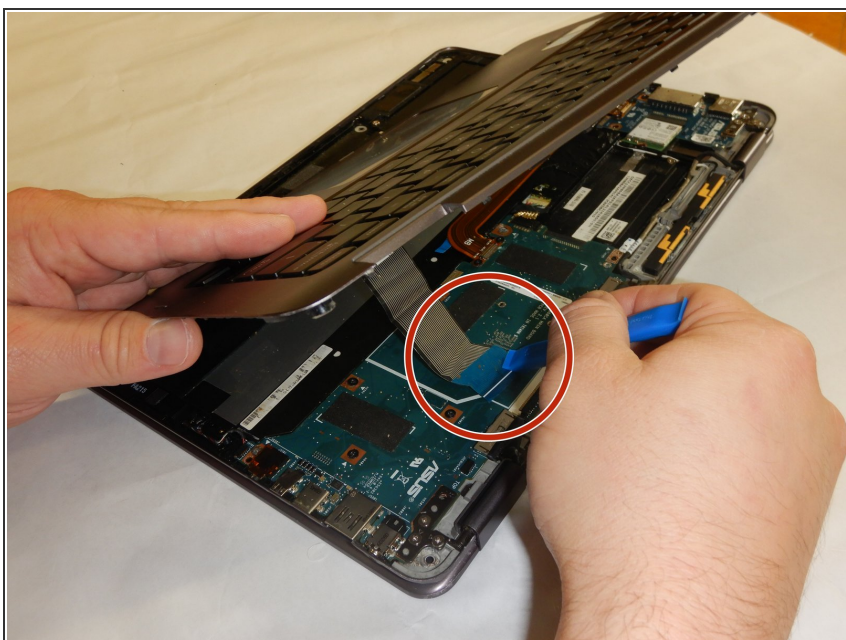


- Use a plastic opening tool to disconnect the ZIF keyboard ribbon cable from the motherboard.

Step 5

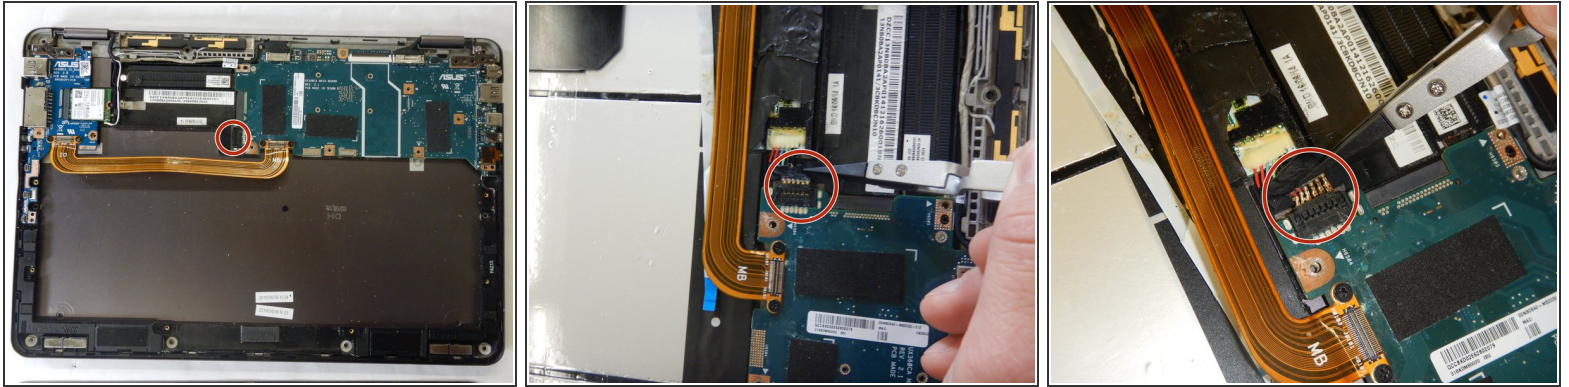


- Detach the battery connection using plastic tweezers.

Step 6

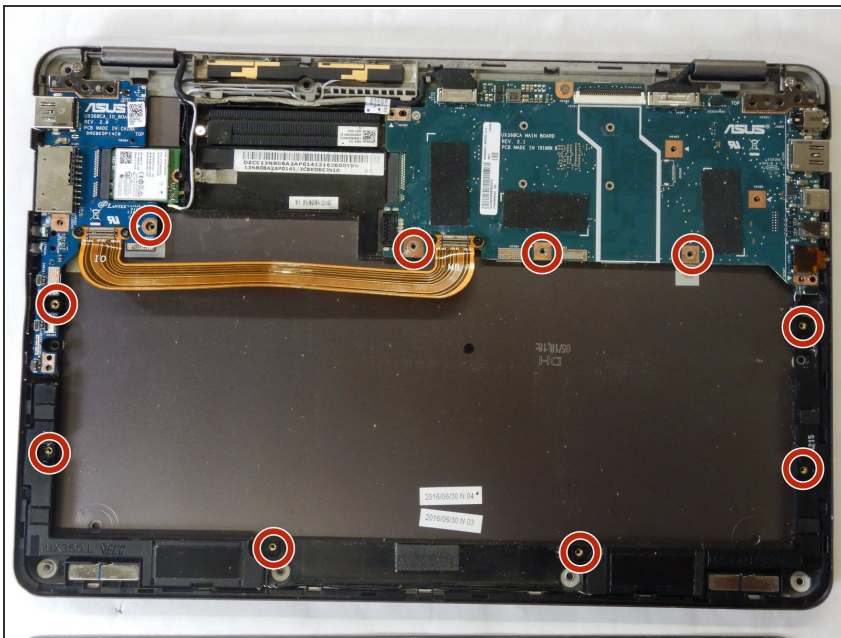

- Remove all ten Phillips #1 battery retaining screws.

Step 7

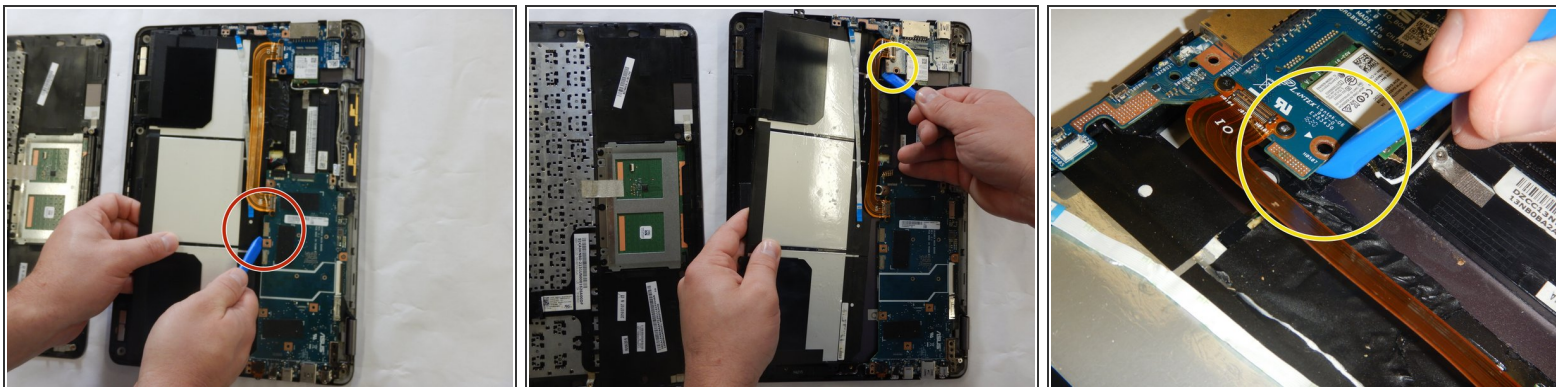

- Apply gentle pressure upwards to the electrical board with a plastic opening tool while lifting the battery to remove.
- Insert a new battery.

To reassemble your device, follow these instructions in reverse order.