


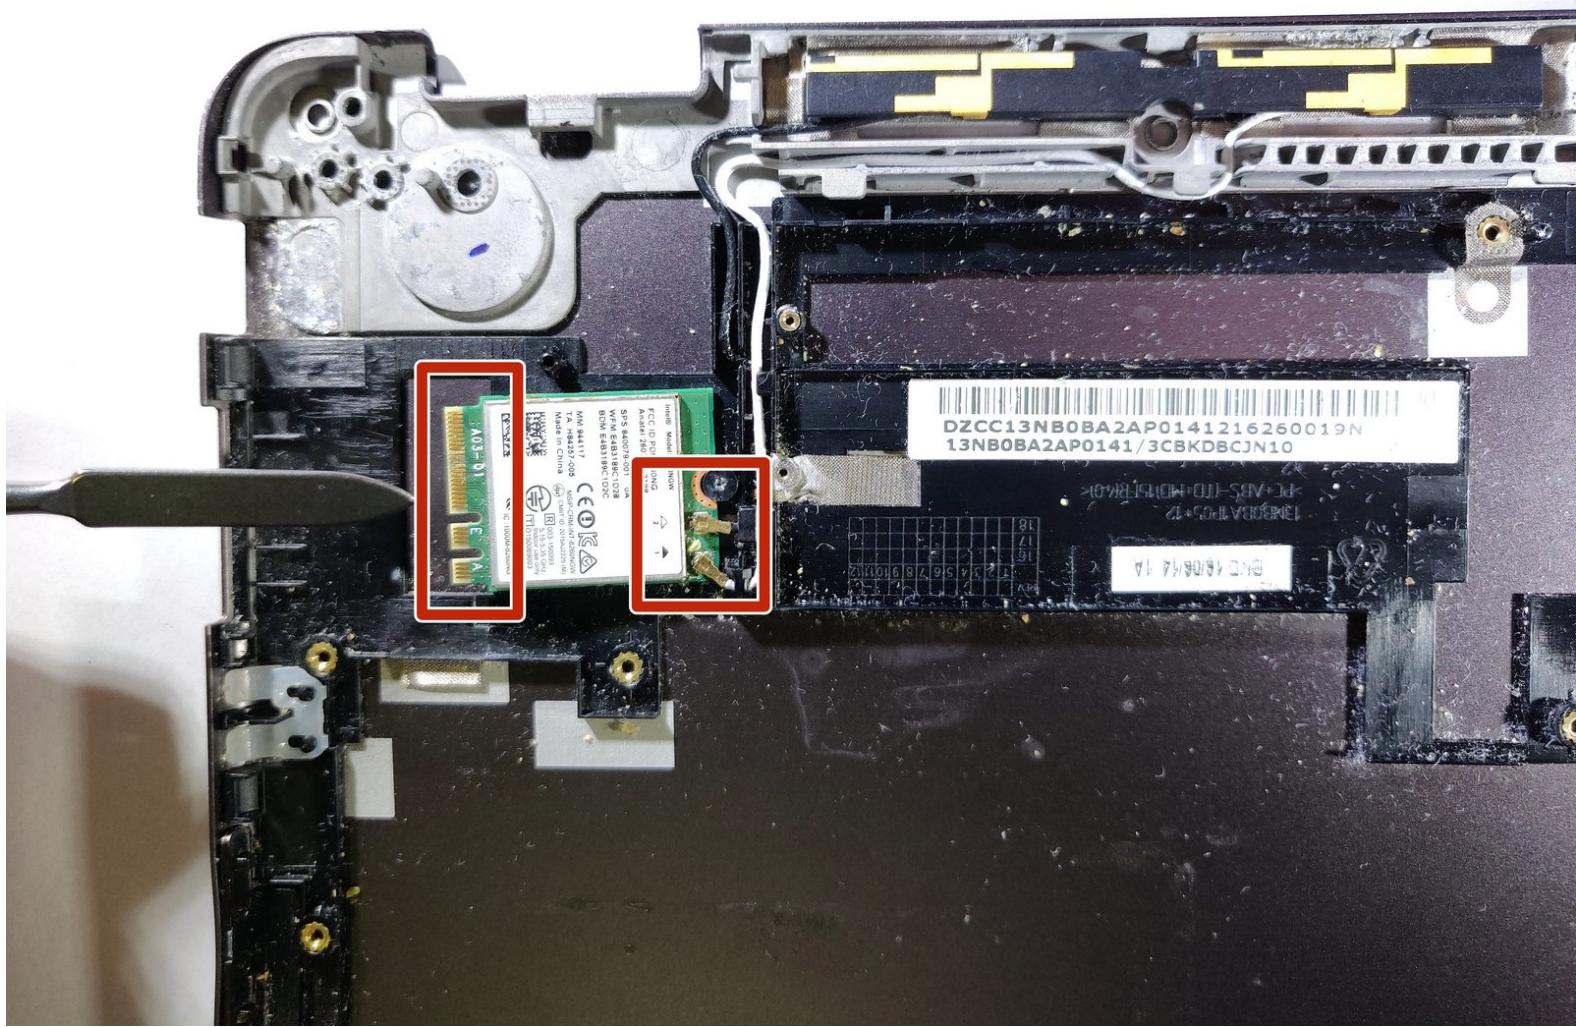

# Asus ZenBook Flip UX360C Wi-Fi Wireless Card Replacement

This guide explains how to replace the wi-fi wireless card in the Asus ZenBook Flip UX360C.

Written By: Daniel Updyke



## INTRODUCTION

The wi-fi wireless card allows your device to connect to the internet via a wireless connection, and is a vital part of your device.

### TOOLS:

- [Metal Spudger \(1\)](#)
- [Spudger \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Motherboard




- Remove all ten 5 mm Phillips #1 screws on the back cover.

## Step 2




- Use a metal spudger to gently separate the keyboard from the computer case.
- ⚠ Do not completely remove the keyboard as there are two ribbon cables that connect the keyboard to the motherboard.
- Lift the keyboard slightly, and use a plastic spudger to release the two ZIF connections to free each ribbon cable.
- Remove the keyboard.

## Step 3

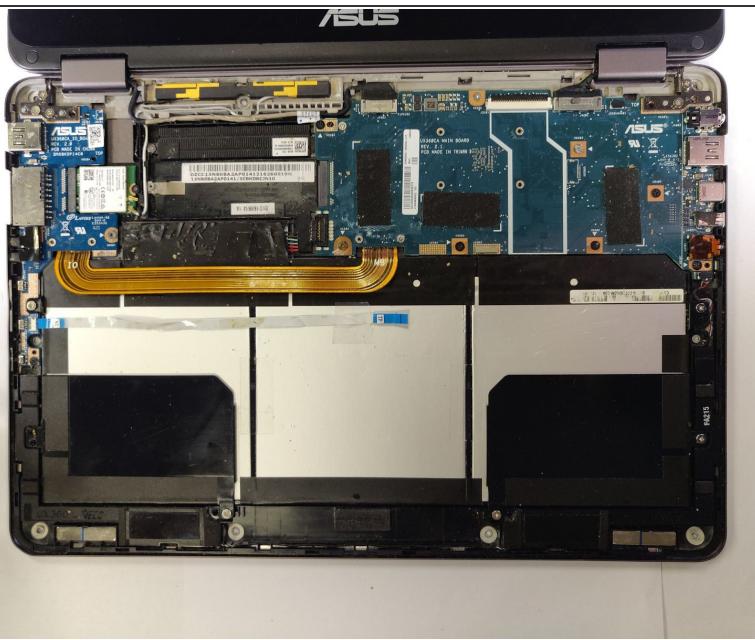



- Use the Phillips #1 screwdriver to remove all 5 mm screws.

## Step 4

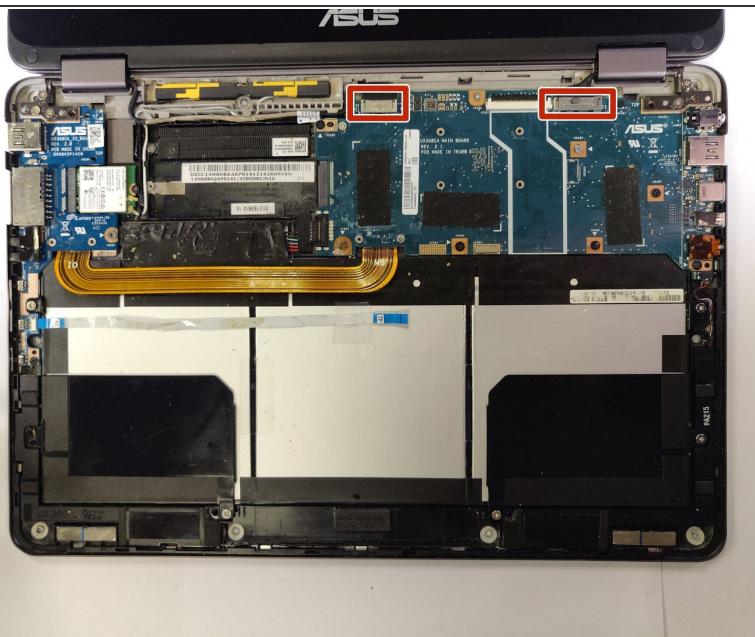

- Use a plastic opening tool or nylon spudger to lift the monitor connections off of the main board.


## Step 5

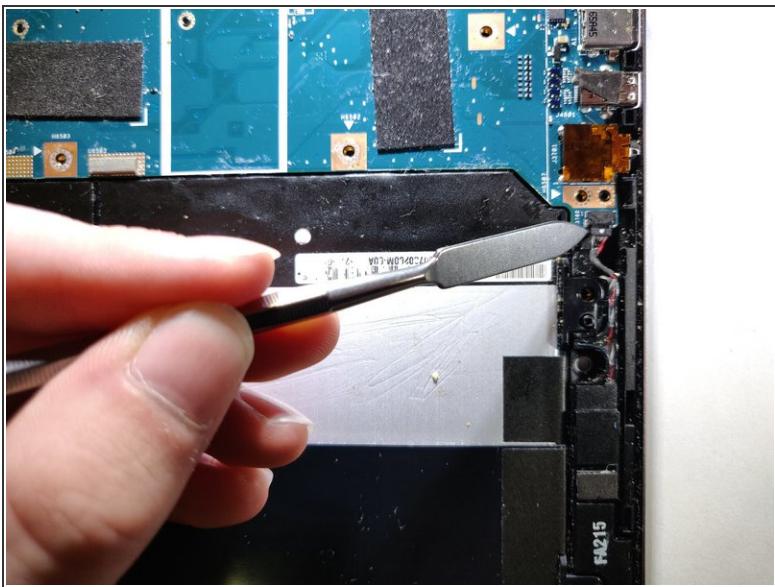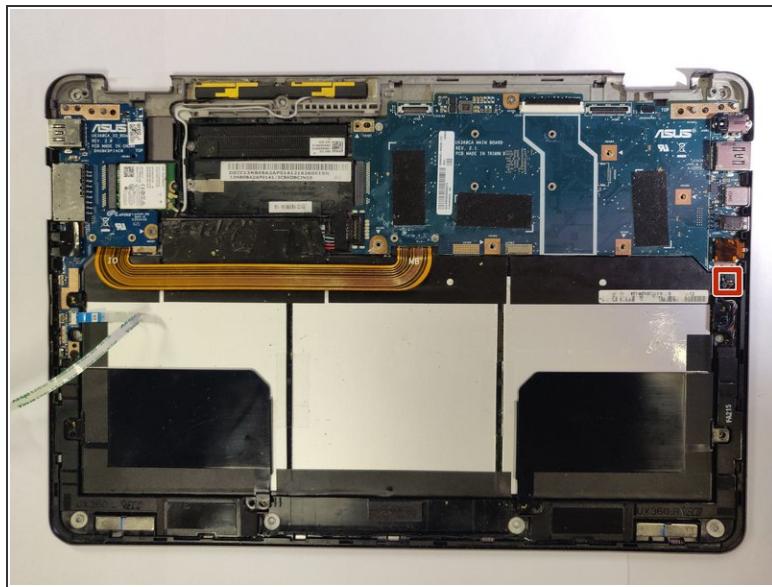

- Clip off the battery from the main board.

**⚠** Use of a metal spudger can cause damage to the device or harm to the user, especially near the battery! Use an ESD safe tool for this step instead.


## Step 6

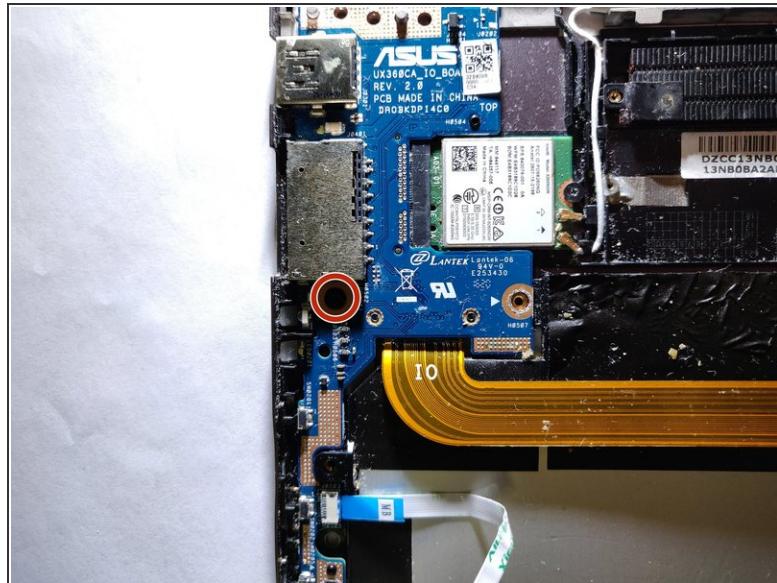

- Remove the black foam above the screw on the I/O board.
- Remove the 5 mm #1 Phillips head screw.


**⚠** Use of a metal spudger can cause damage to the device or harm to the user, especially near the battery! Use an ESD safe tool for this step instead.

## Step 7

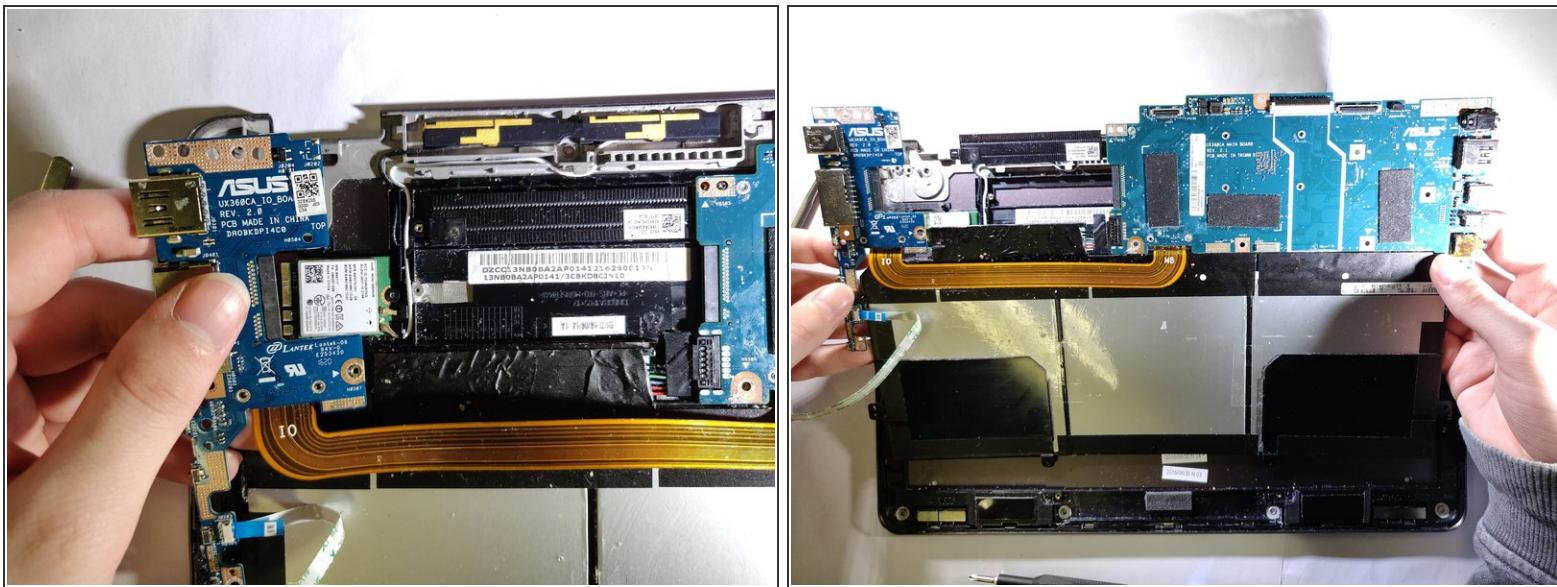

- Pull the I/O board away from the chip to detach it.
- Remove the I/O board and main board.

## Step 8 — Wi-Fi Wireless Card

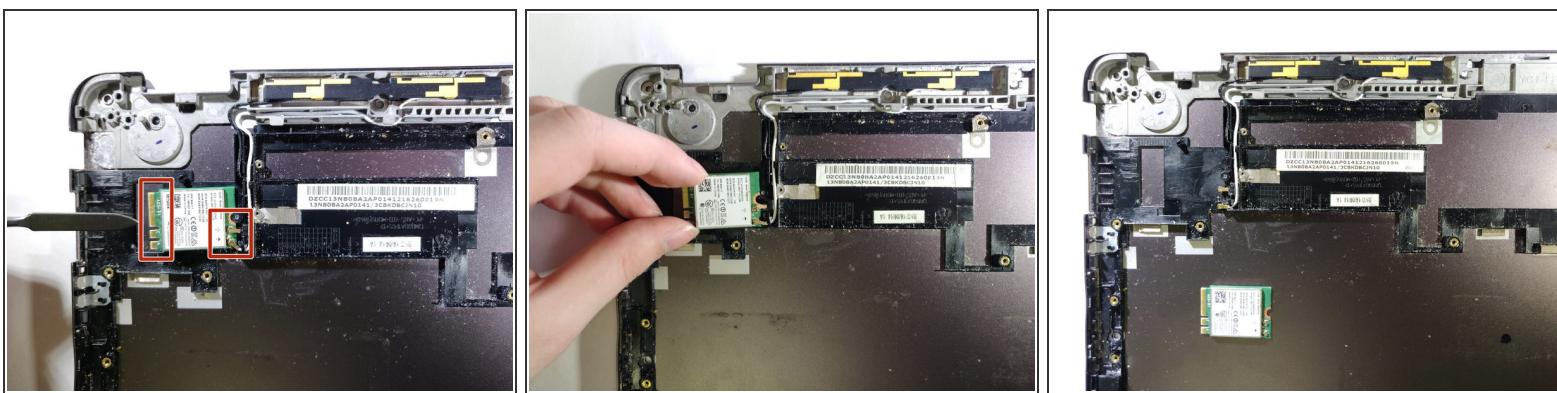

- Use the metal spudger to remove the chip connections.
- Gently pull the chip up and to the left to remove it from the device.

To reassemble your device, follow these instructions in reverse order.