




Asus ZenBook UX303U Motherboard Fan Replacement

This guide will help you replace your motherboard fan. Device is slow or overheated.

Written By: Luis Perez

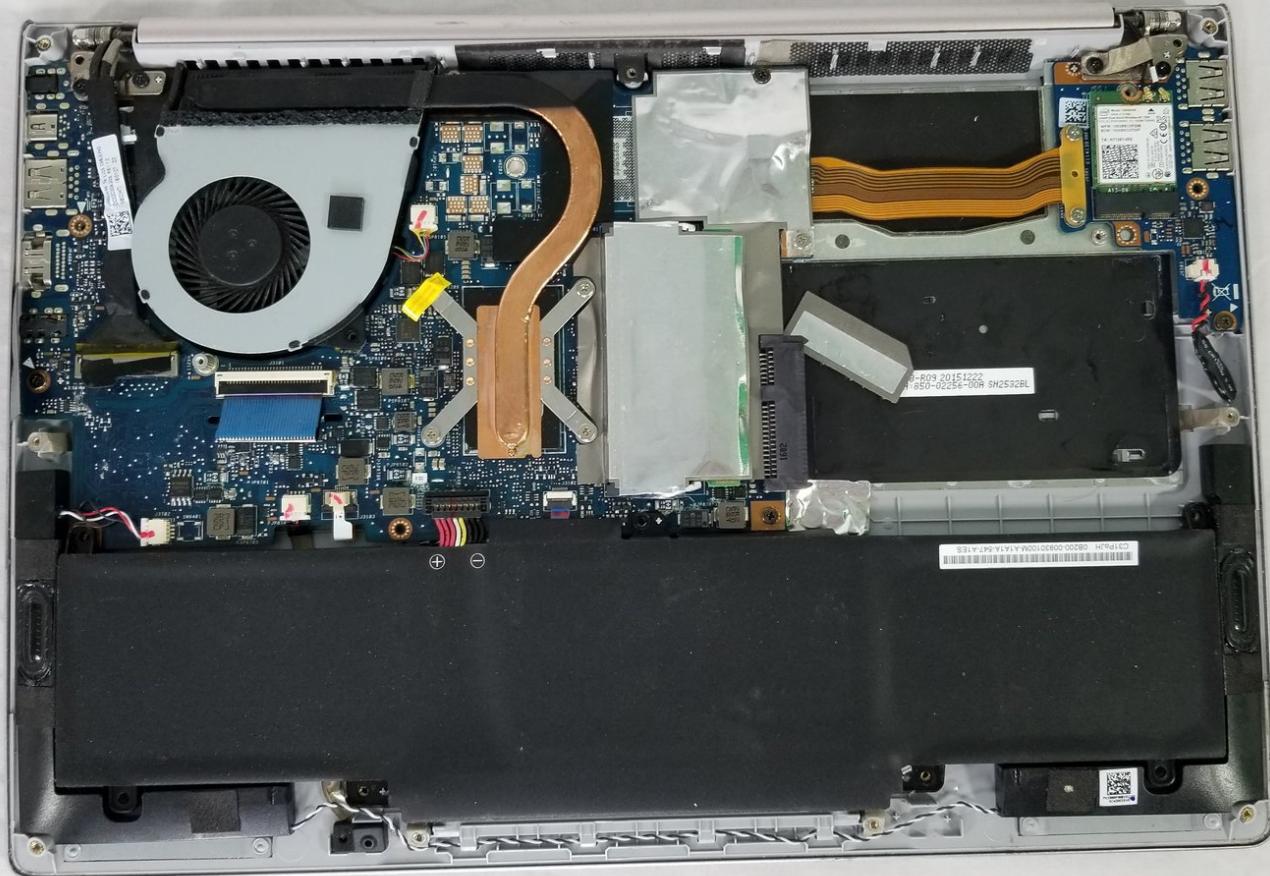

INTRODUCTION

This guide will show you how to replace the fan in an Asus ZenBook UX303U laptop.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Panel




- Remove the two round rubber feet at the hinge-edge of the laptop.

Step 2





- Remove the eleven 4 mm Phillips #00 screws from the back panel.

Step 3

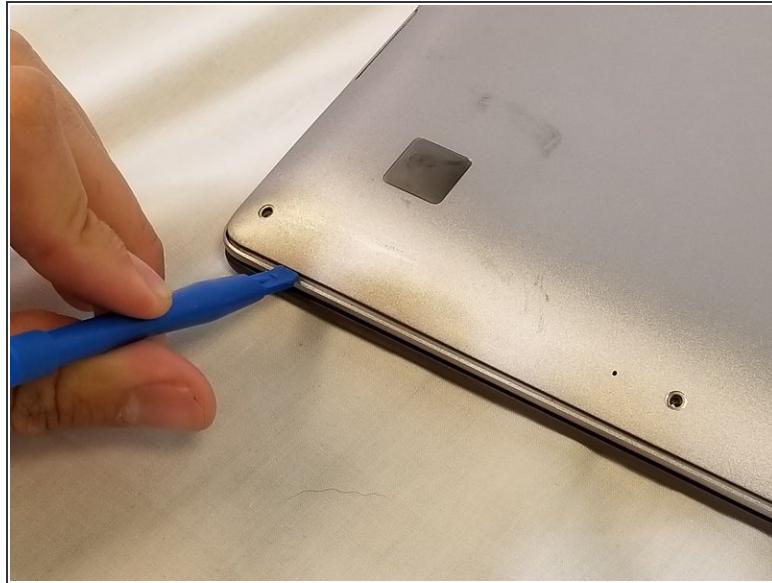


- Using a plastic opening tool pry the back panel off of the laptop.

Step 4 — Battery

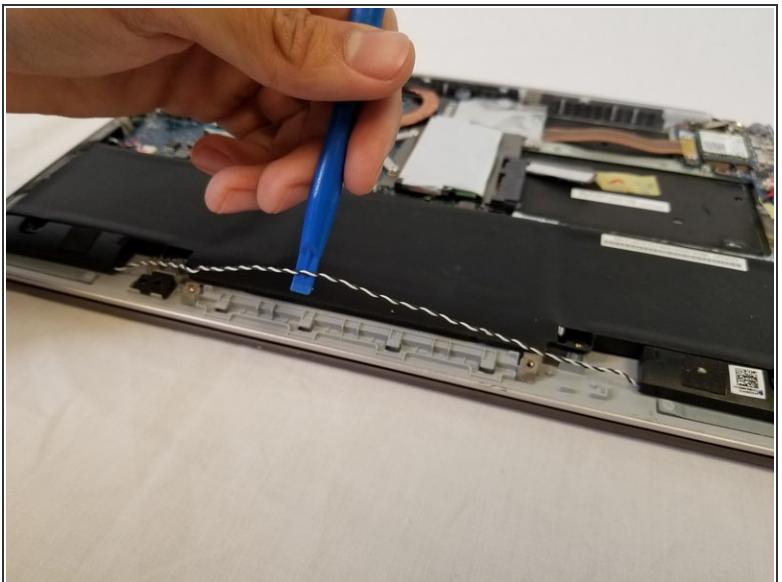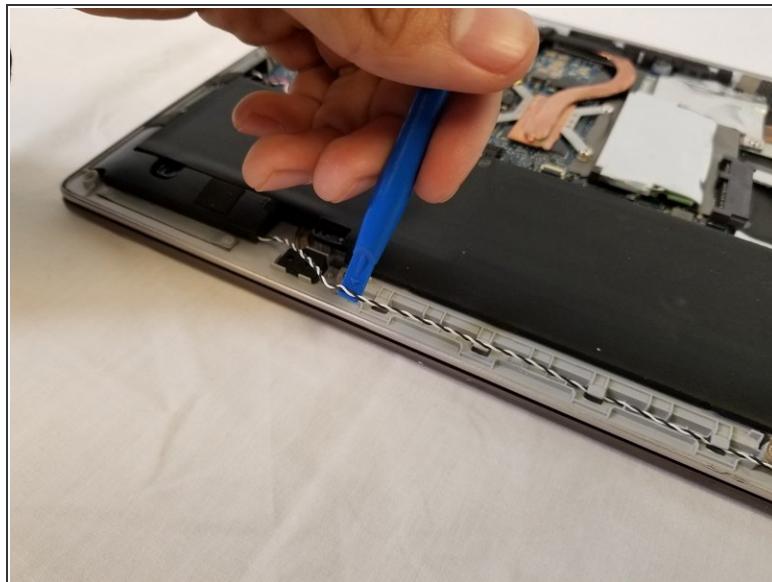



- Pull the speaker cable out of its four retaining clips with either your fingers, or a plastic opening tool.

Step 5

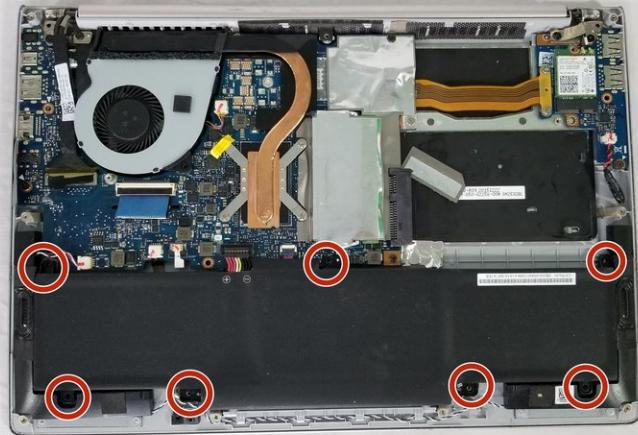



- Remove all seven 2 mm Phillips #00 screws from the battery.

Step 6

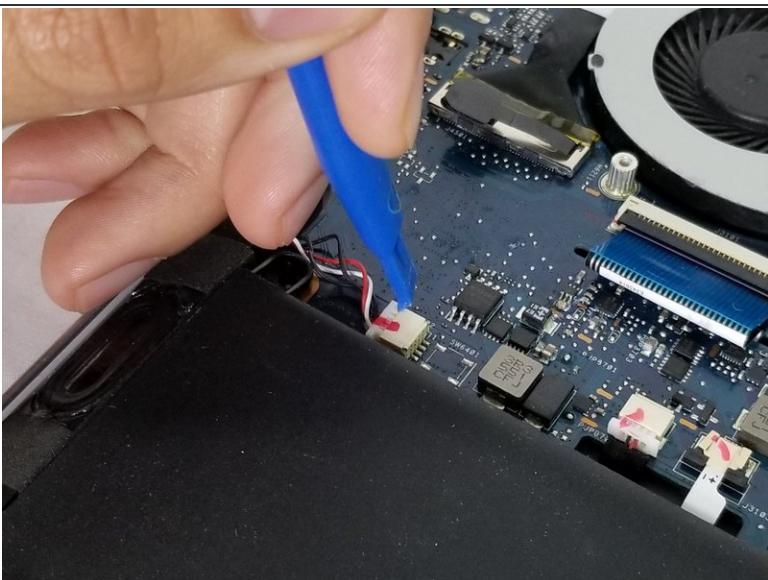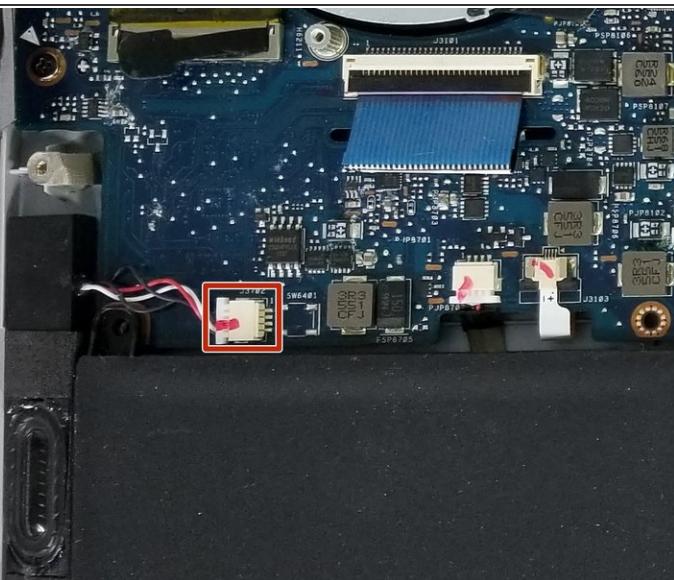


- Pull the speaker connector toward the edge of the laptop to disconnect it from its socket.

Step 7

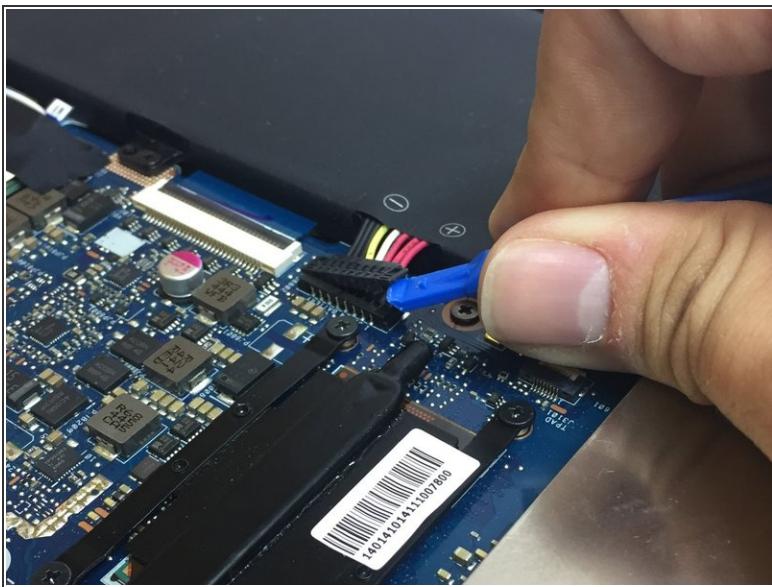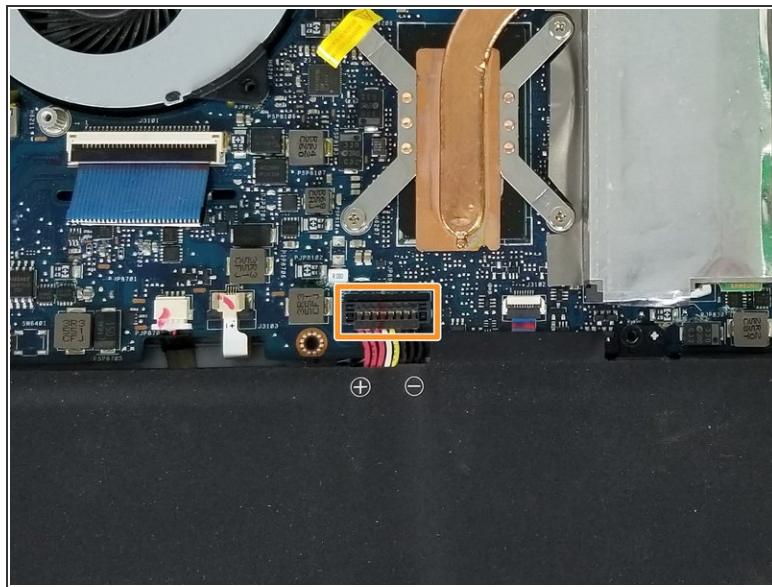

- Lift the battery connector straight up off its socket to disconnect it from the motherboard.
- ⚠ Do not pry on the socket itself or you risk damaging the motherboard.

Step 8

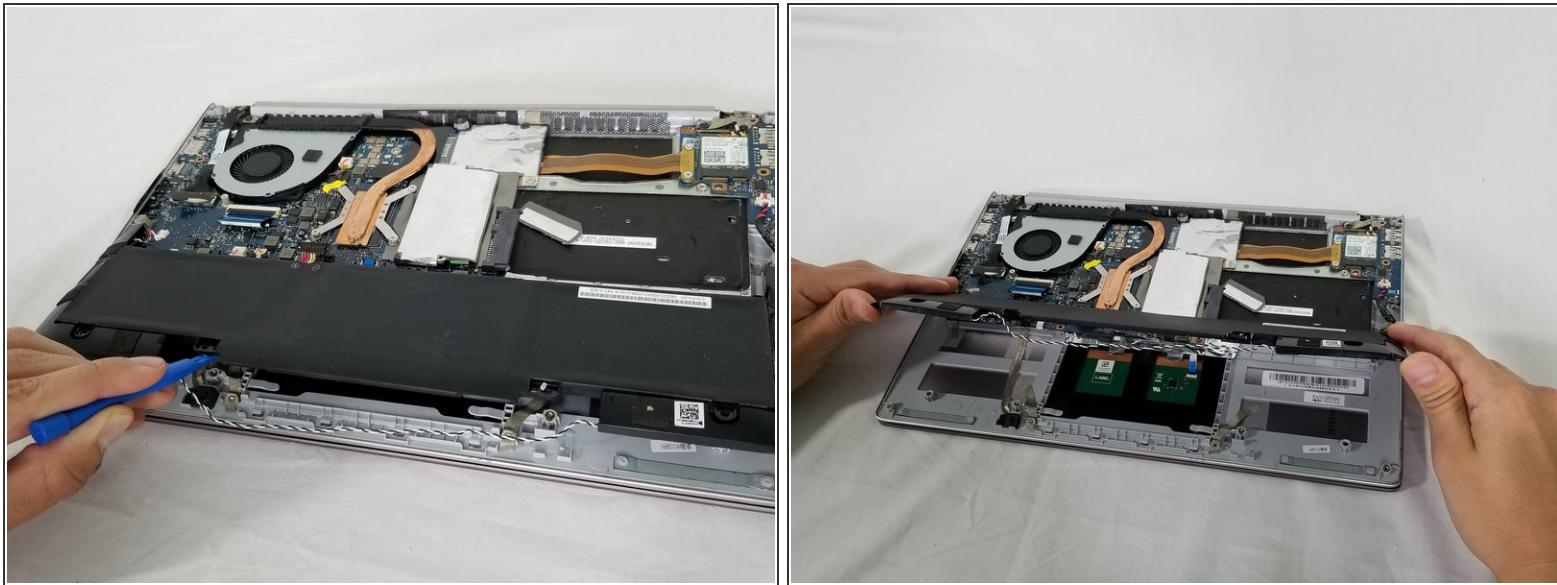

- Lift the battery and speakers up and pull out to remove.



⚠ Check underneath the battery for the wire assembly connecting the touchpad to the motherboard. This connection may stick to the underside of the battery. Be careful not to damage it when removing the battery.

Step 9



- Remove the speakers from the old battery.

Step 10 — Motherboard fan

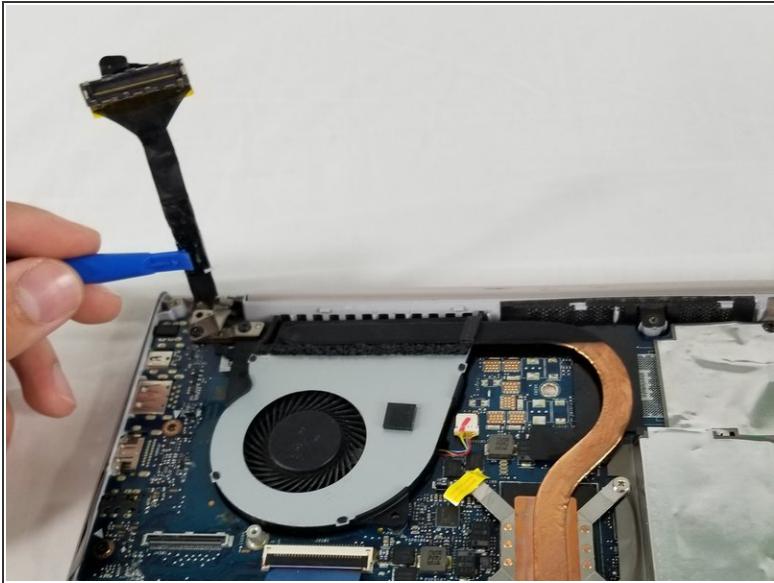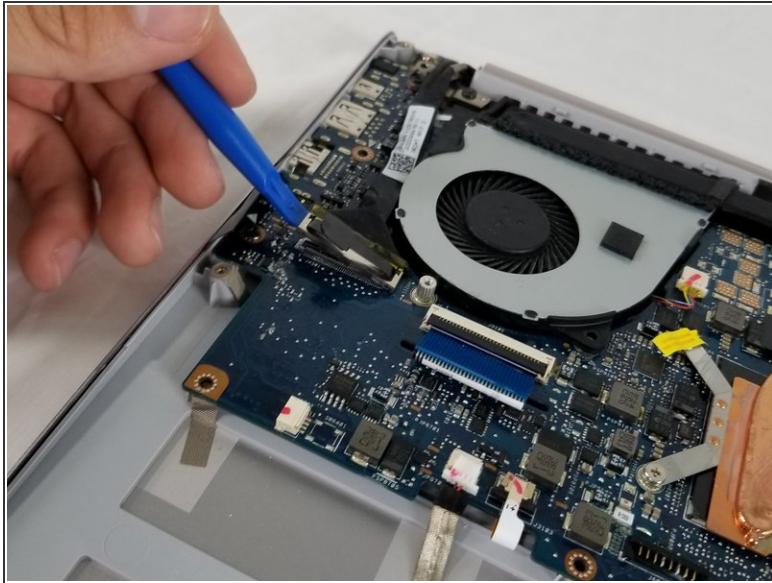


- Disconnect the display cable from the motherboard with a plastic opening tool.

Step 11




- Remove the three 6mm Phillips #00 screws from the hinge.
- Remove the 2mm Phillips #00 screw from the plastic housing securing the fan into place.

Step 12

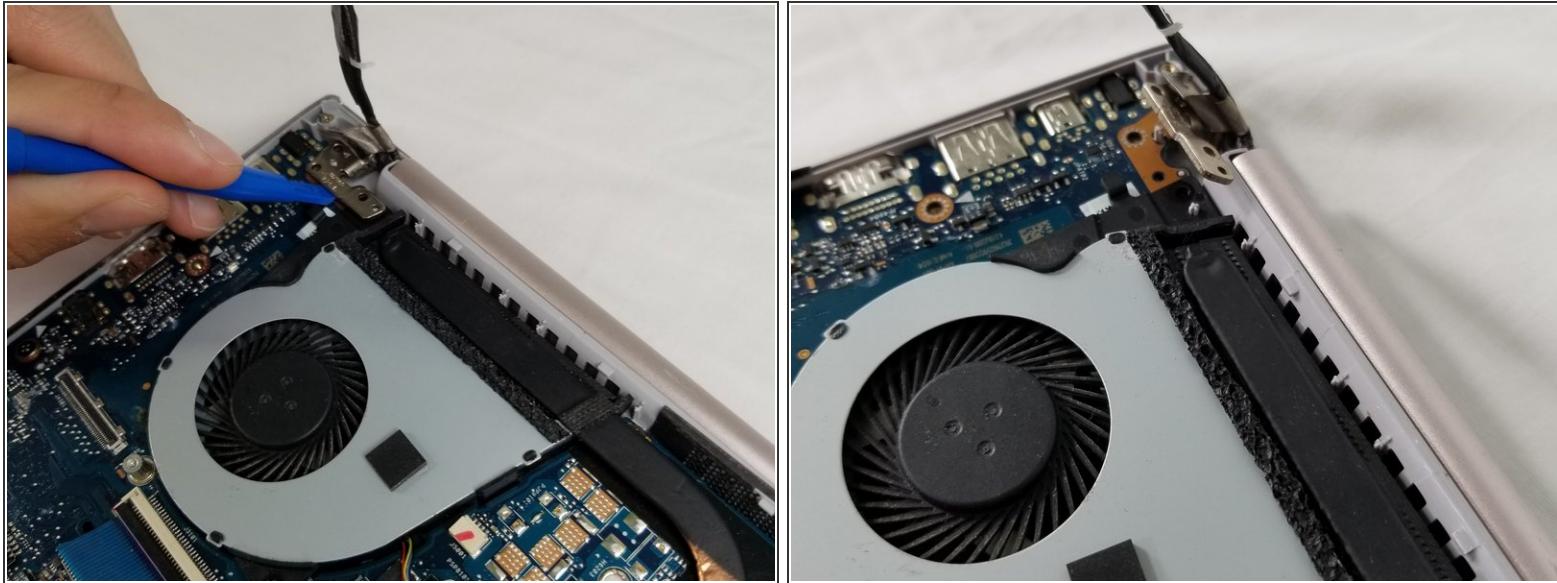



ⓘ Lift the bottom of the laptop up slightly in order to unhinge the laptop.
● Lift the screen assembly hinge up and off of the motherboard fan.

Step 13

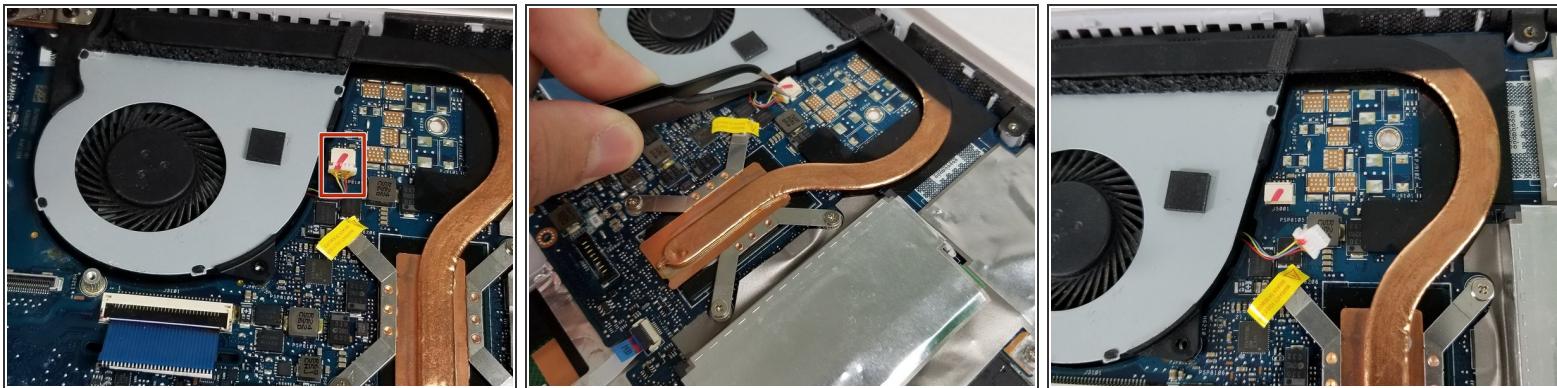

● Using tweezers, disconnect the cable connector from the motherboard fan.

Step 14

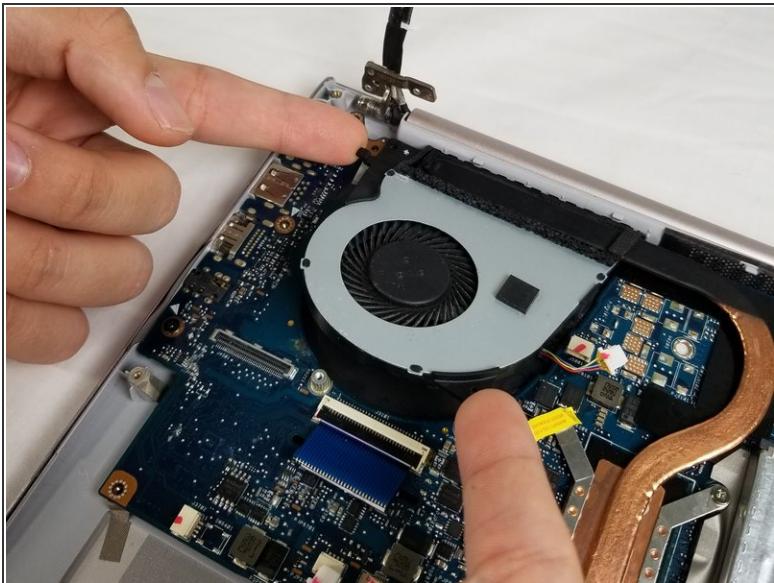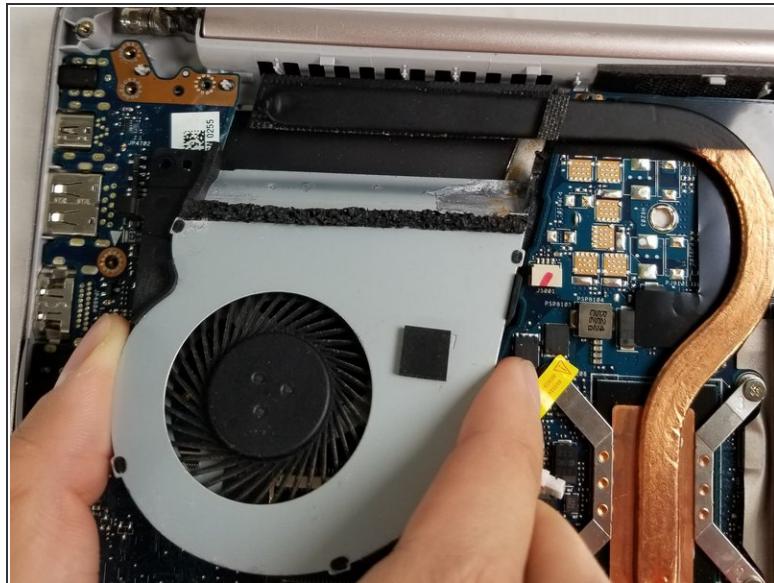

- Lift the fan up and off of the white pegs that secure it into place.

To reassemble your device, follow these instructions in reverse order.