



Asus ZenBook UX330U CPU Fan Replacement

This guide can be used to remove the CPU fan for your Asus ZenBook UX330U or UX330UA.

Written By: Hasan Akpunar



INTRODUCTION

If your Asus ZenBook UX330U or UX330UA has issues cooling down your CPU or the fan has stopped working, you may need to replace your CPU fan. Before using this guide, look at the troubleshooting page located [here](#) for possible fixes that do not require any disassembly. This guide can be used to remove the CPU fan for the ASUS ZenBook UX330U or UX330UA.

Before beginning any device disassembly, please power off and unplug your device.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Anti-Static Wrist Strap](#) (1)
- [Jimmy](#) (1)
- [ESD Safe Tweezers Blunt Nose](#) (1)
- [Suction Handle](#) (1)


Step 1 — Battery



- Before starting any device disassembly, please put on the anti-static bracelet provided by iFixit. Make sure the metal part of the bracelet is touching your skin.
- Remove the alligator clip at the end of the bracelet by simply pulling it off, to reveal the bullet connector.
- Insert the bullet connector into the ground port of an outlet.

i Make sure to keep the bracelet on at all times while disassembling your device, or you may risk causing a short in one of the components.

Step 2

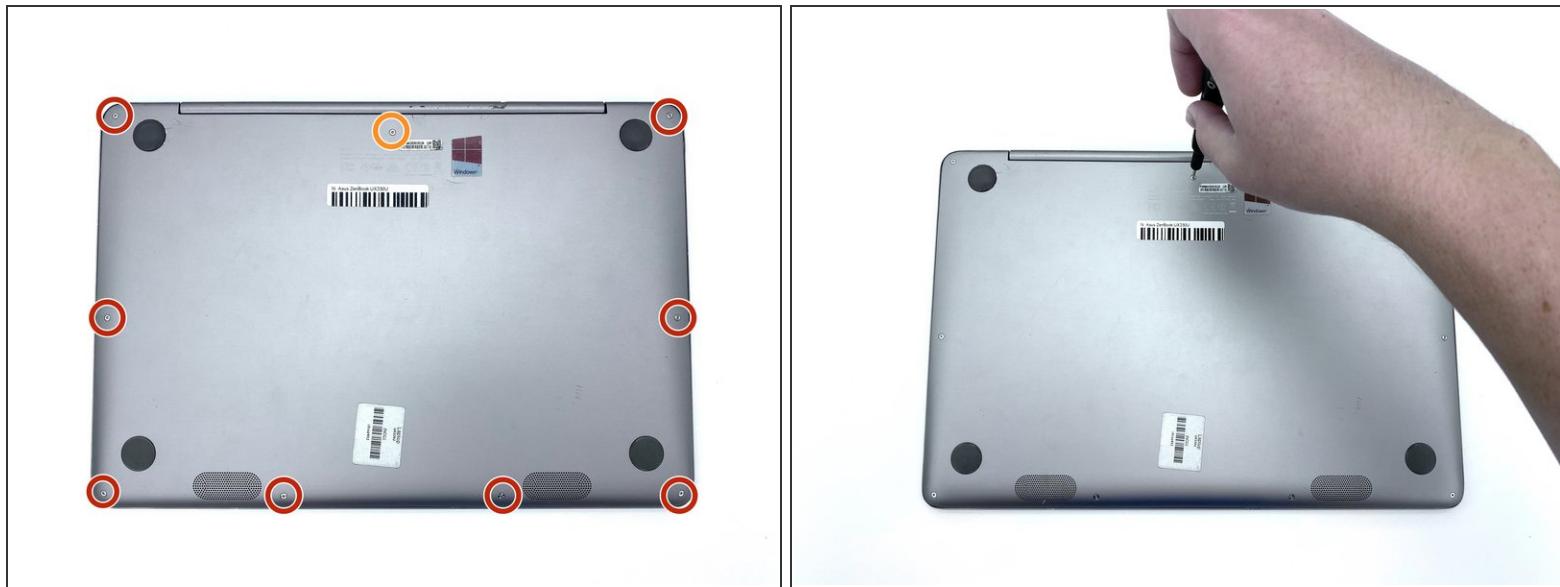

⚠ Power off the device and make sure it is physically unplugged before starting any disassembly procedures.

- Remove the eight 3.1mm screws using the T5 Torx screwdriver bit.
- Remove the longer 5.1mm screw using the T5 Torx screwdriver bit.


Step 3



- Pry off the rubber feet that are closest to the hinge using the jimmy.
- Unscrew the two 5.6mm screws that were underneath the rubber feet using the Philips #0 screwdriver bit.

i The rubber feet may be difficult to remove. Do not hesitate to use more force to remove the feet, if necessary.


Step 4

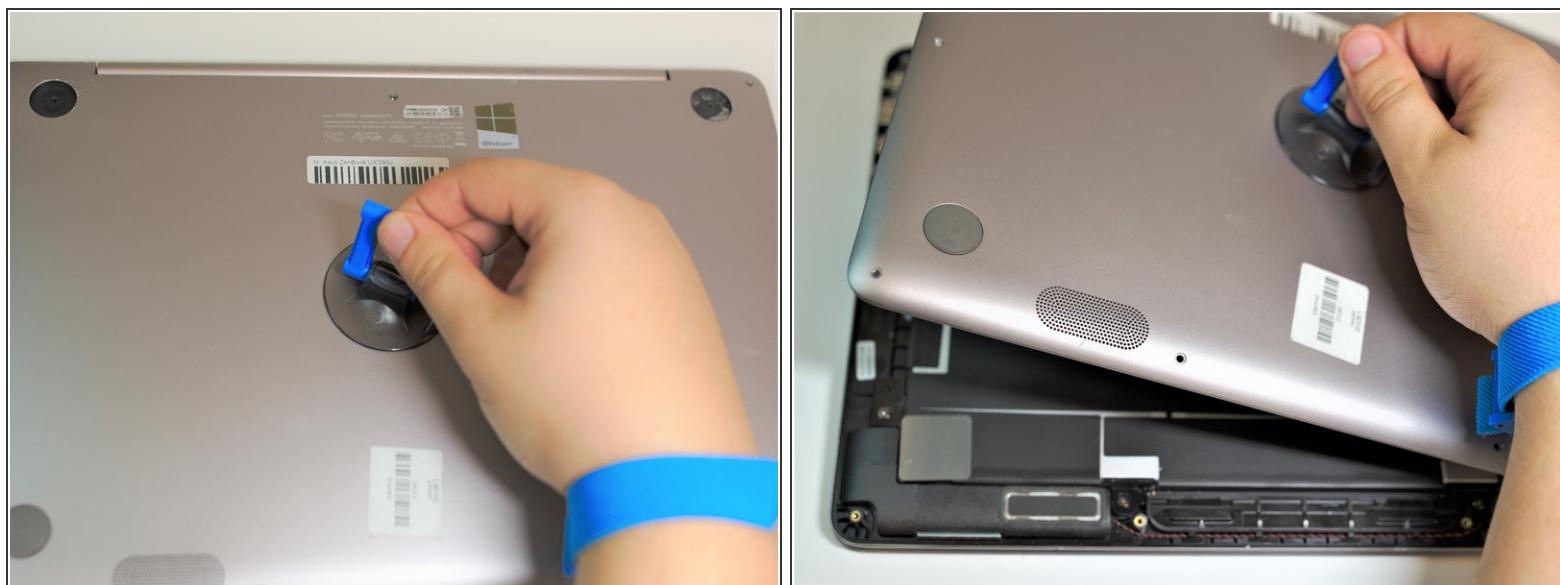

- Press the suction handle on the center of the back cover, and gently lift up.

⚠ You may need to wiggle the back cover as you lift it in order to take it off easily.

Step 5

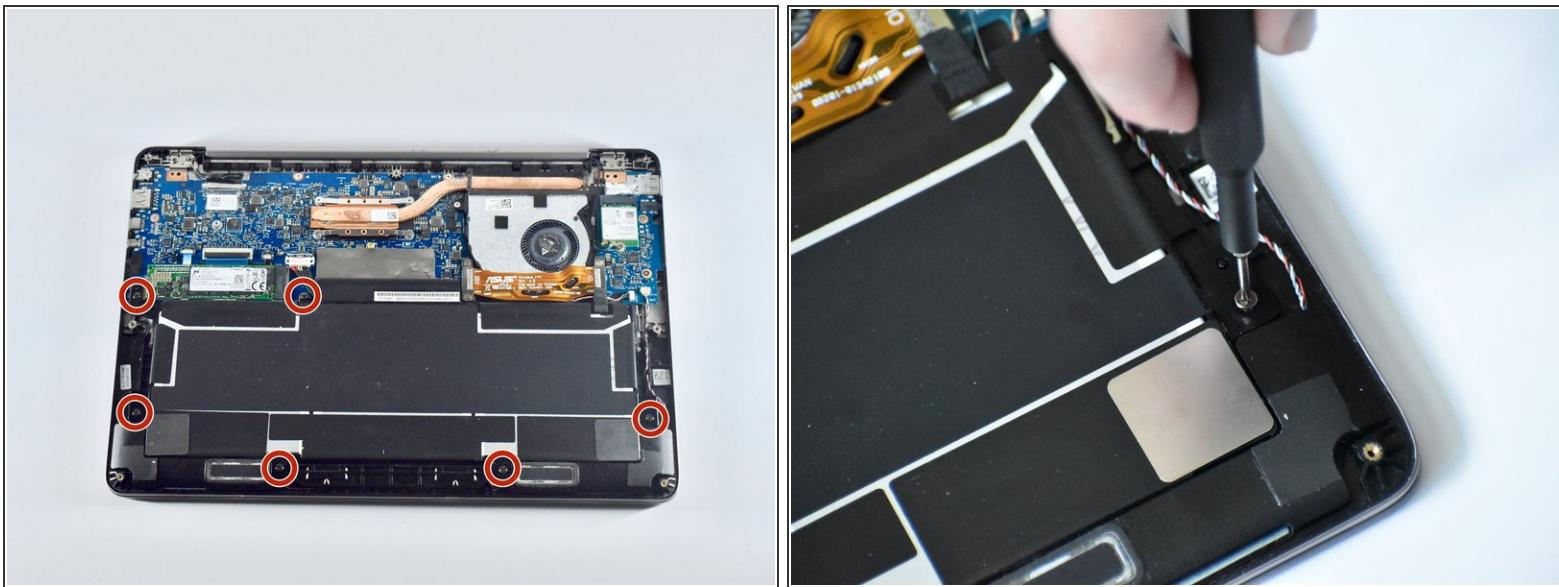

- Unscrew the six 3.7mm screws using the Philips #0 screwdriver bit.


⚠ Be extra cautious when handling the battery. If the battery looks swollen or damaged, consult [this guide](#).

Step 6




- Remove the four 2.8mm screws from the motherboard ribbon connector using the Philips #0 screwdriver bit.
- i** You may have to pull back the black tape located on the bottom right motherboard connector screw. This tape is not necessary for the functionality of the device and can be discarded if necessary.

Step 7

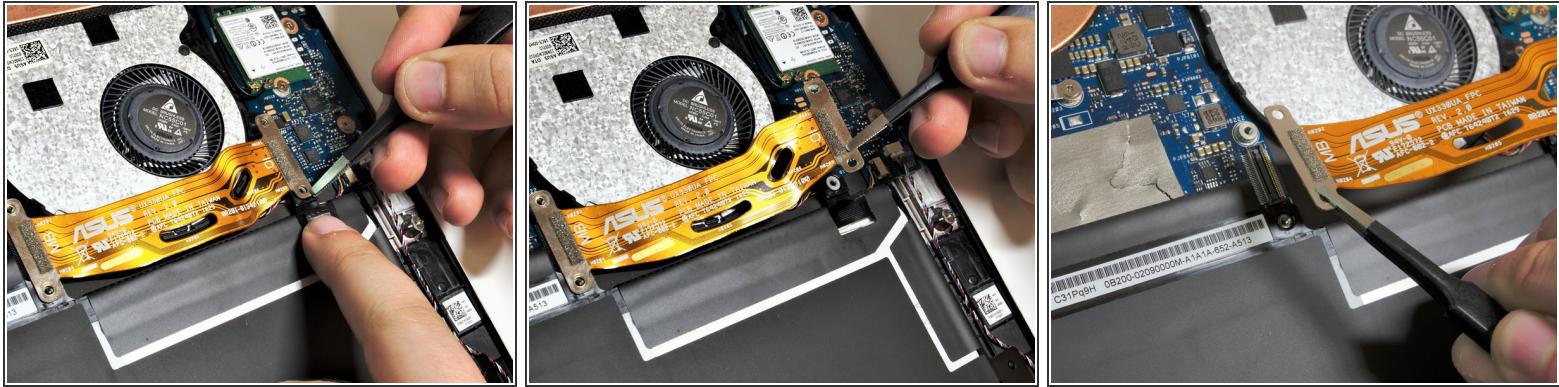



- Remove the motherboard ribbon connector by pulling up on the metal ends with the blunt nose tweezers.
- *(i)* You may have to hold down the black tape in order to be able to lift up the connector.
- *(★)* To reconnect the motherboard ribbon, simply press the ends of the ribbon on top of the connector. This should require minimal force.

Step 8

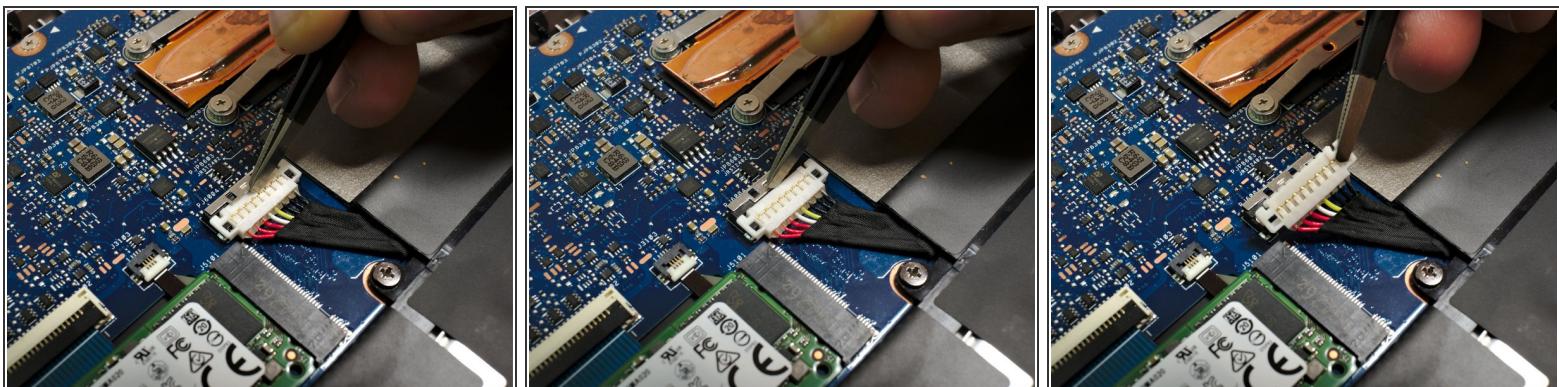

- Pull back the silver battery connector lock with the blunt nose tweezers. This should slide back and should require minimal force.
- Lift the battery connector vertically using the blunt nose tweezers to remove it from the socket.




Step 9

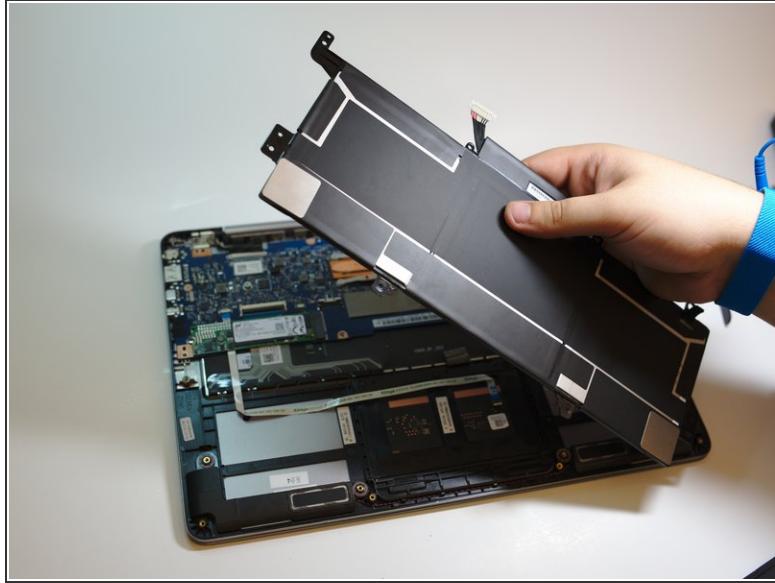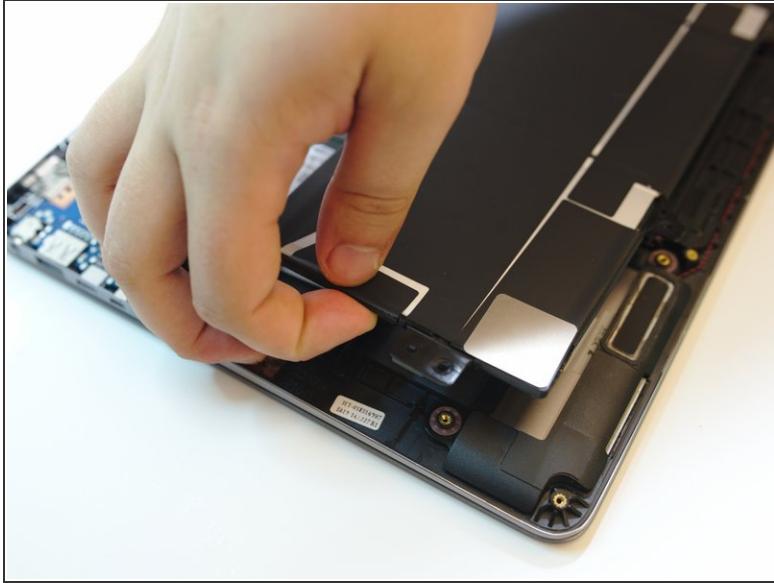

- Gently lift the battery out of the chassis of the device.


 Make sure that you do not bend the battery. Store the battery in a safe area once it has been removed.

Step 10 — CPU Fan

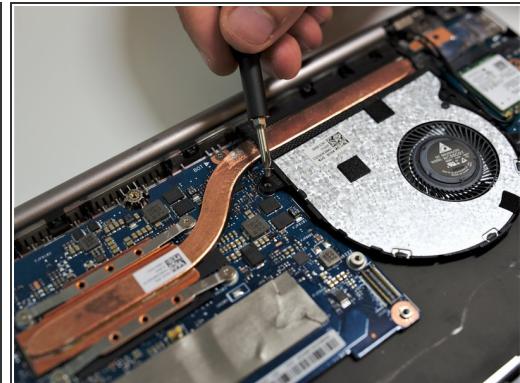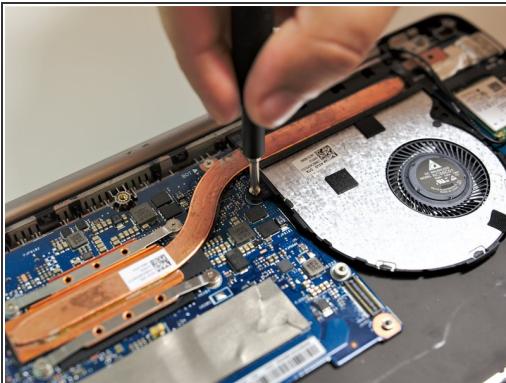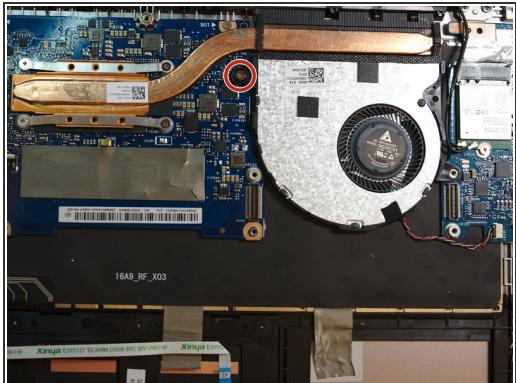

- Use the Philips #0 screwdriver bit to remove the 2.7 mm screw holding the fan.


Step 11

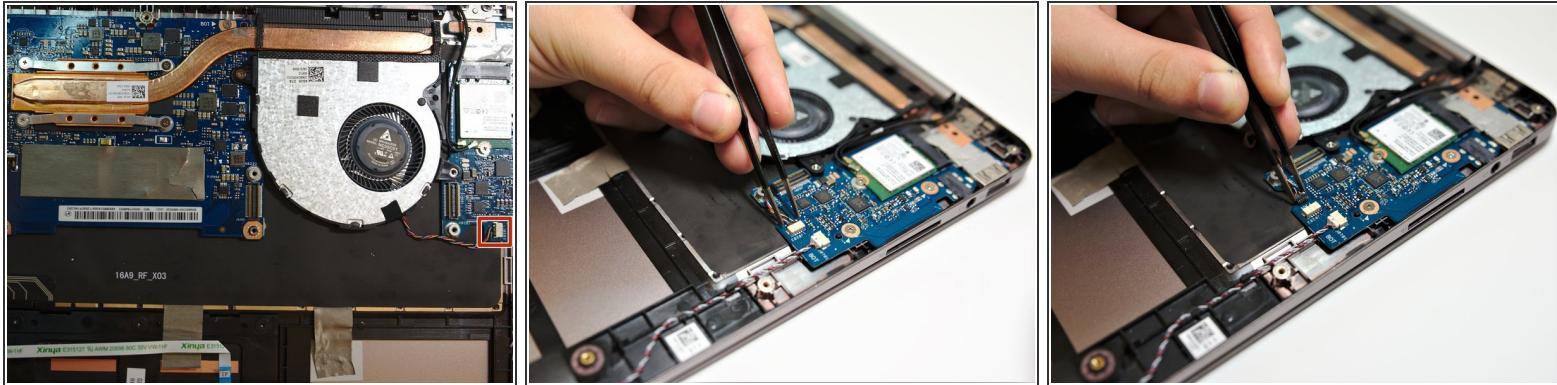

- Use the blunt nose tweezers to pull out the fan connector from the connector slot labeled 'FAN' on the right-hand mother board.

 Hold the fan connector by the plastic connector piece, not the wires themselves.

Step 12

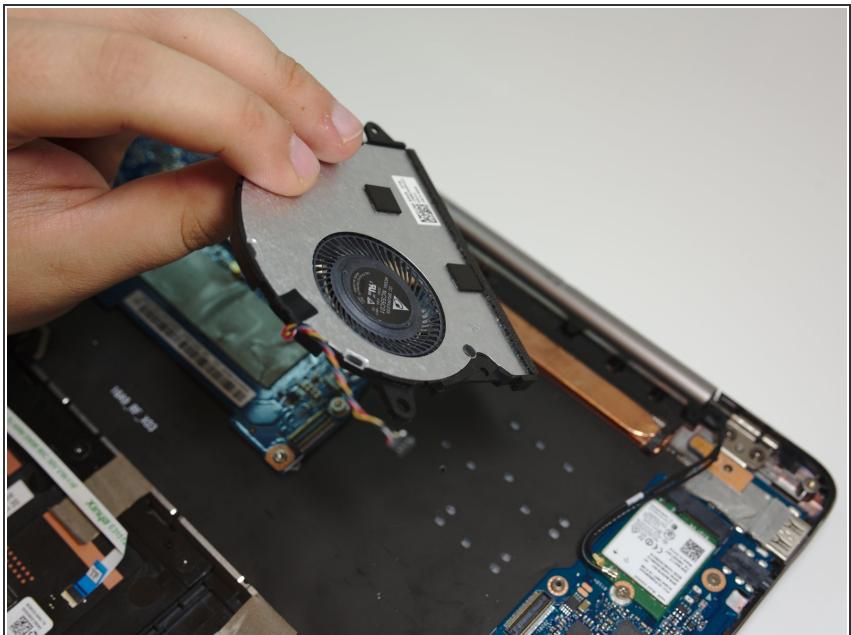

- Pull the fan out of place.

To reassemble your device, follow these instructions in reverse order.