



Asus ZenFone 2 Laser ZE550KL Display Replacement

Display Replacement Guide to Asus ZenFone 2 Laser 5" ZE550KL Model

Written By: gwsLabs



INTRODUCTION

Replace the display in your Asus ZenFone 2 Laser 5" ZE550KL Model

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [Tweezers](#) (1)

PARTS:

- [New Item](#) (1)

Step 1 — SIM and battery removal



- Remove the back cover.
- Disconnect the battery.
- Remove the SIM card and the micro SD card.

Step 2 — Remove the screws



- unscrew the 15 screws

Step 3 — Internal back cover




- remove the plastic cap with opening picks making sure not to break the hooks that hold it in place

Step 4 — Flat cable display



- disconnect the two lifts by lifting the white stopper
- unplug the camera

Step 5 — Rear speaker

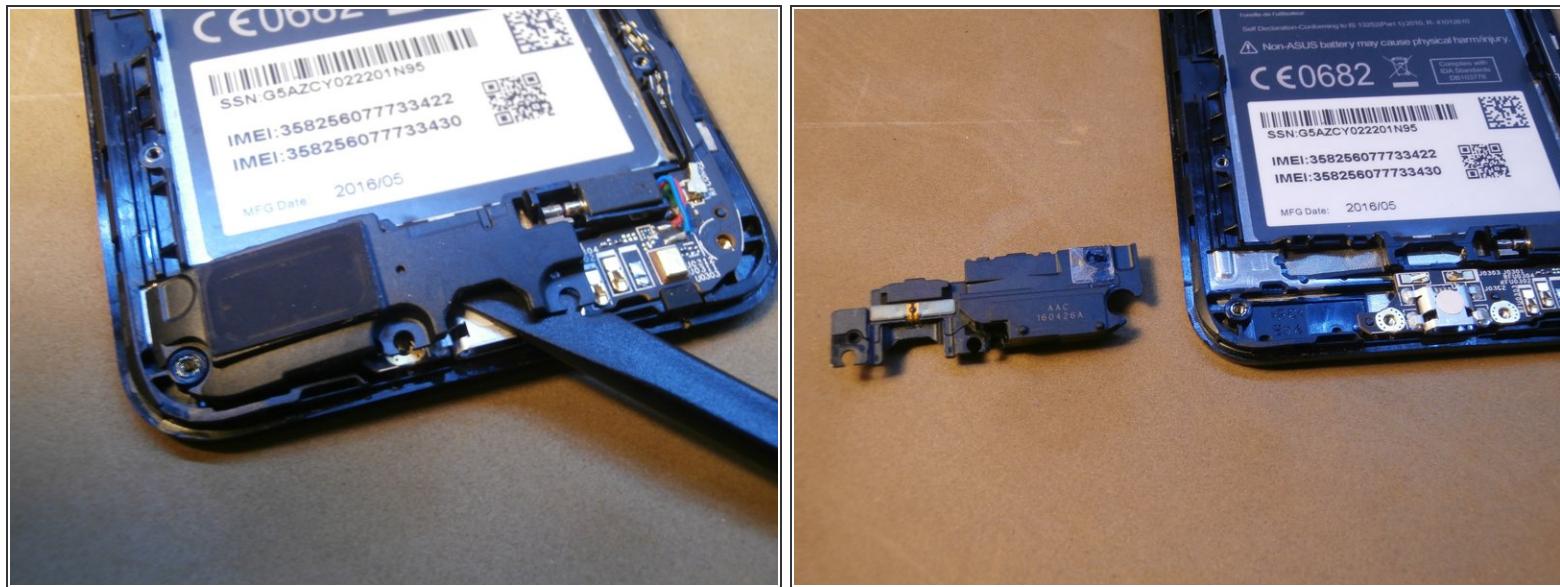


- with the help of a spudger remove the rear speaker

Step 6 — Motherboard



- starting from the bottom lift the motherboard

Step 7 — Frame Assembly

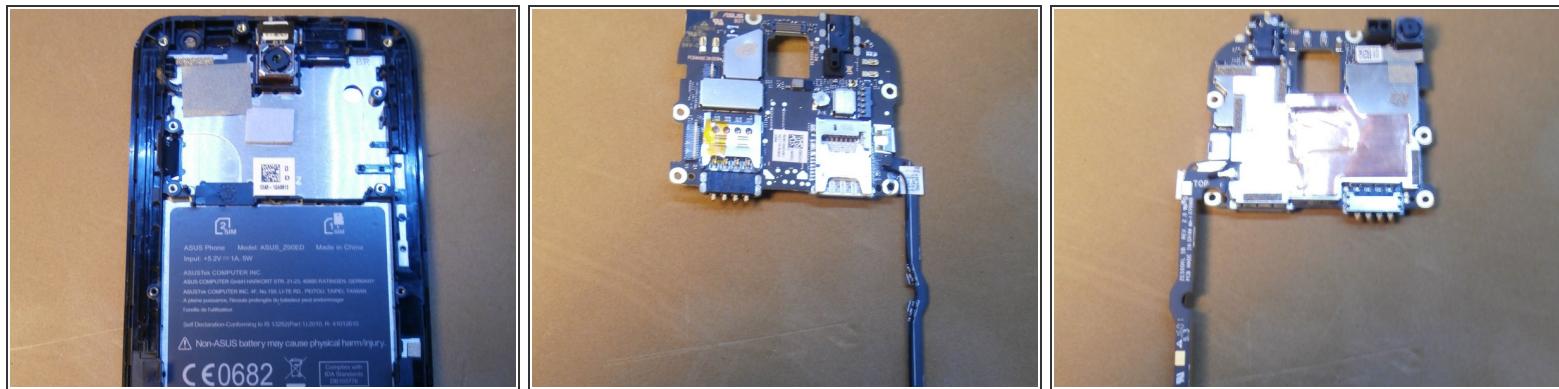

- Mother board.

Step 8 — Touchscreen driver




- disconnect the touchscreen driver to remove the screen

Step 9 — screen removal



- with the help of a hair dryer or an iOpener remove the screen from the phone's frame

Step 10 — Preparation of the new screen

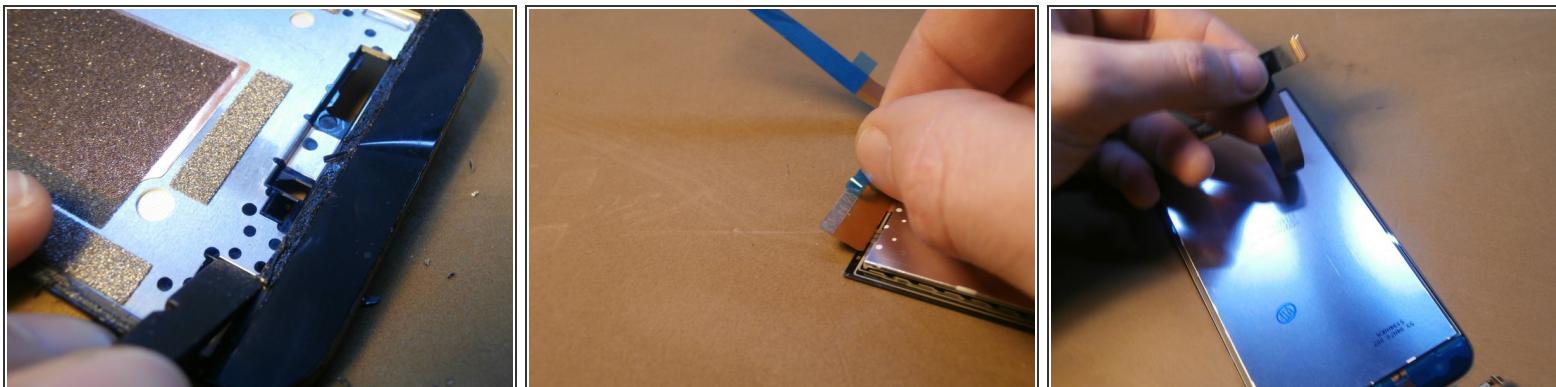

- Remove glue residues on the perimeter of the frame
- paste the display flat in position

Step 11 — screen gluing



- apply the double-sided adhesive to the frame

Step 12 — New screen



- Replace or reposition the dust cover of the front camera before installing the new screen
- Insert the new screen into position by passing the flat into the specific grooves

Step 13 — Reassembly



- Refit the logic board

To reassemble your device, follow these instructions in reverse order.