




Asus Zenbook UX303L Battery Replacement

This guide can be used to replace the battery in Asus Zenbook UX303L.

Written By: Aashray Nagpal

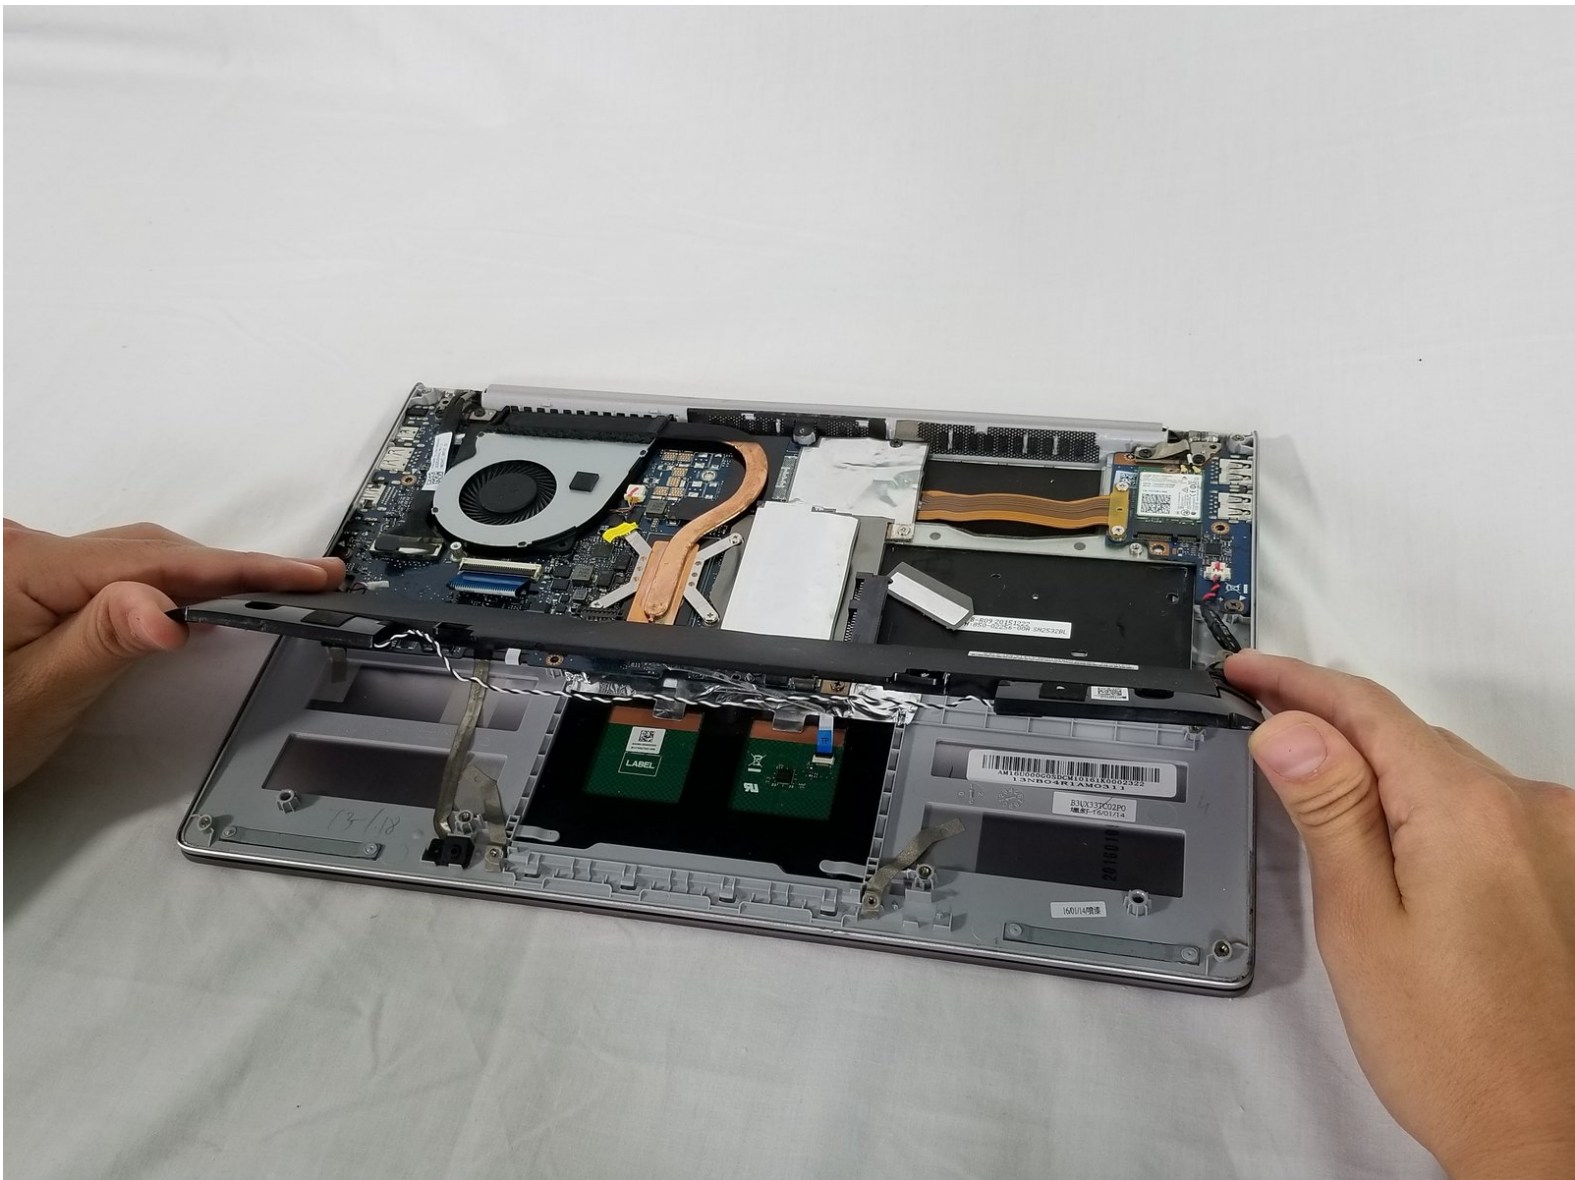

INTRODUCTION

This guide will show you how to replace an old worn out or dead battery in an Asus ZenBook UX303L laptop.



TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Asus C31N1339 Replacement Battery](#) (1)


Step 1 — Battery

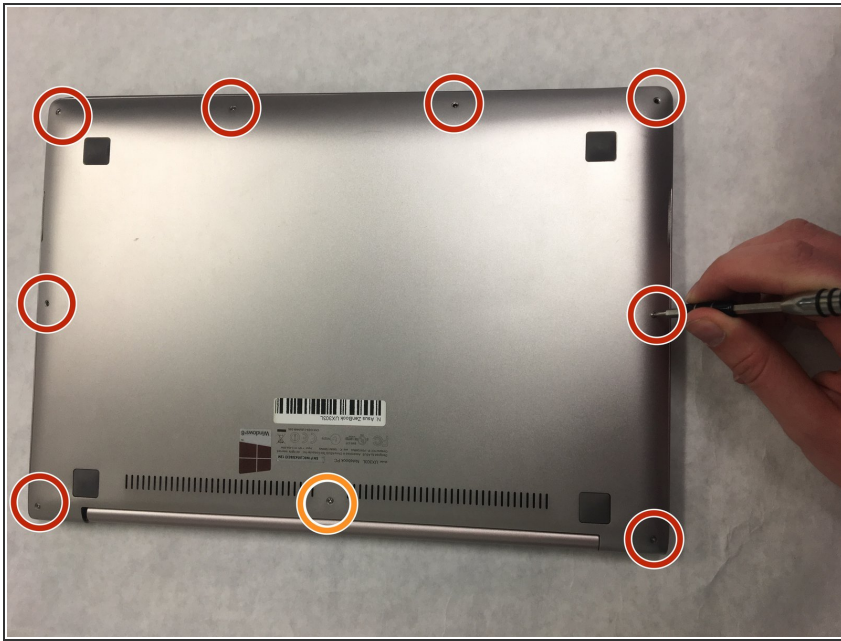

⚠ Ensure your device is OFF before performing this procedure.


- Remove the eight 3 mm long screws using a T5 Torx Screwdriver.
- Remove the single 8 mm long screw using a T5 Torx screwdriver.

Step 2

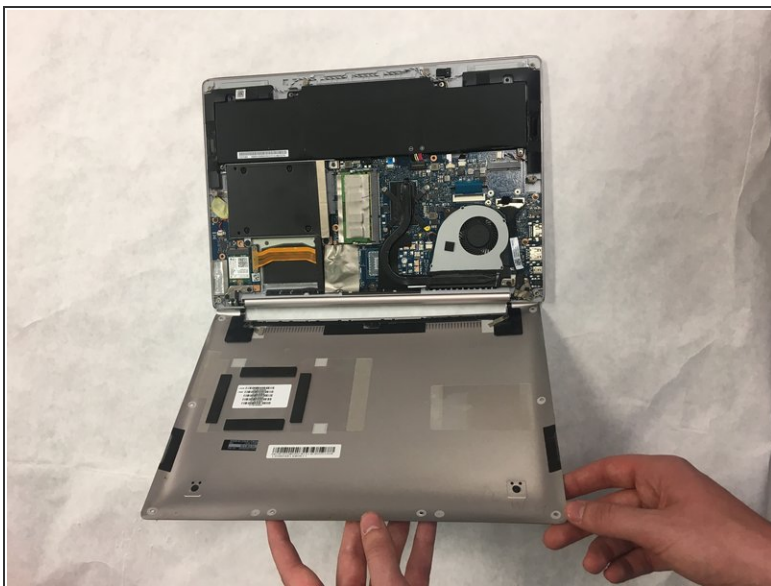


- Lift and remove the back cover.
- If your case does not easily come free, you may need to remove screws under the plastic feet on the bottom case.

Step 3

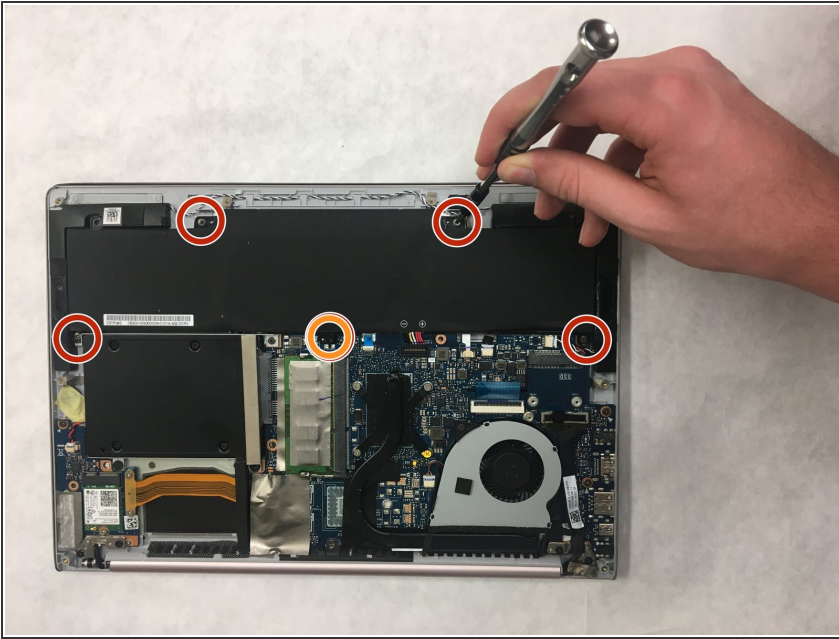


- Use a Phillips #0 screwdriver to remove the four 4 mm screws from the sides of the battery.
- Use a Phillips #0 screwdriver to remove the single 6 mm screw in the center of the battery.

Step 4

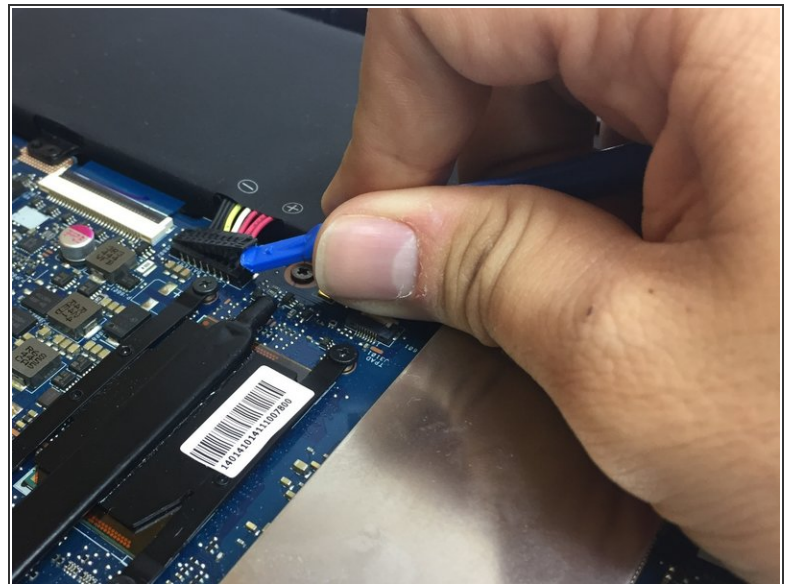


- Lift the battery connector up out of its socket on the motherboard to disconnect it.
- ⓘ A plastic opening tool can help lift the connector out of its socket. **Do not pry on the socket itself** or you risk damaging the motherboard.

Step 5

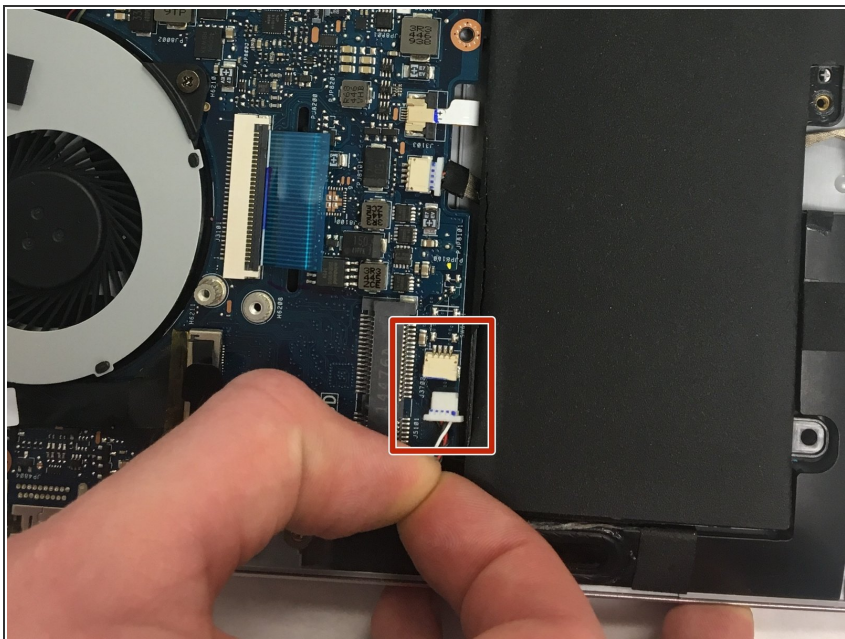


- Disconnect the speaker by carefully pulling the speaker cable away from its socket on the motherboard.

Step 6

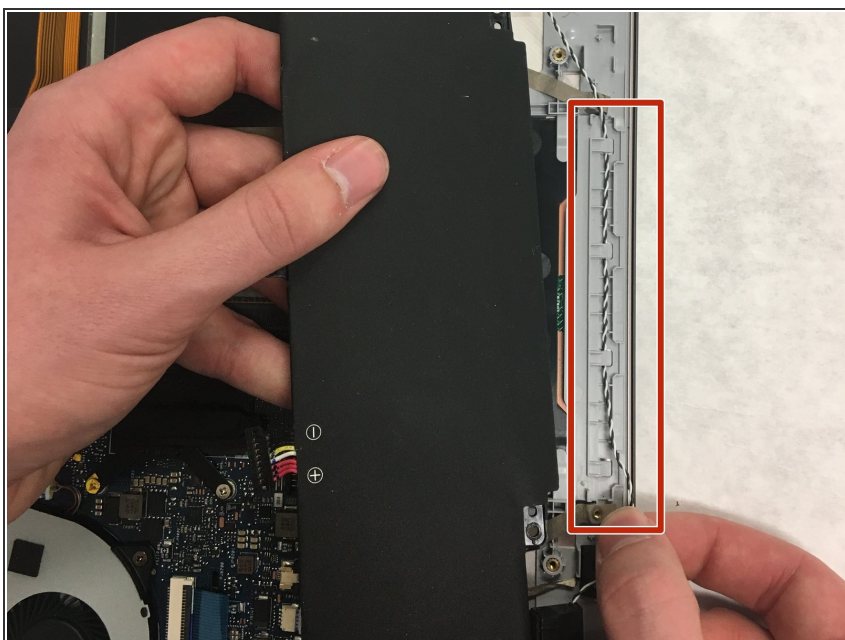


- Deroute the speaker cable from the clips so the battery can be fully removed.

Step 7

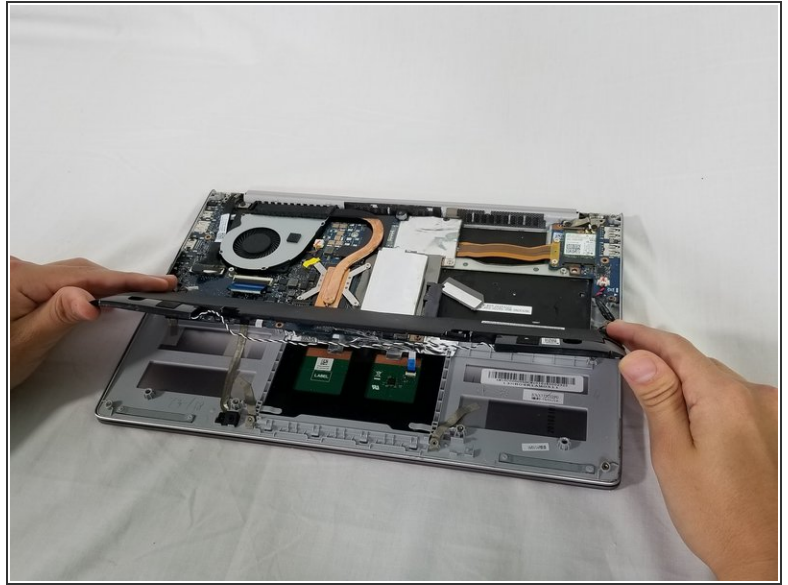

- Lift up and remove the battery and speakers from the device.

Step 8

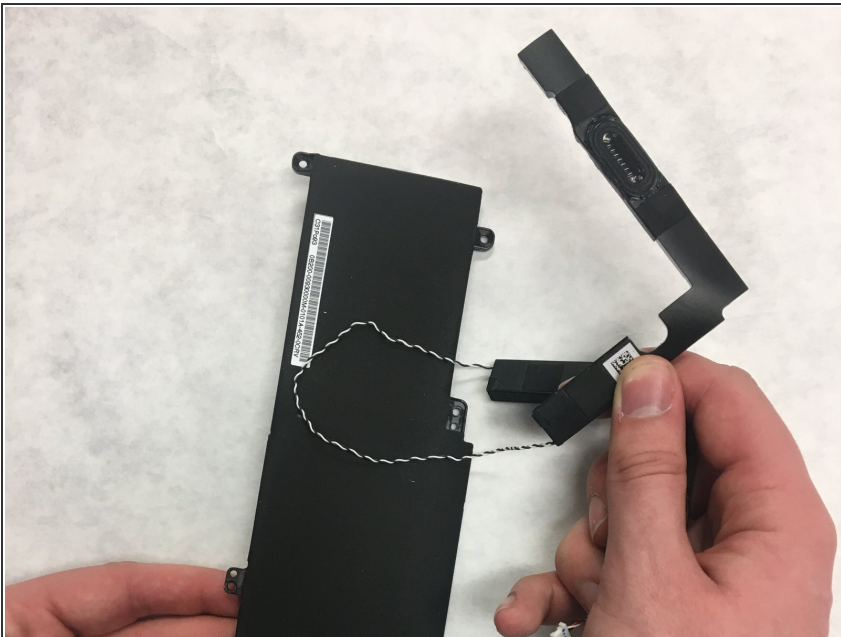

- Remove the speakers from the old battery.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).