




Asus Zenbook UX32VD Battery Replacement

This guide is for the replacement of the battery in an Asus Zenbook UX32VD.

Written By: Jenny Nguy

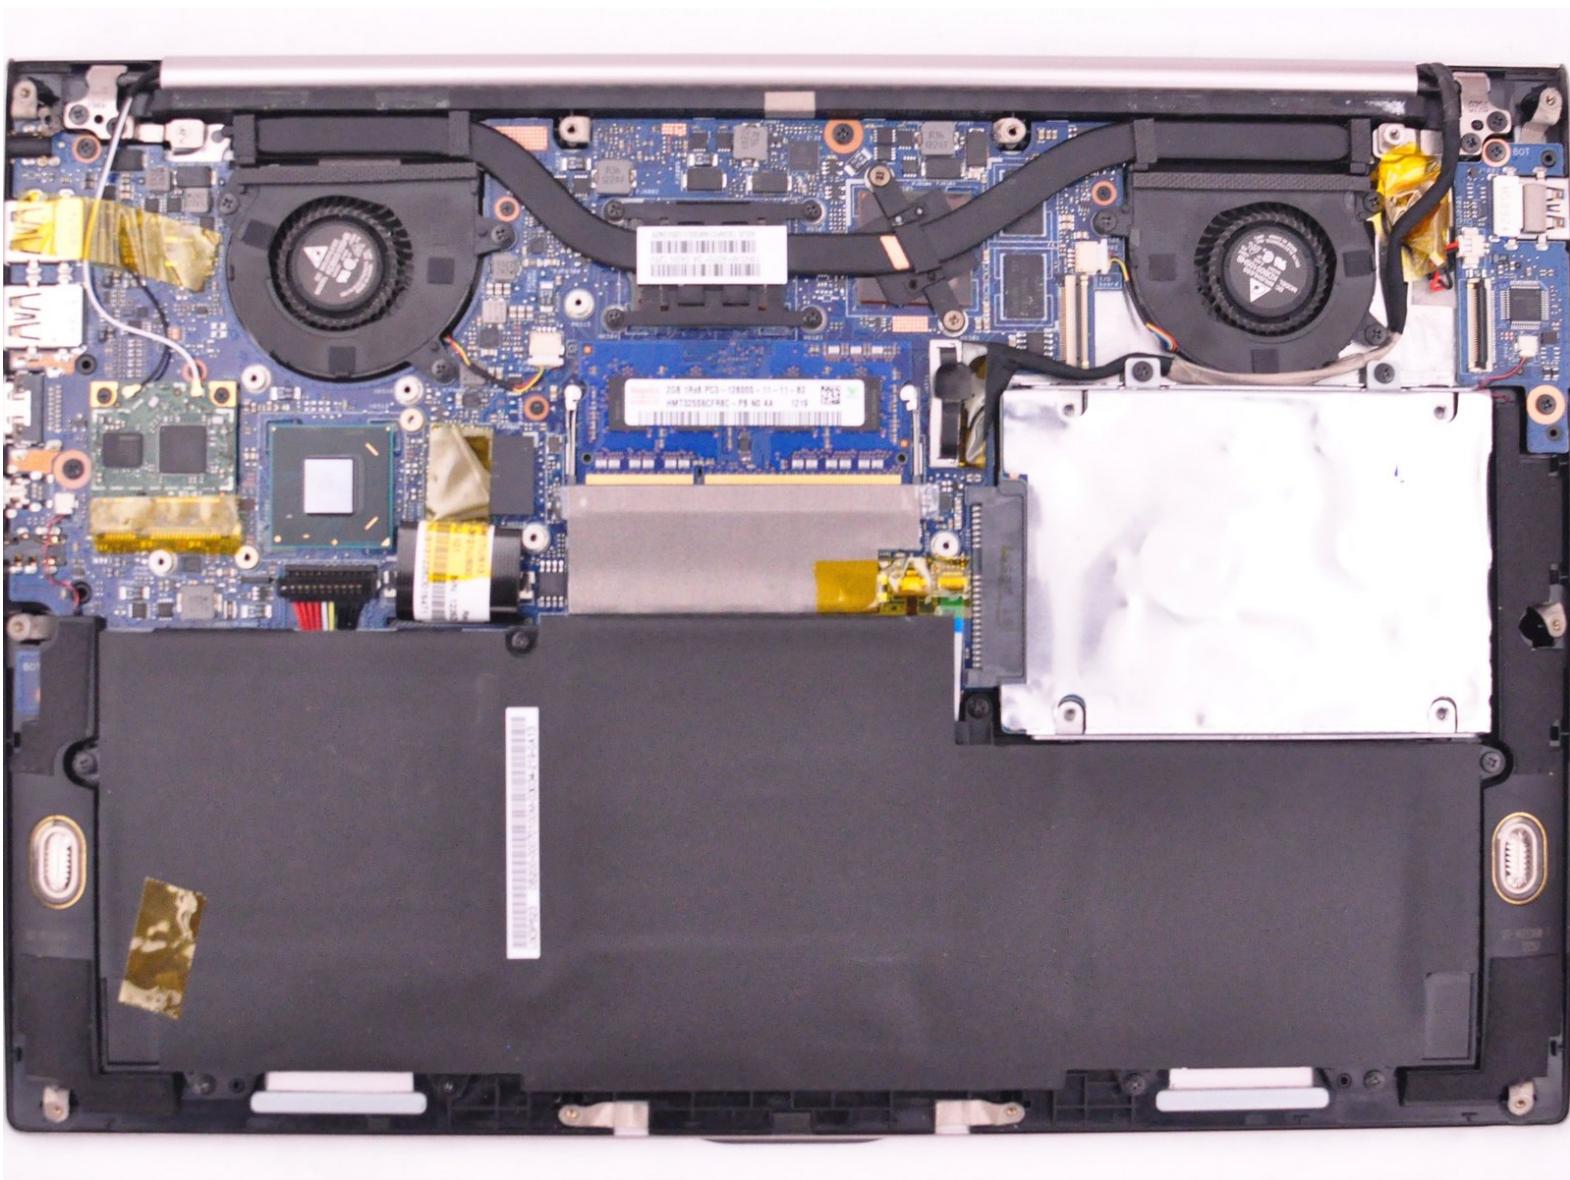


INTRODUCTION

Use this guide to replace old batteries in your Asus Zenbook UX32VD to get longer battery life!

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Bottom Panel

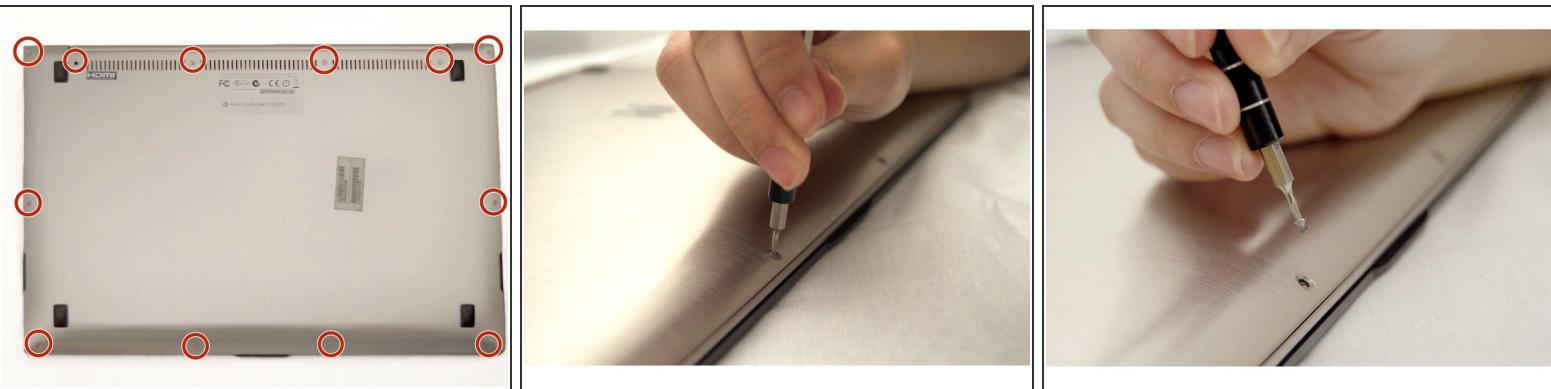


- Remove the twelve 3 mm bottom panel screws with a [T5 Torx Screwdriver](#).

Step 2





- Use a [plastic opening tool](#) to pry along the perimeter of the bottom panel until it can be easily removed.
- Remove the bottom panel from the body of the laptop.
- Set aside the bottom panel.

Step 3 — Battery

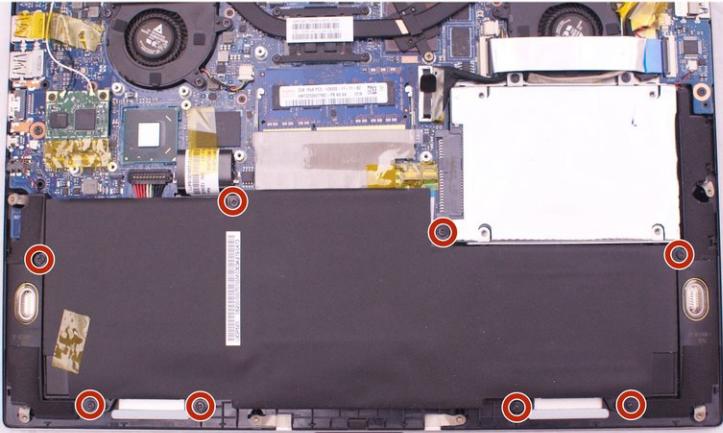

- Remove the eight 3 mm Phillips #0 screws on the bottom panel.

Step 4

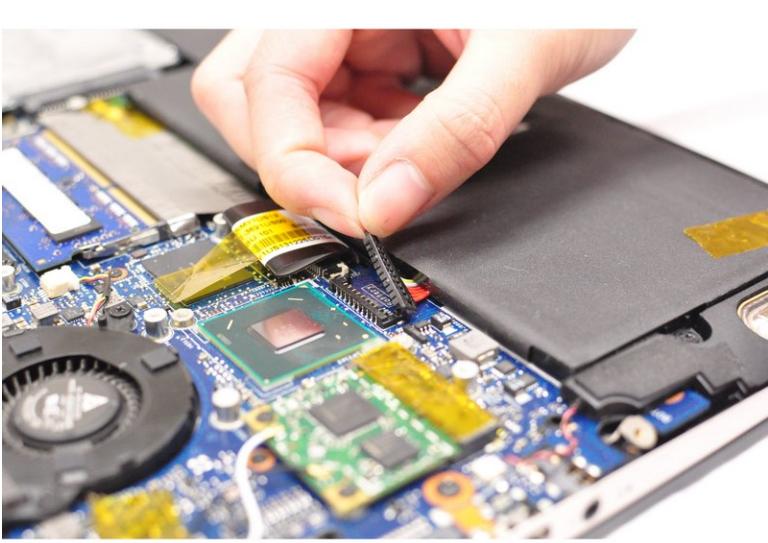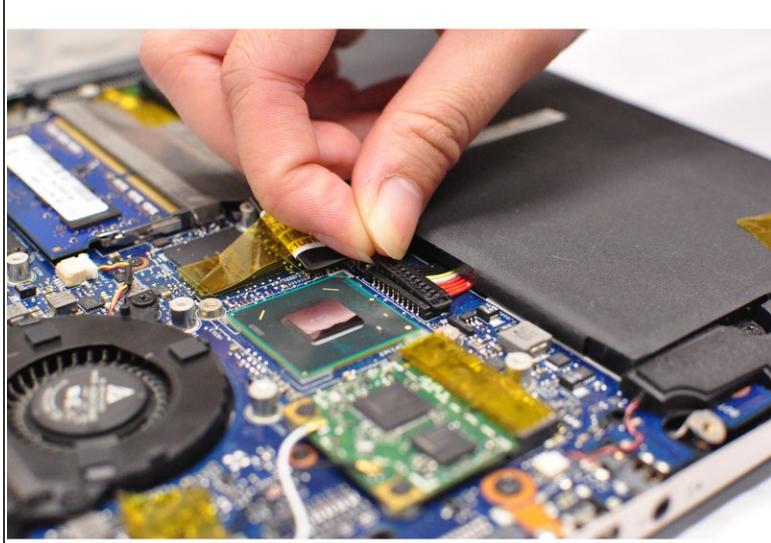


- Pry up each side of the flat connectors by hand or with a [plastic opening tool](#).
- Lift the connector straight up from its socket.

Step 5



- Unplug the two bundled cable connectors on each side of the battery.
- Pull the cable away from the connector in the same direction as the individual wires are running.
- ⚠ Pull evenly on the full width of the cable so that no individual wires are overly strained.

Step 6

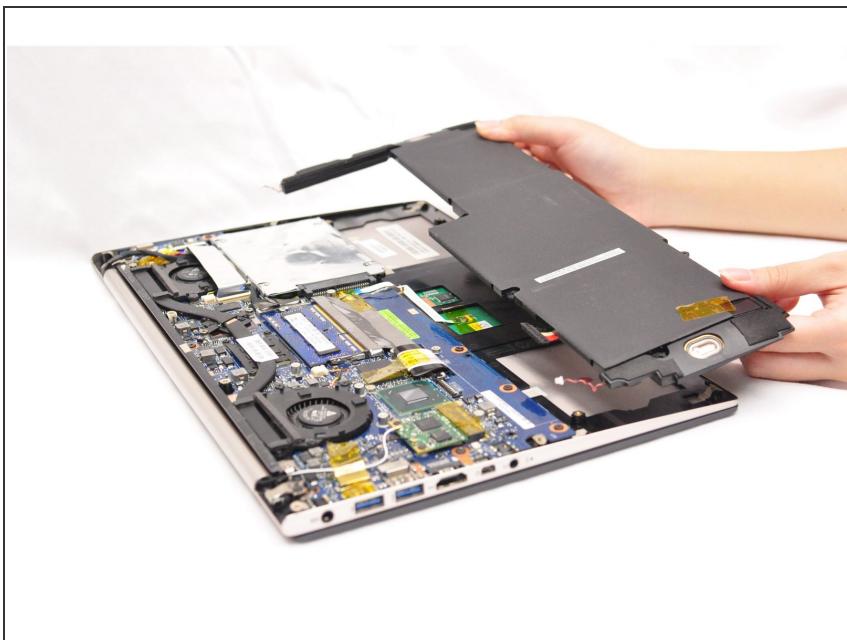

- Remove the battery completely.

To reassemble your device, follow these instructions in reverse order.