



Axess TA2513-10WT Back Cover Replacement

This guide shows how to remove the white plastic back cover of the Axess TA2513-10WT tablet.

Written By: Hayley Rabe



INTRODUCTION

Removal of the plastic cover on the back of the Axess TA2513-10WT tablet will be necessary for any replacements within the tablet. These instructions will teach you how to remove the back cover either for back cover replacement or as a prerequisite for other part replacements.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Back Cover



- Lay the tablet down on a flat surface with the screen facing up, and the external camera facing upwards and closest to you.

Step 2

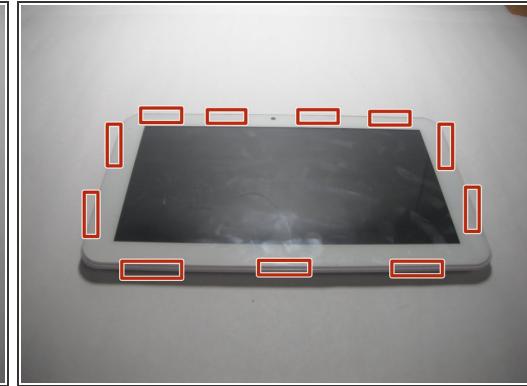

- Insert the plastic opening tool in the space between the screen and the back cover above the volume buttons.
- Slide the plastic opening tool gently along the sides.

(i) If a small gap is not created between the screen and the back cover, pry gently upward at each of these latching points.

Step 3



- Place the spudger in an open space to keep the back case from shutting while you continue to slide the opening tool.

Step 4



- Remove the back cover with your hands once all points have been unlatched. It should separate completely from the screen that contains the battery and chip components.

To reassemble your device, follow these instructions in reverse order.