



# Azpen A720 Speaker Replacement

This guide will tell you how to replace the speaker in your Azpen A720 tablet.

Written By: Anna




## INTRODUCTION

The speaker is responsible for all non-headphone sounds from your tablet. If these sounds are not audible when they should be you may need to replace the speaker. Speaker replacement is a relatively easy task and this guide will help you through it.

### TOOLS:

- [Soldering Iron](#) (1)
- [Magnetic Project Mat](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Aspen A720 Back Cover Replacement

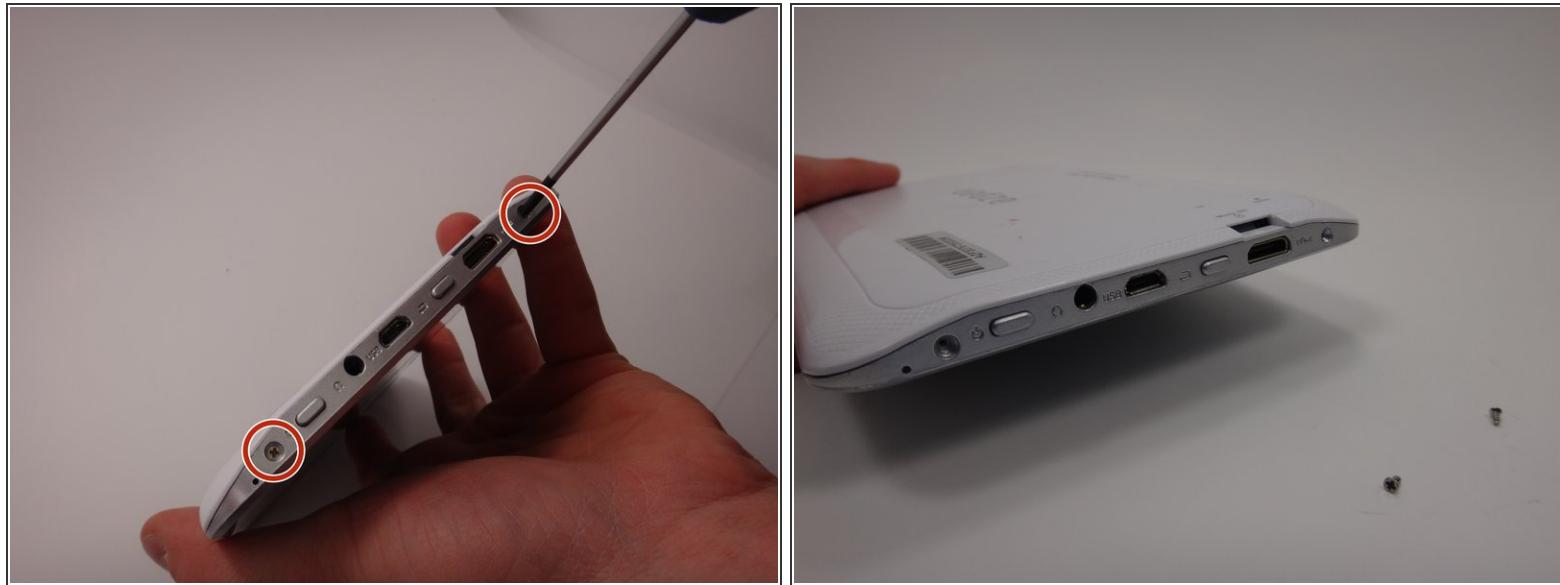

- Use the Phillips # 00 screwdriver to remove the two screws found on the top edge of the tablet near the power button and mini HDMI port (4mm).


 Make sure to keep track of screws.

## Step 2



- Lay the tablet screen-side down.

## Step 3

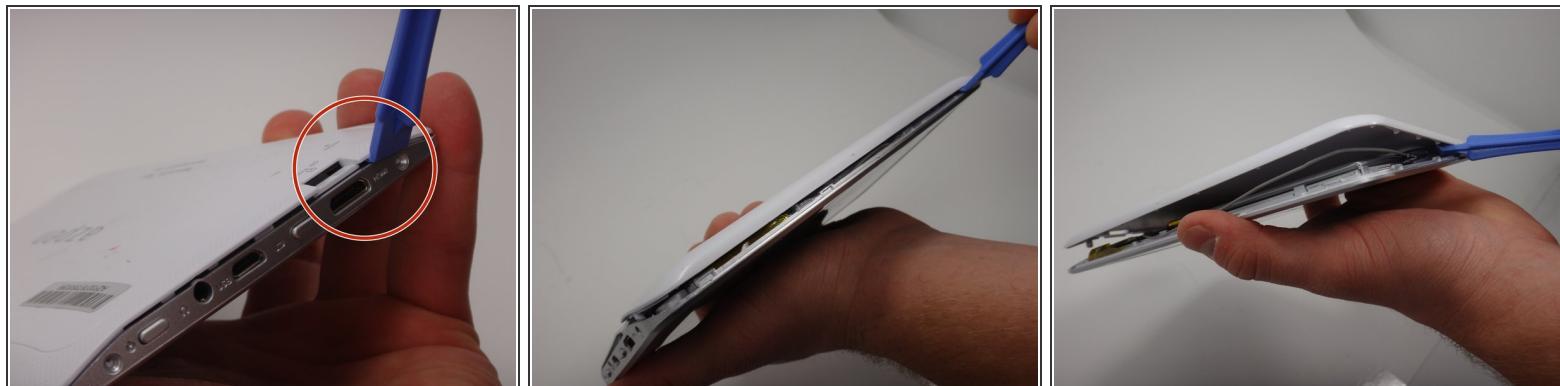

- Use the plastic opening tool to pry the white back from the silver frame. Start near the micro SD slot.
- Slide the plastic opening tool around the perimeter of the casing until the back is disconnected.

## Step 4




- Take the white backing off your tablet.

## Step 5 — Speaker



- Locate the speaker, it is a black oval in the corner near the battery.

## Step 6

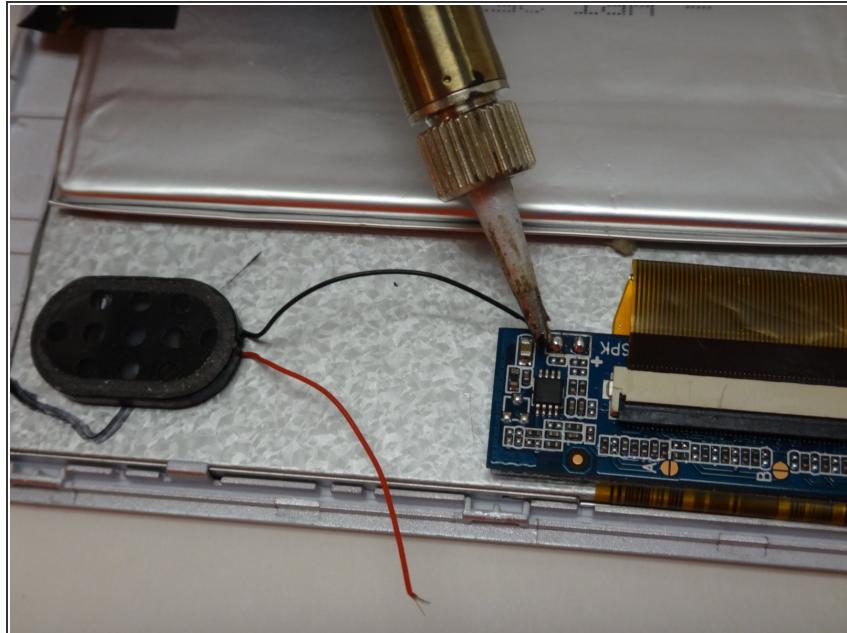

- Use a soldering iron to melt the connections between the black and red speaker wires and the motherboard.

 The soldering iron gets very hot, be careful not to touch the tip and burn yourself. To learn to solder click [here](#).

## Step 7



- Remove the speaker, it is a magnet and is loosely attached to the metal backing.
- Replace the speaker with a new one.

To reassemble your device, follow these instructions in reverse order.