



Azpen A740 Speaker Replacement

This shows you how to replace the speaker located in the bottom of the tablet.

Written By: Mallory



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Back Panel




- Use the plastic opening tool or black spudger tool to lift the back panel off the tablet.

Step 2 — Speaker

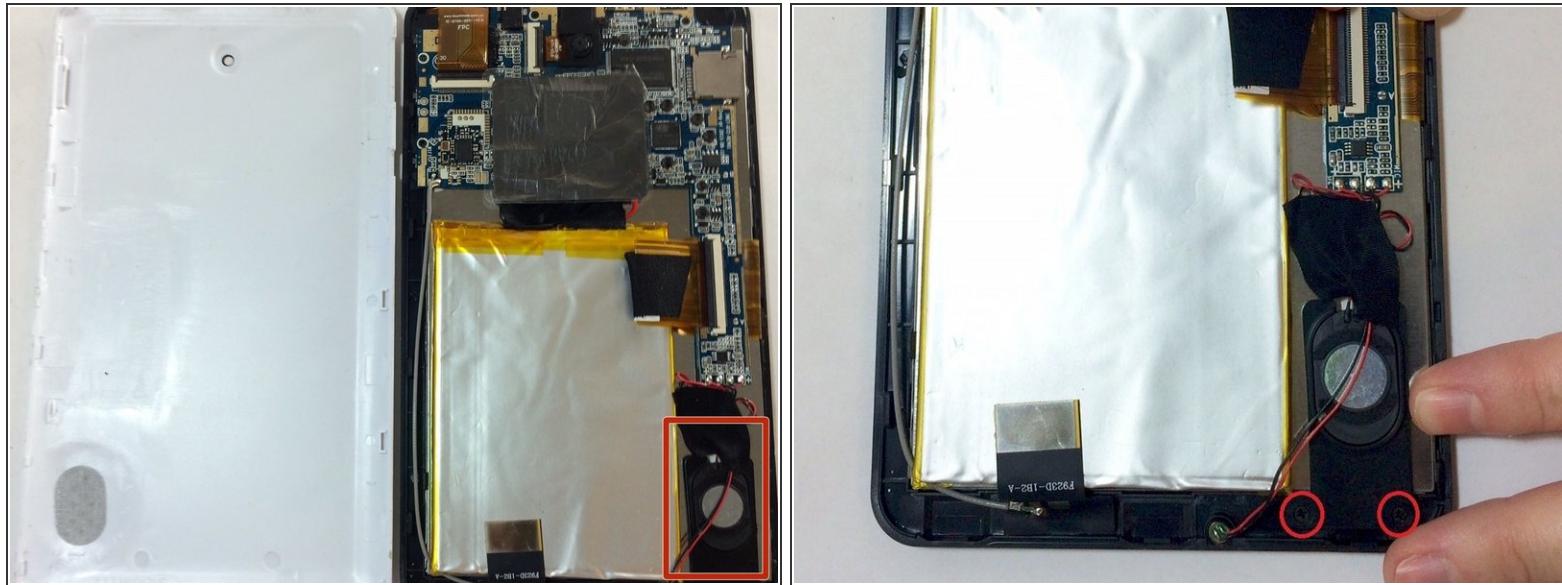

- The speaker will be attached by 2 screws with 3.75mm and 3.81mm at the bottom of the plastic holding the speaker in. These 2 screws will need to be removed in order to replace the speaker with a pentalobe screwdriver.

Step 3

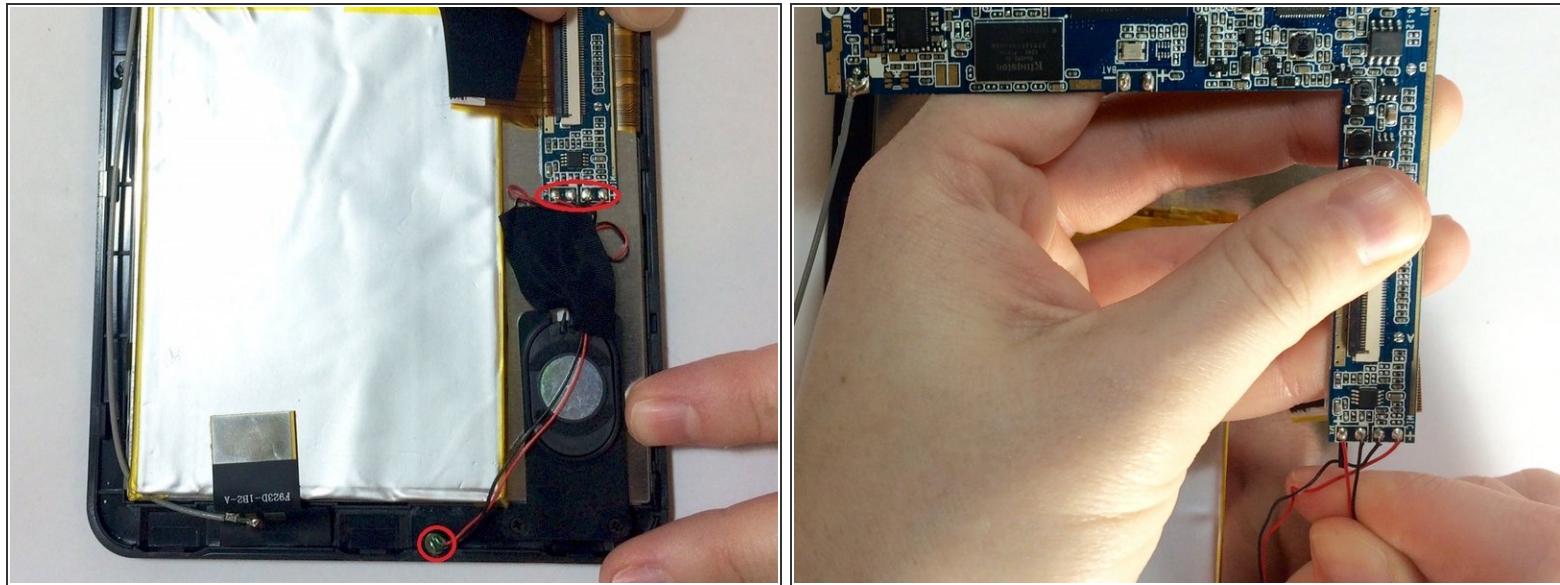

- Once the screws are removed, you should fully desolder the speaker wires that are attached to the motherboard. Instructions on how to desolder these wires are here on ifixit: [How To Solder and Desolder Connections](#)
- After switching out the old speaker, just follow the directions in reverse to finish.

To reassemble your device, follow these instructions in reverse order.