



# BLU Vivo 5 Battery Replacement

Replacement of the BLU Vivo 5 battery

Written By: Eneider Colina



# INTRODUCTION

Replacement guide for the BLU Vivo 5's battery

Technical information:

[https://www.gsmarena.com/blu\\_vivo\\_5-7857...](https://www.gsmarena.com/blu_vivo_5-7857...)

## TOOLS:

- [SIM Card Eject Tool](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [P2 Pentalobe Screwdriver iPhone](#) (1)

## Step 1 — Remove bottom screws.



- Remove the P2 screws.
- Remove the SIM and SD cards, as well as the adapter.

## Step 2 — Remove the top cover.




- Pull off the protective cover from the camera.
- Remove the screws with a #00 Phillips screwdriver.

### Step 3 — Remove bottom cover.




- To remove the bottom cover, pull it upward.

### Step 4 — Releasing the back cover.

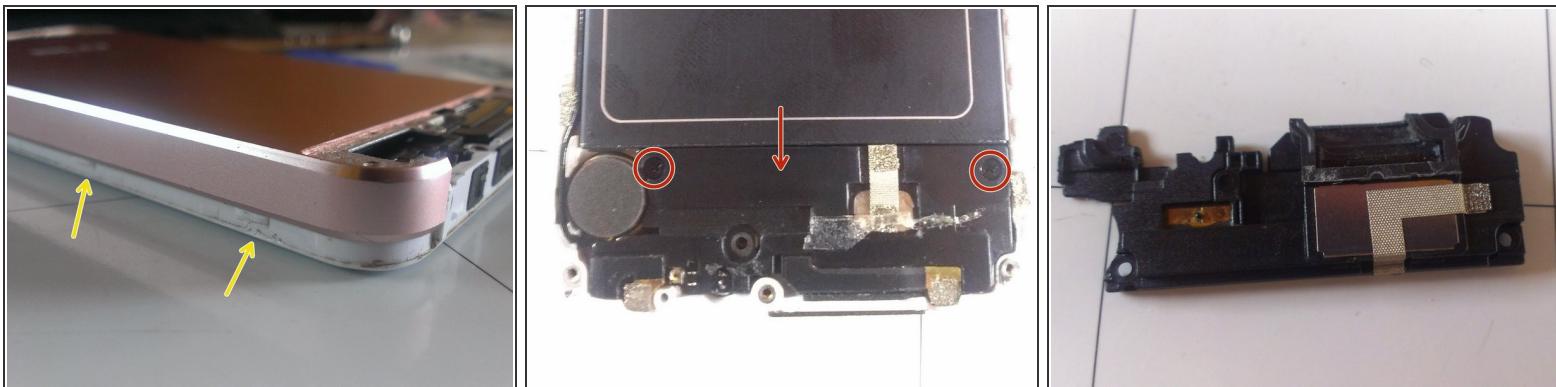

- Use a spudger to carefully apply pressure to the indicated areas to remove the cover.
- Remove the microphone/speaker board assembly by pulling downward.

## Step 5 — Removing the battery.

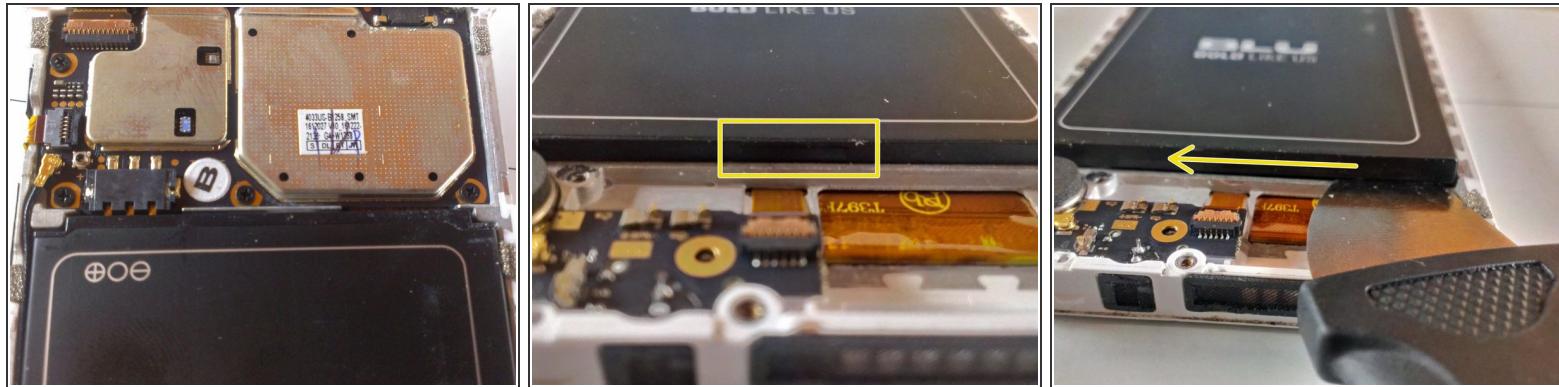

- The battery has a small notch to facilitate removal, but the battery has been glued in place.
- To gently remove the battery, pry under it with a thin tool and slide from one side to the other slowly, listening for the sound of the battery coming loose.

To reassemble your device, follow these instructions in reverse order.