



# BOSE SoundTouch 30 Base Plate Replacement

How to replace the BOSE SoundTouch 30 base plate.

Written By: Brennen Irey



## INTRODUCTION

This guide shows how to remove the base plate.

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Base Plate



- Remove the four 15.5 mm PH2 screws securing the base plate to the device.

To reassemble your device, follow these instructions in reverse order.