



Baby Einstein Take Along Tunes Battery Replacement

When the batteries die or the sound of music becomes low or has distortion, you can replace the batteries with new ones.

Written By: peter



This document was generated on 2019-09-22 01:33:15 PM (MST).

INTRODUCTION

In this guide, you will learn how to remove and replace the batteries of the Baby Einstein Take Along Tunes.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

PARTS:

- [AA Batteries](#) (1)

Step 1 — Battery



- Using Philips #1 Screwdriver loosen the 5mm Philips screw on the battery plate.

Step 2



- Lift the back with the plastic opening tool.

Step 3



- Using your fingers or a plastic opening tool, remove the batteries and replace them.

To reassemble your device, follow these instructions in reverse order.