




Baby Einstein Take Along Tunes Power/ Volume Switch Replacement

The power/ volume switch gets stuck or does not work properly then replace the switch

Written By: Shreya Sunny

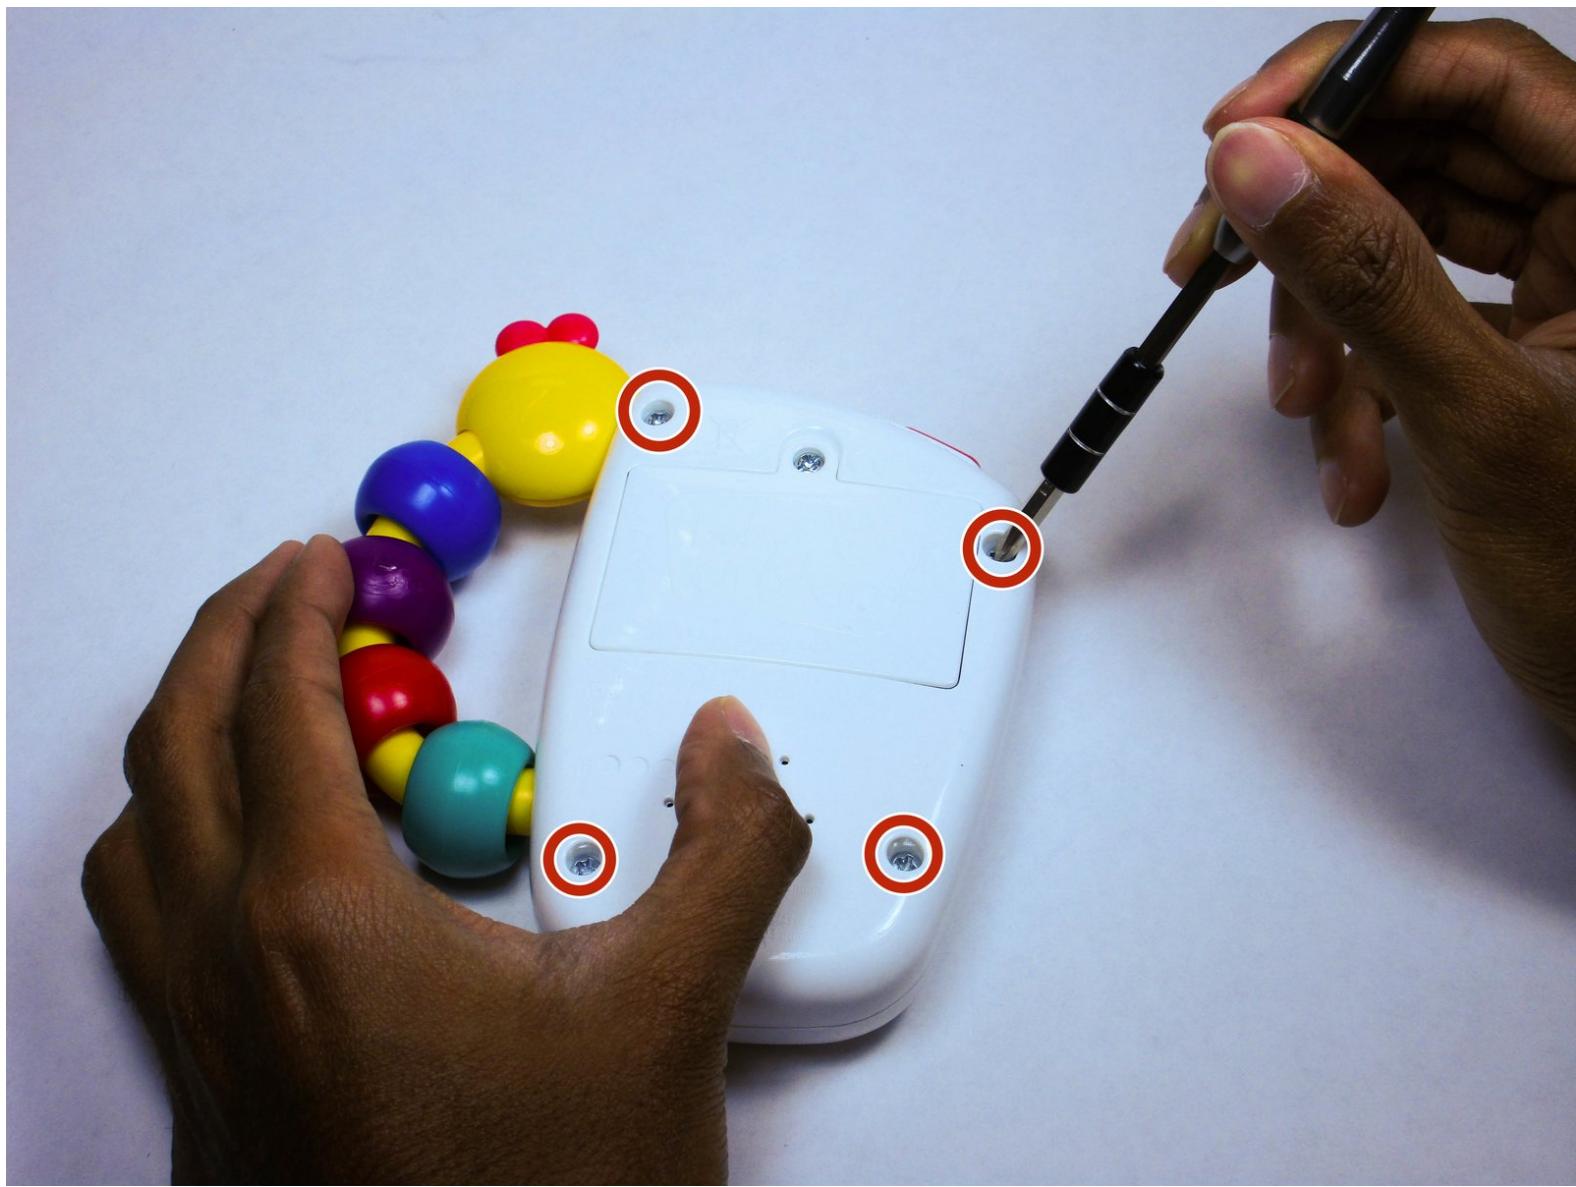

INTRODUCTION

To remove and replace the power/ volume switch



TOOLS:


- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)



PARTS:

- Power Switch (1)

Step 1 — Power/ Volume Switch

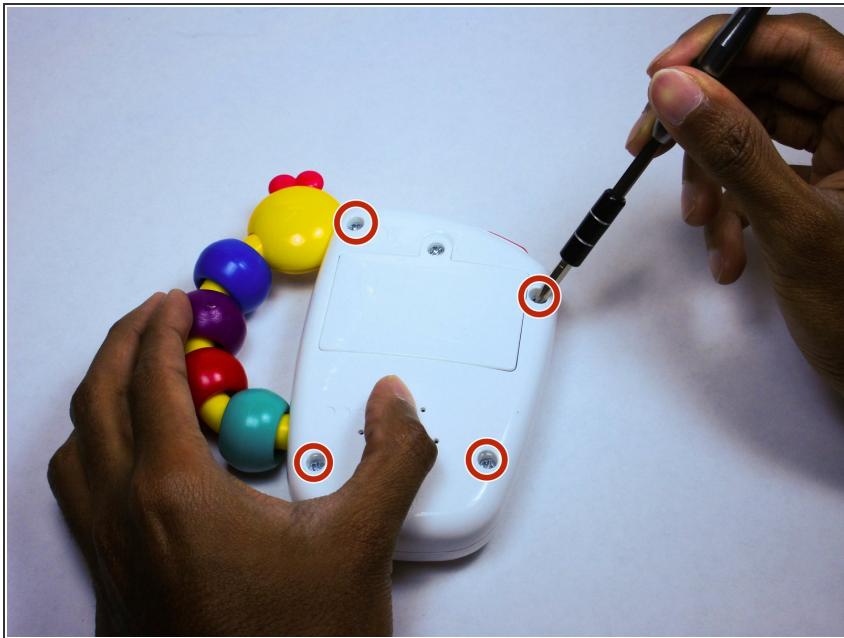


- Using a screwdriver loosen the four screws connecting the body of the device together.

Step 2




- Once unscrewed, pop the back of the device off using the plastic opening tool.

Step 3

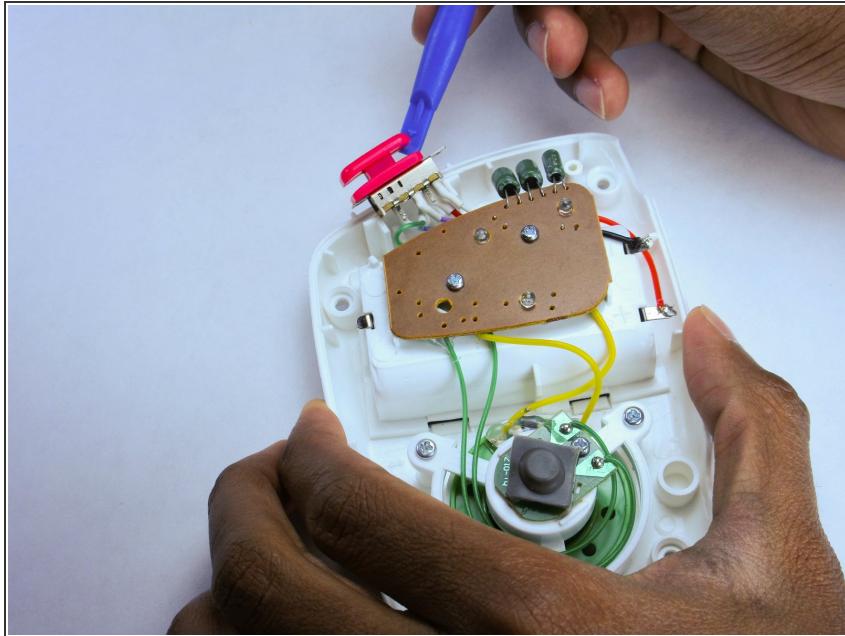

- Use the plastic opening tool to remove the power button from the device.

Step 4

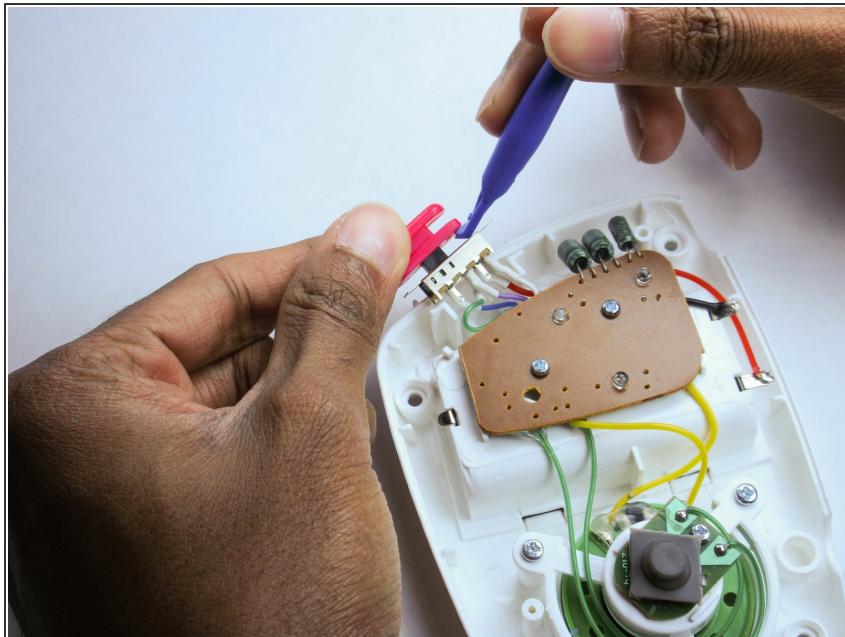

- Remove the power button from the connector and replace it.

To reassemble your device, follow these instructions in reverse order.