



Back Cover Replacement

Use this guide to disassemble the back cover of your Acer Chromebook C720-2420.

Written By: Lordan Cala



INTRODUCTION

This guide will provide you with simple steps on how to open the back cover off an Acer Chromebook C720-2420.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Acer C720 Chromebook Bottom Cover](#) (1)

Step 1 — Back Cover Replacement

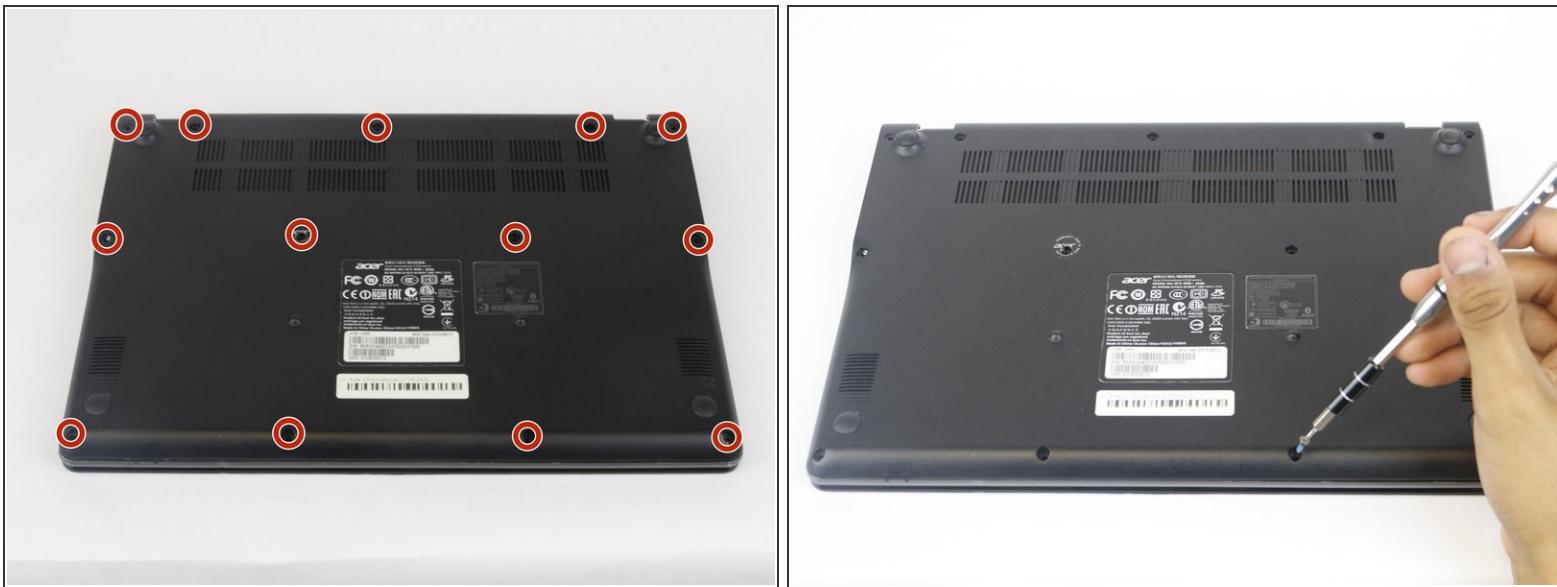

(i) Place your Chromebook upside down.

- Utilizing the precision magnetized Phillips #0 screwdriver, remove all thirteen 6.5 mm Phillips screws that secure the back cover.

! Before doing anything, make sure your Acer Chromebook is completely turned off.

Step 2



- Use the plastic opening tool to carefully remove the bottom.

To reassemble your device, follow these instructions in reverse order.