



Battery Disconnection

How to disconnect the battery in the Dell XPS 13 in order to make safe repairs.

Written By: Jeff Suovanen



INTRODUCTION

Prereq-only guide for disconnecting the battery.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Spudger](#) (1)

Step 1 — Back Cover



- Remove the eight 4 mm T5 Torx screws from the bottom cover.

Step 2



- Use a plastic opening tool to pry open the 'XPS' flap in the middle.

Step 3



- Remove the single Phillips screw hidden beneath the flap.

Step 4



- Use opening picks or a plastic pry tool to pry open the case clips, beginning from the back edge.

Step 5

- Remove the bottom cover.



Step 6 — Battery Disconnection

- Pull the battery cable connector towards the battery to disconnect it from its socket.
- If the connector is stubborn, push a little at one side, then the other, to "walk" it out of its socket.

⚠ Do not pull up.

- Open the display and press the power button for five seconds to drain any remaining charge from the system.

To reassemble your device, follow these instructions in reverse order.