



Battery Replacement

This guide will walk you through the process of removing the battery from your Nextbook Premium 7SE.

Written By: Walker Karstens



INTRODUCTION

It is important to note that this guide requires the use of a soldering iron. Be sure you familiarize yourself on how to use a soldering iron.

TOOLS:

- [Desoldering Braid \(1\)](#)
- [Solder \(1\)](#)
- [Staples \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Soldering Iron \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Back Cover



- Insert the plastic opening tool into the middle of the bottom edge of the device. The tool should be inserted within the seam between the back and front covers.
- Slide the opening tool to the right and slowly continue to separate the back cover from the device.


 Avoid prying on the buttons, as they are easily damaged.

Step 2



- Pull the cover off of the device once about three quarters of the cover has been pried open using the plastic opening tool.

Step 3 — Battery

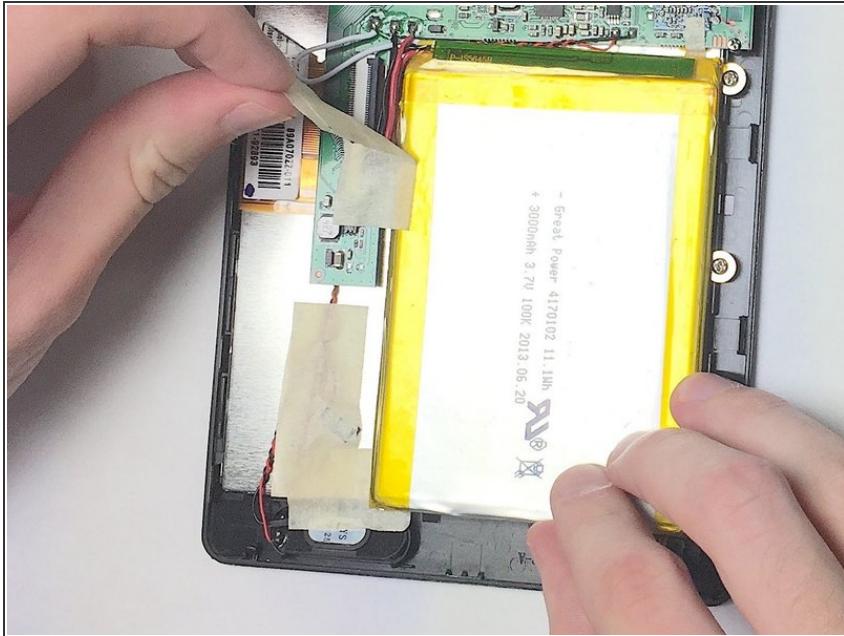

- Remove masking tape from the battery.



Step 4



- Pry the battery from the base using the nylon spudger and move it away from the motherboard.

⚠ Handle the battery with care to avoid damaging it.

Step 5

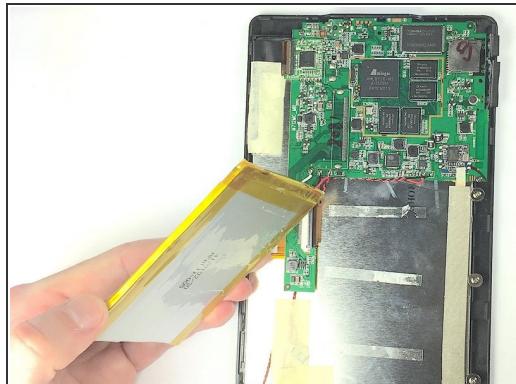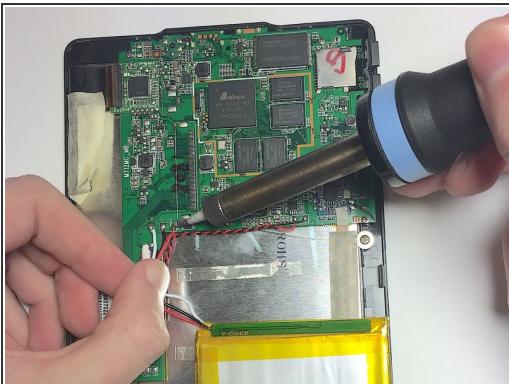

- De-solder the three contact points and remove the battery.

(i) See the following guide for instructions on how to solder. [How To Solder and Desolder Connections](#)

 Use caution when operating the soldering iron.

To reassemble your device, follow these instructions in reverse order, being careful when re-soldering the contacts back into place.