




# Behringer BCD3000 Disassembly

If the jog wheels scratch and the faders get stuck you'll need to take this bulky baby apart.

Written By: Tobias Isakeit

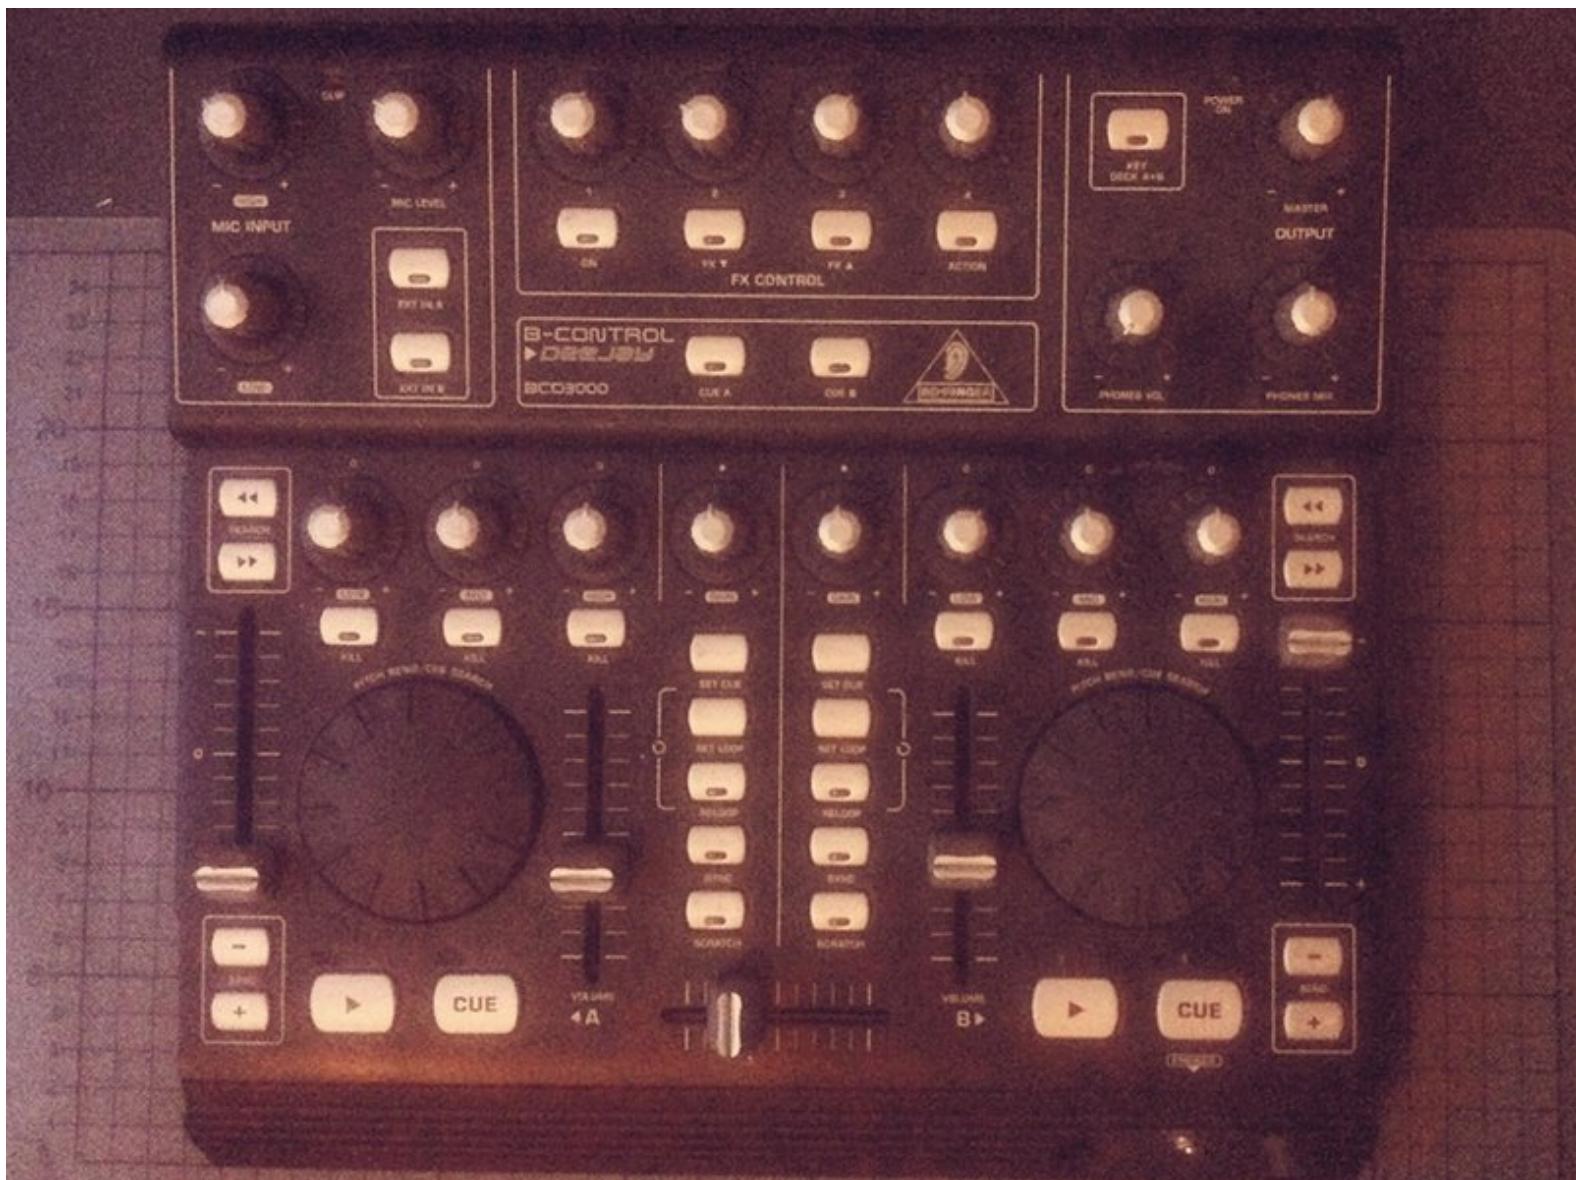

 **TOOLS:**


- Pro Tech Toolkit (1)

## Step 1 — Behringer BCD3000 Disassembly




- Unplug from all cables

## Step 2 — opening the sides

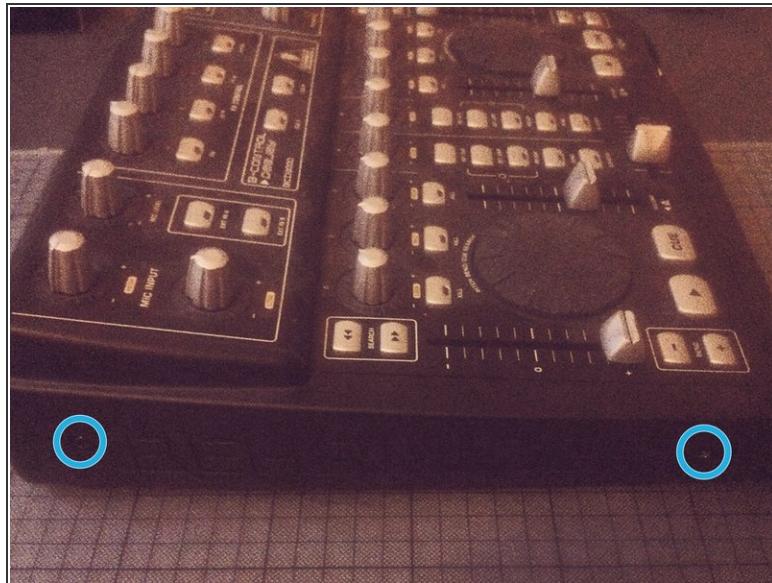




- unscrew two Phillips screws on each side of the BCD3000
- If the screws sit too tight, you can use the extension for better torque

## Step 3 — loosening the top part

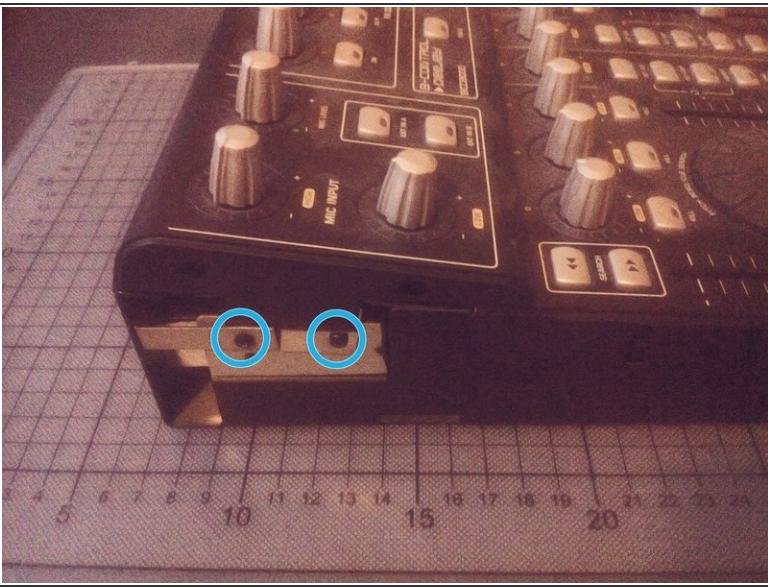


- unscrew another two Phillips screws on each side

## Step 4

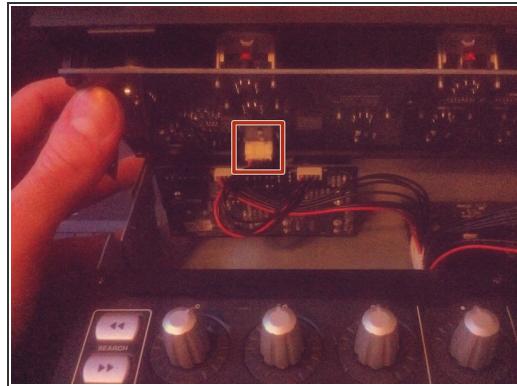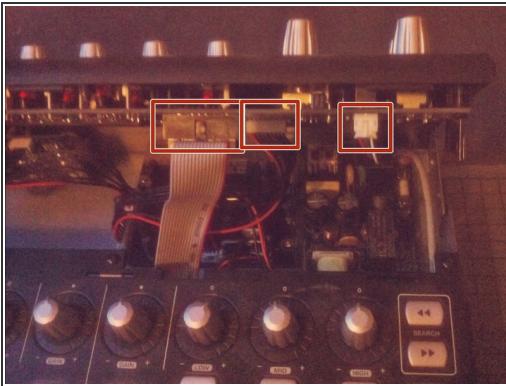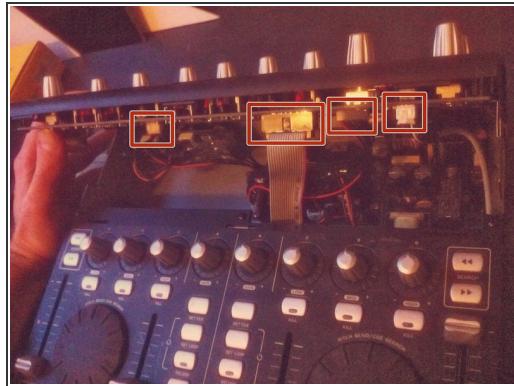


- Lift the upper control part.
- ⚠ Be careful, there are still some cables connected to the lower section.
- Disconnect the cables by walking them out of their sockets.

## Step 5

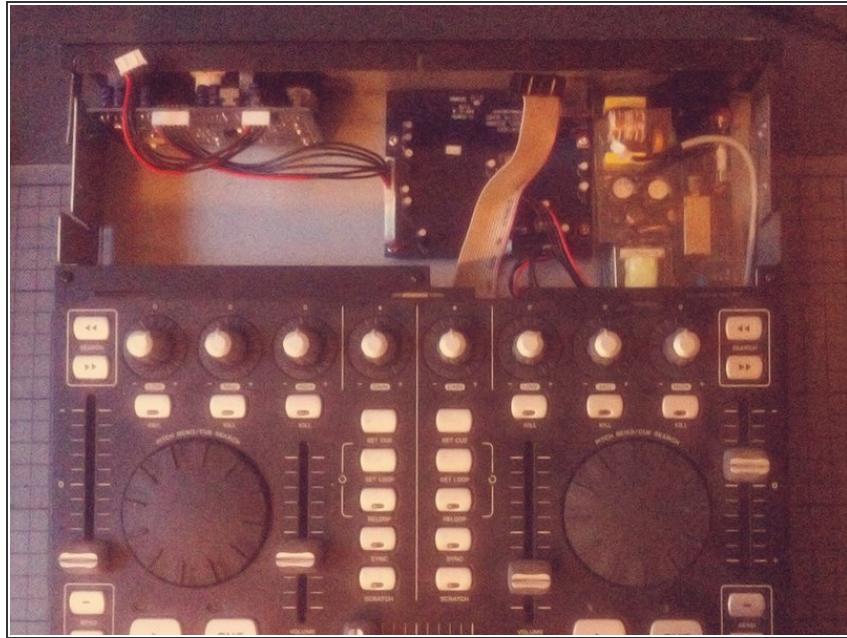

- Remove the upper part completely.

## Step 6

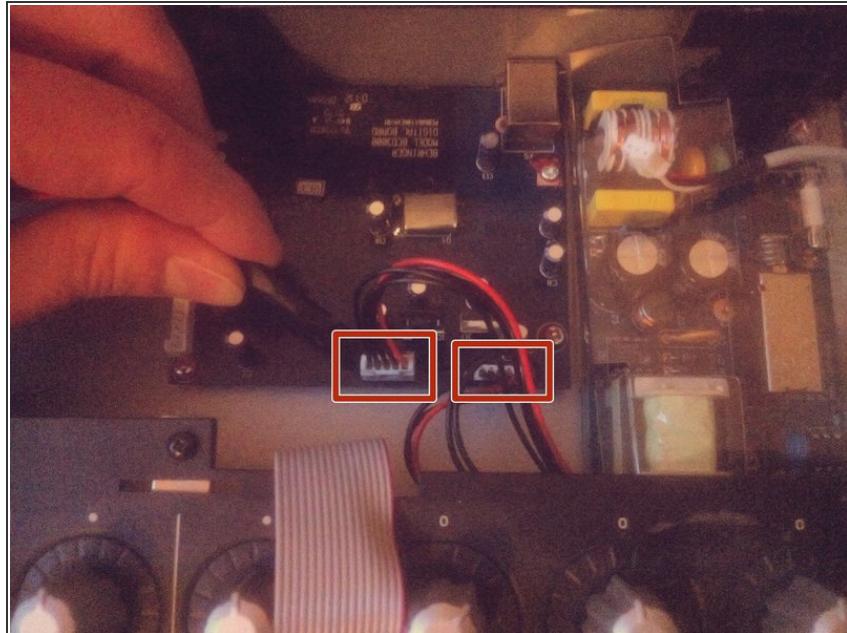


- Disconnect the two cables from the lower section to the connector board.

## Step 7



- Slide the lower section to the front.
- Now you can lift it and take it aside.

## Step 8

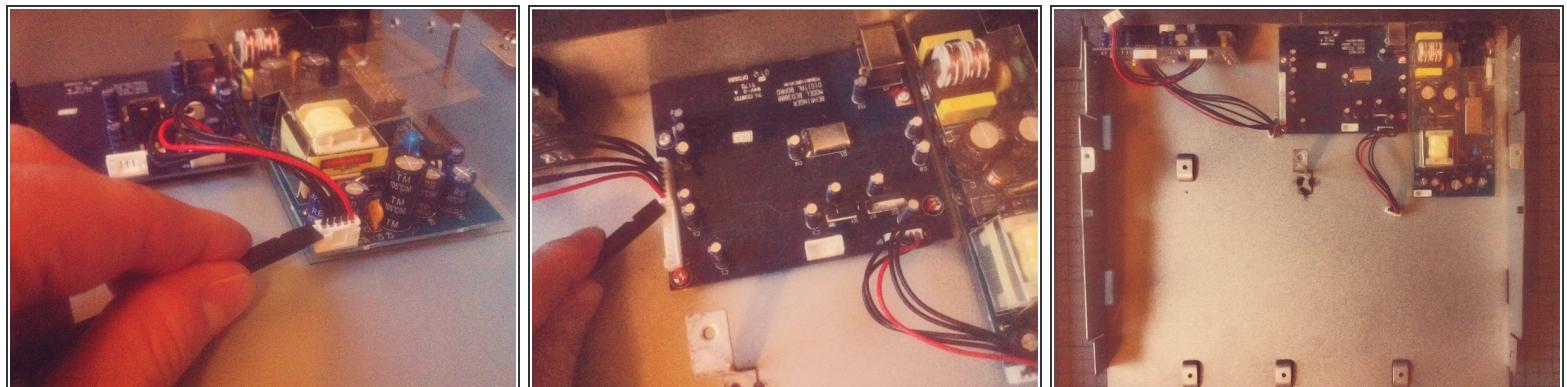



- Disconnect the separate boards.
- Now you can take the modules out by unscrewing them from the case.

## Step 9



- The jog wheels on the front panel can be taken off by using a spudger and levering them out.

## Step 10

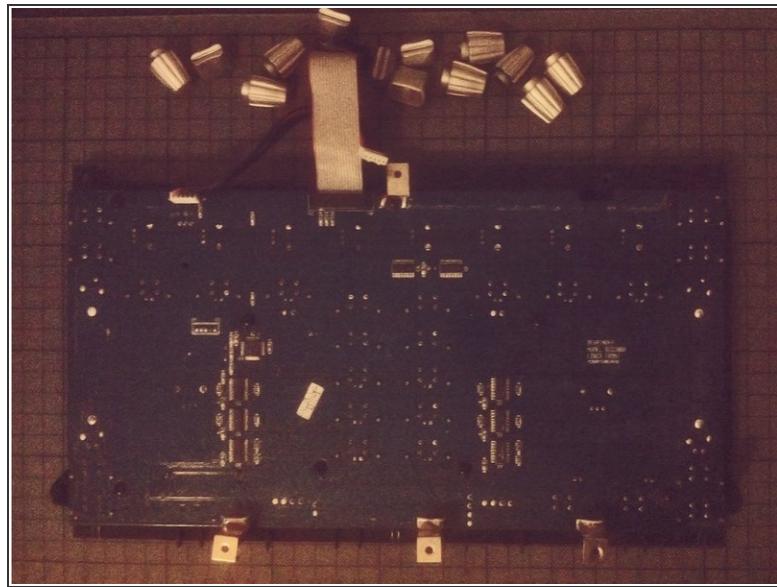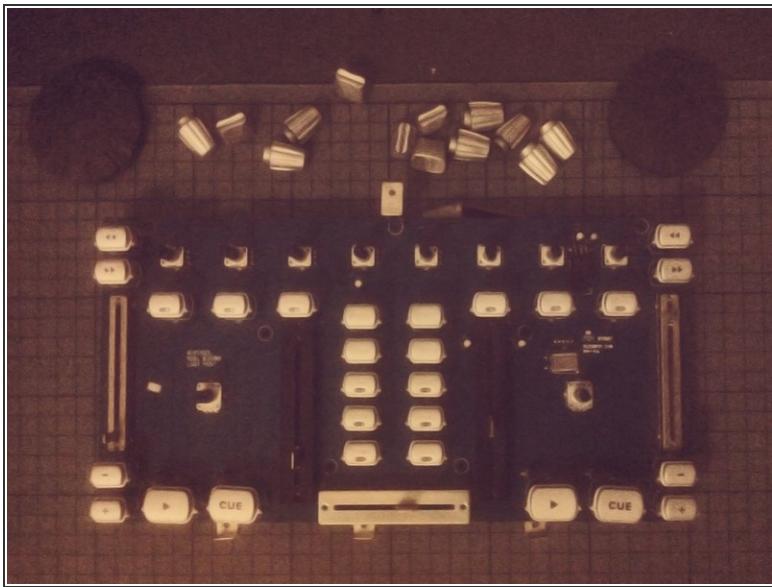

- The knobs can easy be removed just by pulling.

## Step 11



- Same goes for the knobs on the top section of the front panel.

To reassemble your device, follow these instructions in reverse order.