



# Bell and Howell DNV16HDZ Battery Replacement

When the battery is dead and you need to replace it.

Written By: Jerry Hadjah



## INTRODUCTION

What you will be doing is changing your battery.

## Step 1 — Battery



- The battery is located on the back of the camera.

## Step 2



- On the bottom of the camera is a button that holds the battery.
- Press down on that button and pull the battery towards you.

To reassemble your device, follow these instructions in reverse order.