




Bell and Howell DNV16HDZ Hand Strap Replacement

Written By: Jerry Hadjah

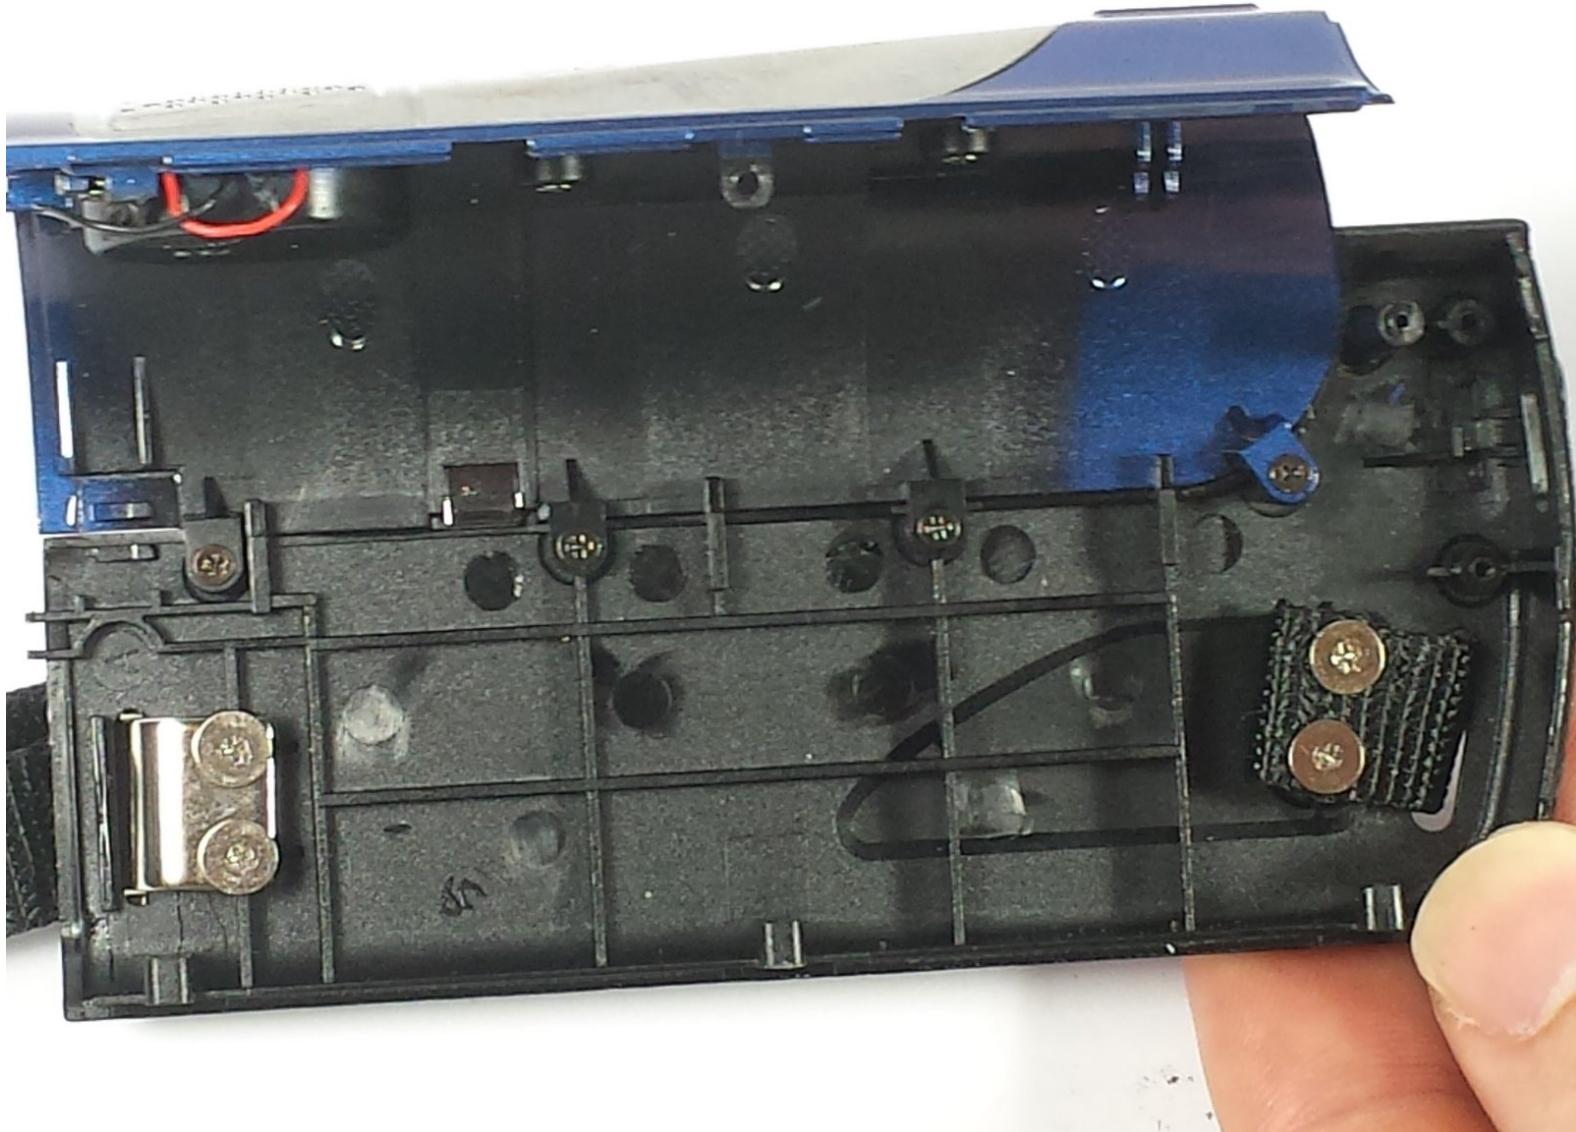

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Lens Assembly



- Remove the five 30mm Phillips #0 screws on the bottom of the camera.


Step 2



- Use a plastic opening tool to disconnect the internal hinges that snaps the camera into place.



⚠ Using a plastic opening tool is important since a metal one will scratch or damage the thin plastic hinges that hold the camera together.

Step 3

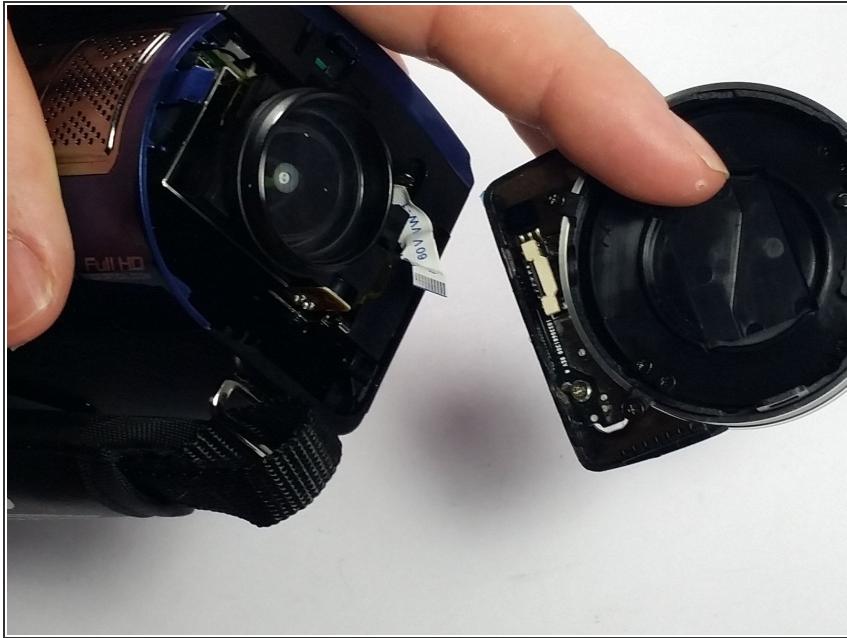

- It will still be connected by a plastic film. This can also be disconnected by pulling up the white part where it connects to the light circuit board.

Step 4 — Hand Strap

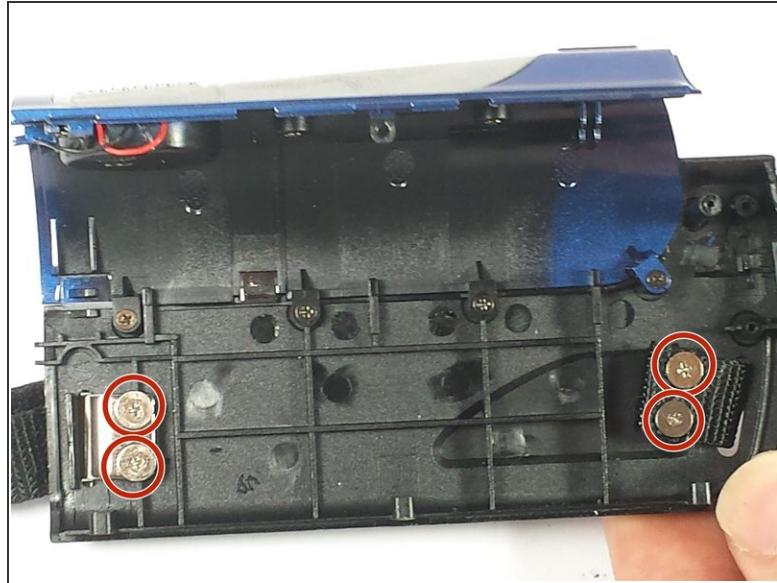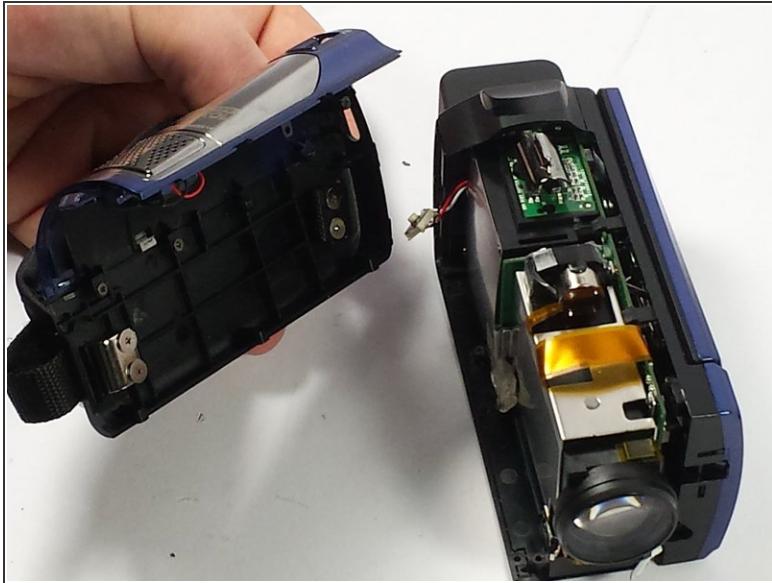

- Pull the side with the hand strap upwards to disconnect it from the camcorder.
- Unscrew the four 40 mm Phillips #0 screws.
- Add the new hand strap now.

To reassemble your device, follow these instructions in reverse order.