




Bell and Howell DNV16HDZ Internal Screen Replacement

Replacing the internal screen from the camcorder.

Written By: Jerry Hadjah

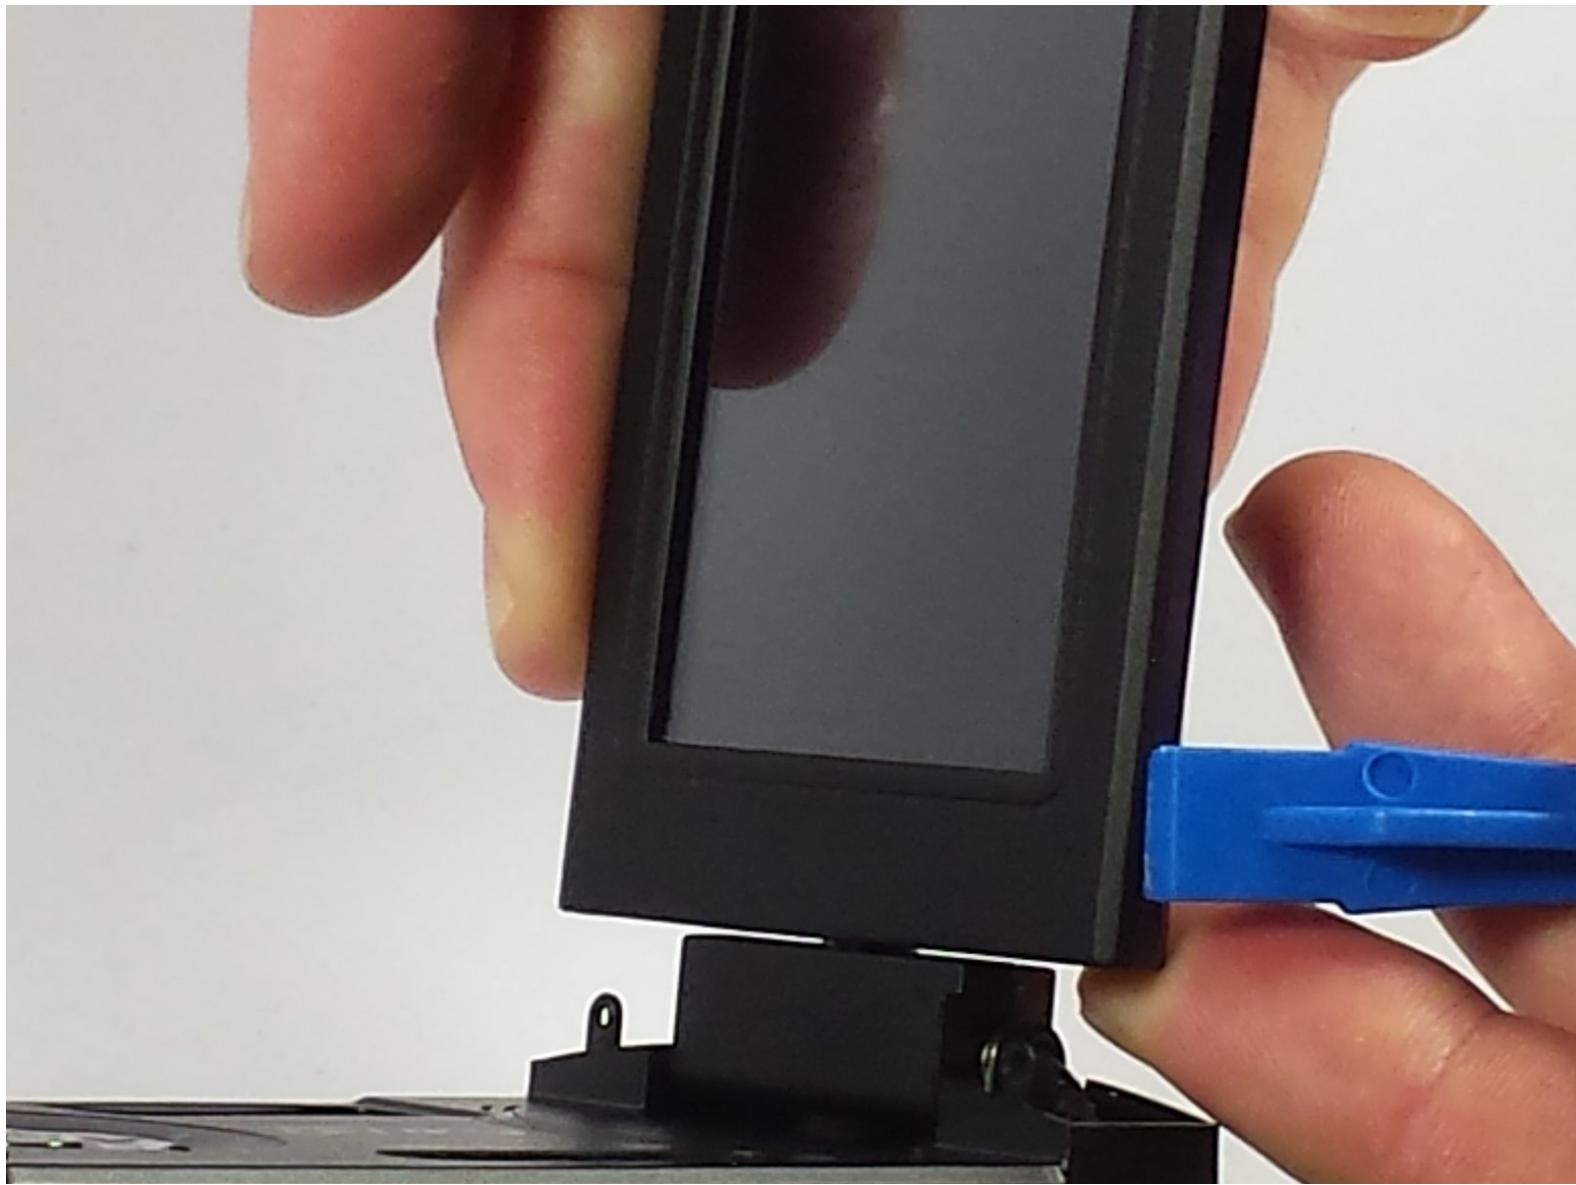

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Lens Assembly



- Remove the five 30mm Phillips #0 screws on the bottom of the camera.


Step 2



- Use a plastic opening tool to disconnect the internal hinges that snap the camera into place.


⚠ Using a plastic opening tool is important since a metal one will scratch or damage the thin plastic hinges that hold the camera together.

Step 3

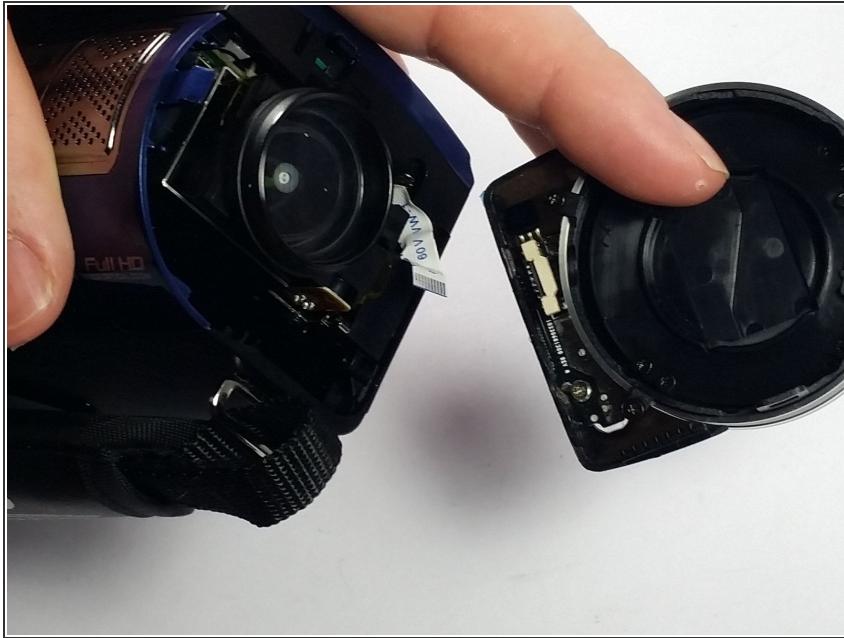

- It will still be connected by a plastic film. This can also be disconnected by pulling up the white part where it connects to the light circuit board.

Step 4 — Internal Screen

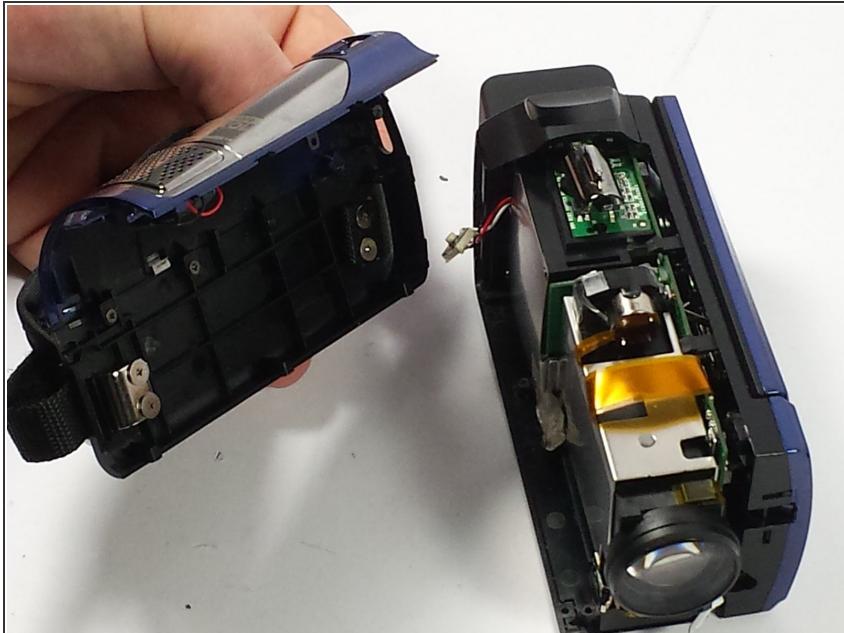


- Pull the side with the hand strap upwards to disconnect it from the camcorder.

Step 5




- Remove the battery.
- Remove the four 30 mm Phillips #0 screws on the back.

Step 6

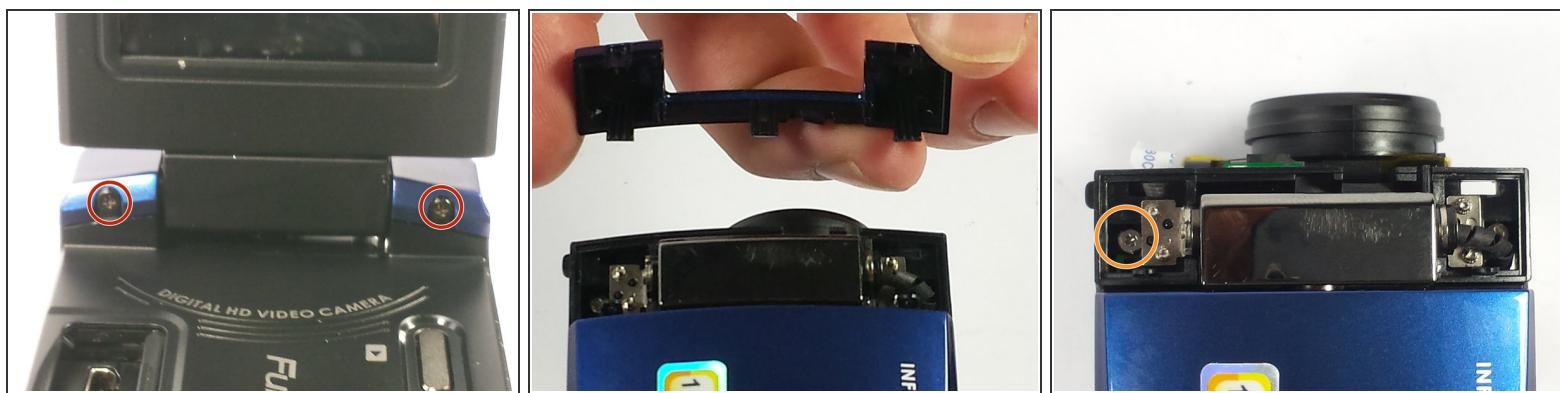

- On the hinge of the camcorder remove the two 30 mm Phillips #0 screws.
- Remove blue piece holding it together.
- Remove the 50 mm Phillips #0 screw.

Step 7

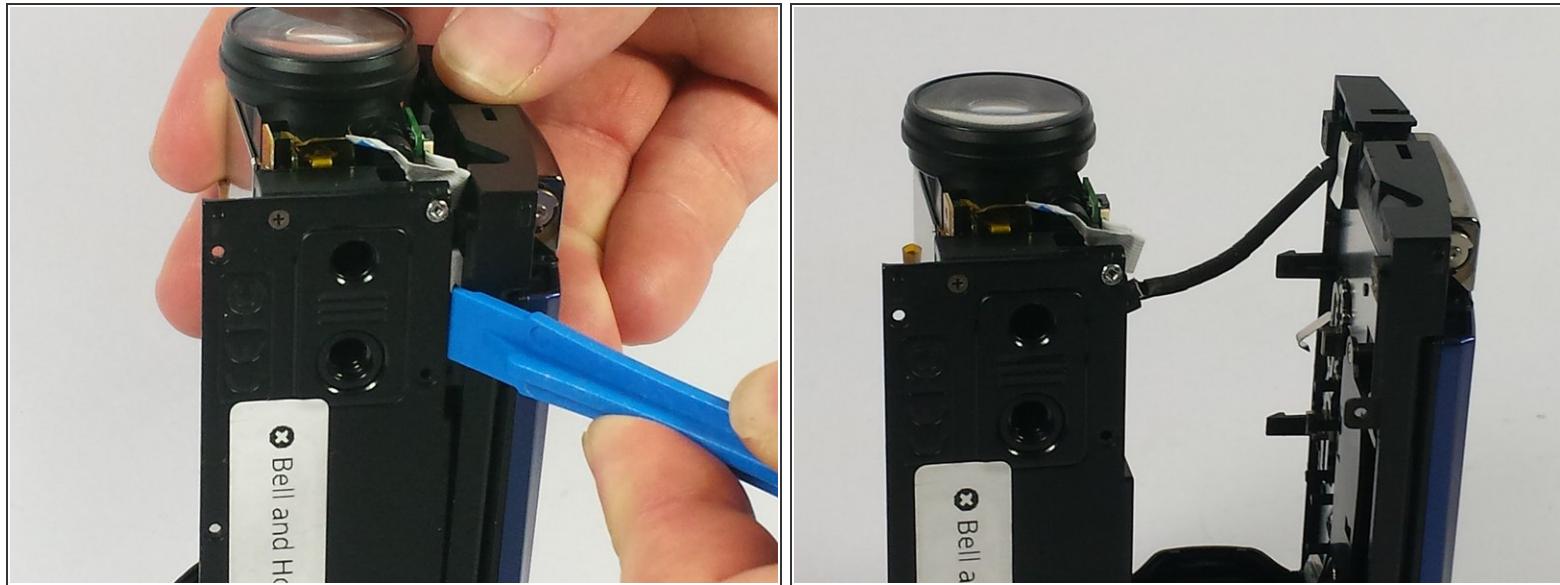

- Use the plastic opening tool and slowly pry open the side.
- Now pull the part with camcorder out.

! There is a wire connecting these two pieces using to much force will damage the camcorder.

Step 8



- Have the screen open and twist it 90 degrees unscrew the 40 mm screw.
- Repeat for the other side.
- Use the plastic opening tool to pry the outer part of the screen, now attach the new one.

To reassemble your device, follow these instructions in reverse order.