



# Bella 4-Slice Toaster Oven Glass Door Replacement

This guide will walk users through the process of replacing the glass front door of the Bella 4-Slice Toaster oven.

Written By: Pierce Hampton



This document was generated on 2020-01-10 10:22:42 PM (MST).

## INTRODUCTION

If the glass door breaks, becomes damaged, or is too dirty for your liking, this easy and effective guide will walk you through the steps required to replace it.

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Outer Shell



- Remove five 11.6 mm Phillips #2 screws from the rear of the device.

## Step 2



- Open the front glass door of the toaster oven.

## Step 3



- Locate retaining screw on the upper-middle portion of the door frame.

## Step 4



- Remove one 21.9 mm Phillips #2 retaining screw from upper-middle portion of door frame.

## Step 5



- Flip toaster onto back panel with feet facing forward.

## Step 6



- Use spudger to pry the grey rubber inserts from the black plastic feet.

## Step 7




- Remove four 13.7mm Phillips #2 screws from black plastic feet to separate the cover from the device.

## Step 8



- Lift the black outer cover off of the toaster

## Step 9 — Glass Door

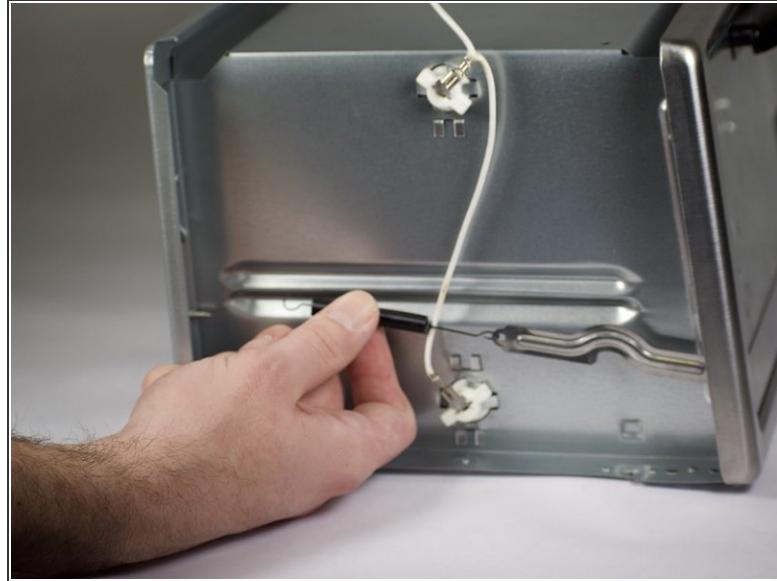

- Unhook the black coil springs from back of the toaster on both sides of the device.

## Step 10



- Use the black spudger to gently depress the hinge prongs on the bottom of the door.

## Step 11



- Gently slide door away from the device, removing it from the device.

To reassemble your device, follow these instructions in reverse order.