


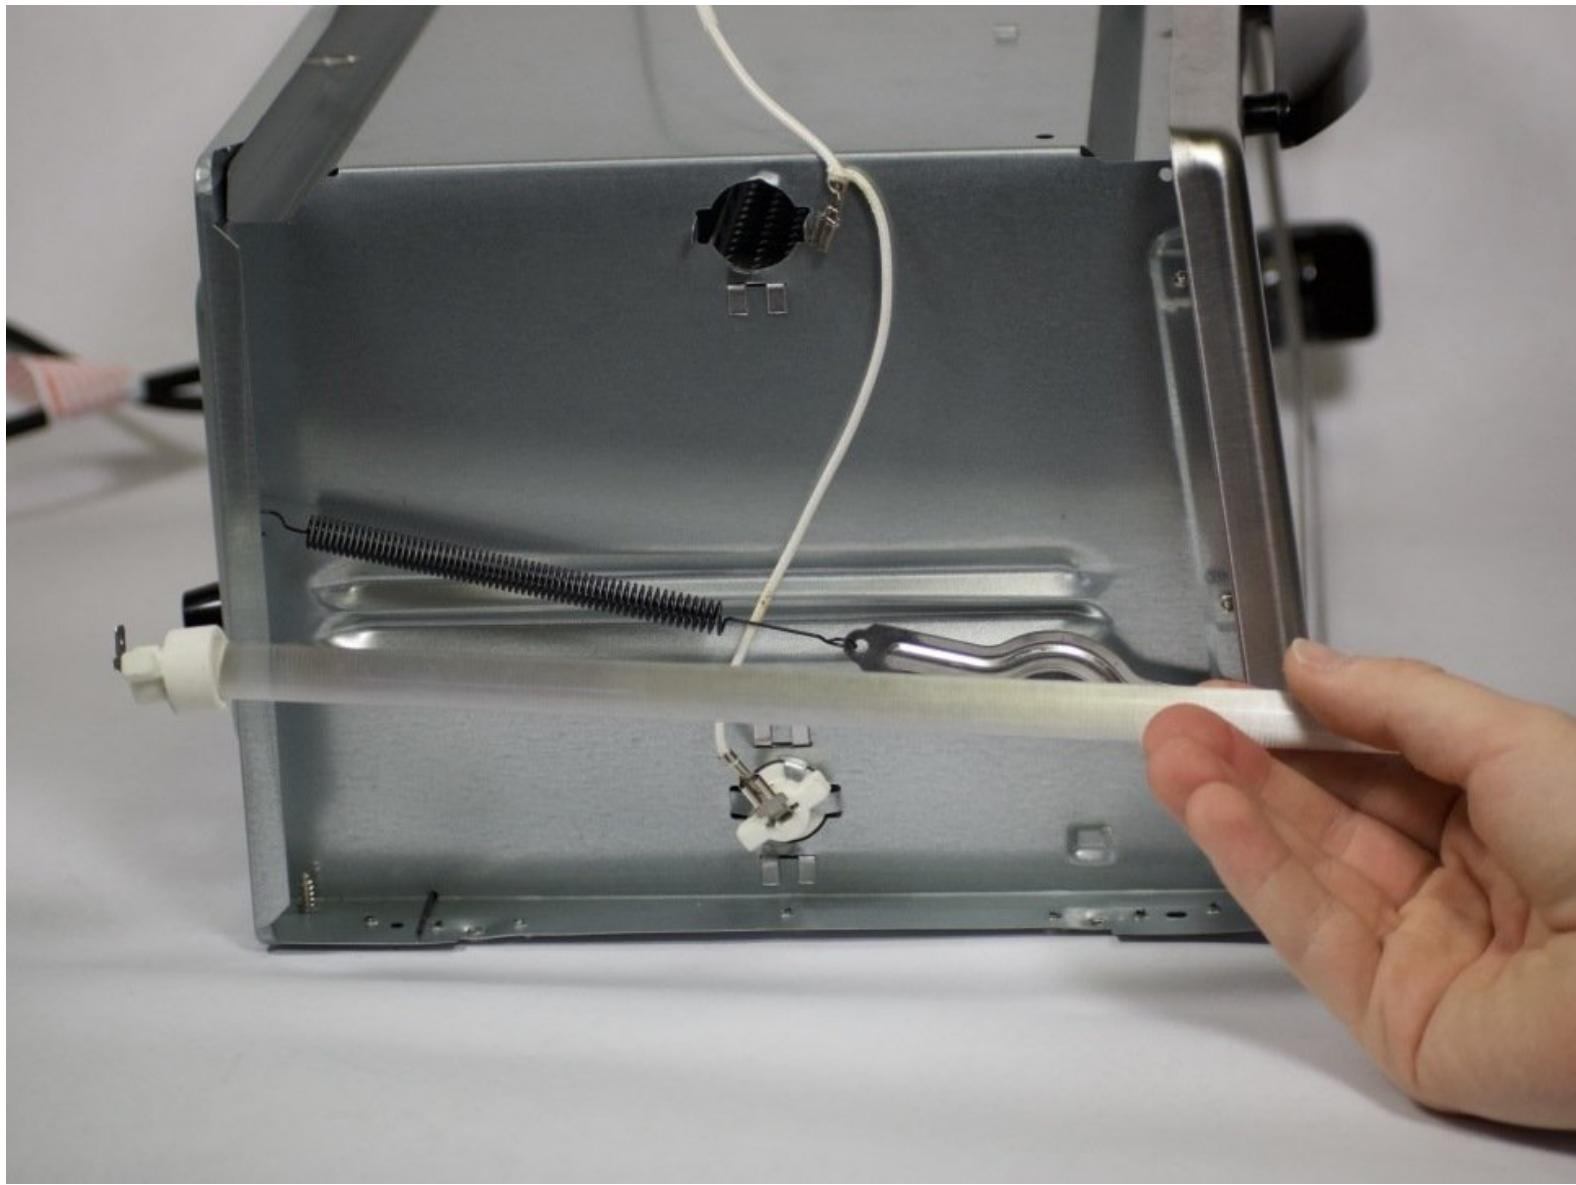

# Bella 4-Slice Toaster Oven Heating Element Replacement

This guide will help users replace the heating elements of the Bella 4-Slice Toaster Oven.

Written By: Pierce Hampton



## INTRODUCTION

If the heating element fails for any reason, and needs to be replaced, this guide will walk you through the simple steps required to replace the component.

### TOOLS:

- Metal Spudger (1)

## Step 1 — Outer Shell



- Remove five 11.6 mm Phillips #2 screws from the rear of the device.

## Step 2



- Open the front glass door of the toaster oven.

## Step 3



- Locate retaining screw on the upper-middle portion of the door frame.

## Step 4



- Remove one 21.9 mm Phillips #2 retaining screw from upper-middle portion of door frame.

## Step 5



- Flip toaster onto back panel with feet facing forward.

## Step 6



- Use spudger to pry the grey rubber inserts from the black plastic feet.

## Step 7




- Remove four 13.7mm Phillips #2 screws from black plastic feet to separate the cover from the device.

## Step 8




- Lift the black outer cover off of the toaster

## Step 9 — Heating Element

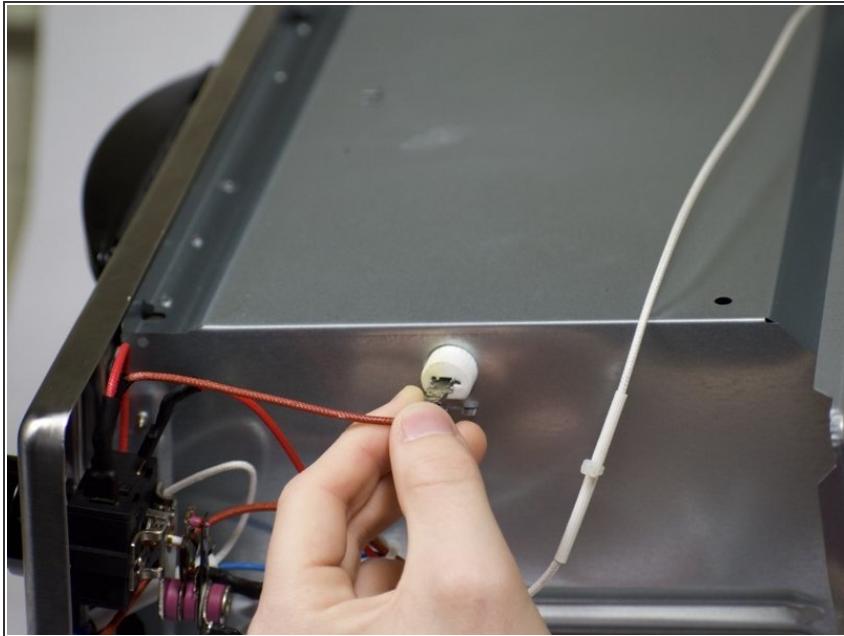


- Remove the red wire from the heating element.

## Step 10

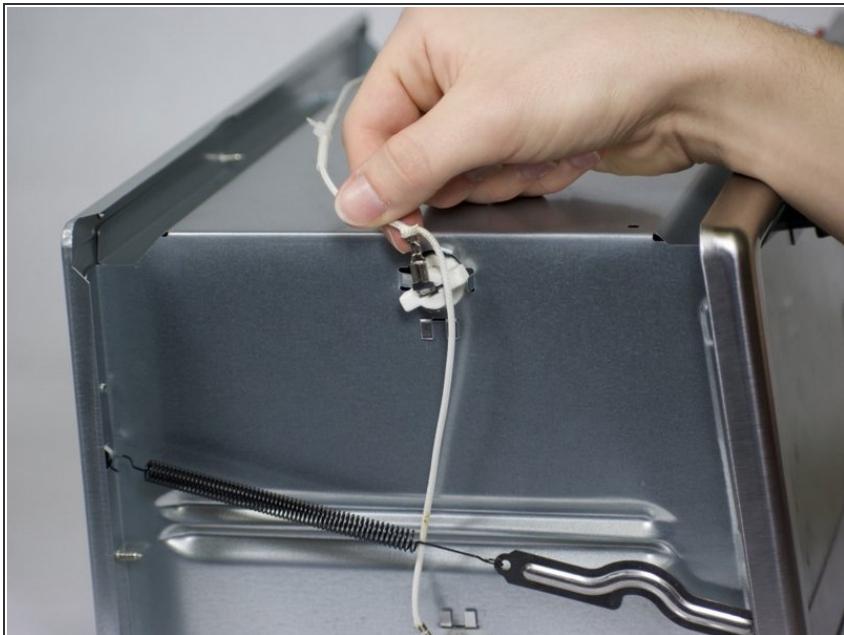

- Remove white wire from the opposite side of the heating element.

## Step 11

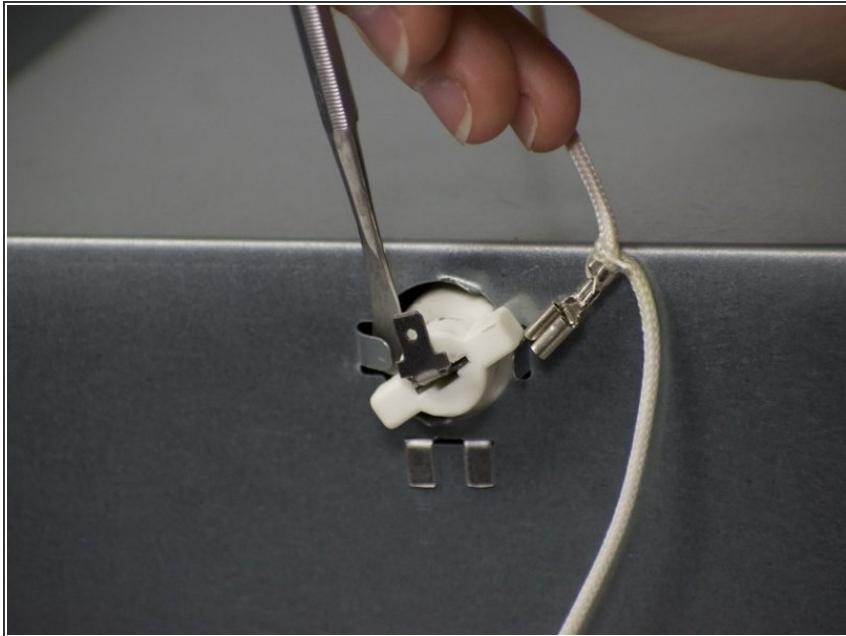


- Use a metal spudger to unfold the tabs of metal that hold heating element in place.

## Step 12



- Gently push the heating element from the side with the red wire to remove it from the toaster.

## Step 13

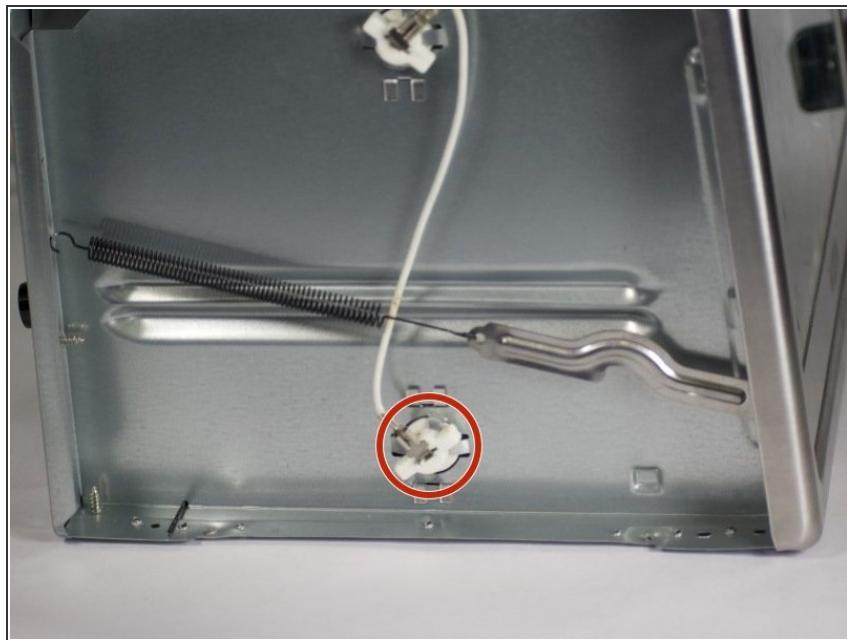

- Repeat steps 1-4 for the second heating element.

To reassemble your device, follow these instructions in reverse order.